


# CURVED (CONTOUR) AWNING OPERATION


## TO OPEN THE AWNING

### Step 1 OPEN TRAVEL LATCH

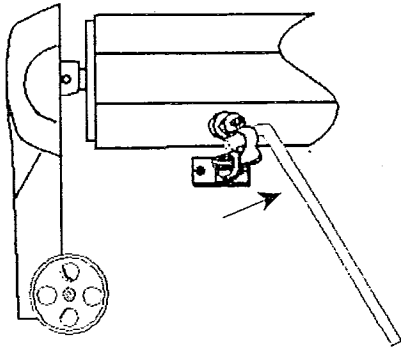


Insert the pull rod into the travel latch loop and rotate open

### Step 2 RELEASE WHEEL CLAMP

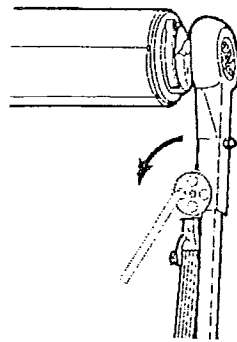


Turn the clamp wheel counter clockwise and swing the assembly toward the center to free the hardware

### Step 3 UNROLL FABRIC

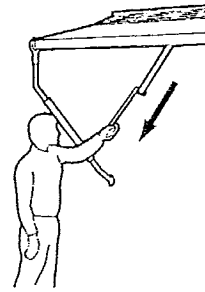


Insert the pull rod into the loop of the center strap and unroll the awning by pulling it toward you. Step under the awning and fold the center strap and tuck into fabric loop.

### Step 4 EXTEND RAFTER ARM

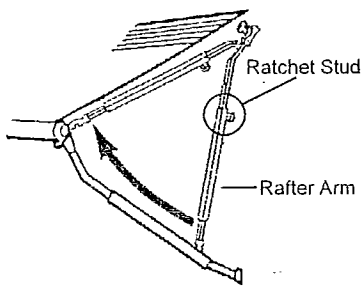


Standing under the awning, release the rafter arm by pulling outward on the cap of the ratchet stud located on the upper portion of the arm. Extend the arm and place the claw over the shaft of the roller.

### Step 5 LOCK RAFTER ARM

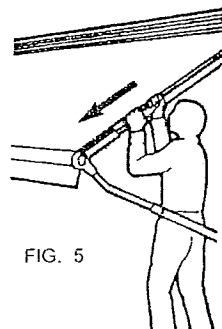

Set the spring tension of the rafter arm by grasping the lower arm and pushing firmly down in the direction of the arrow as shown, until the ratchet stud engages to lock the arm open. (Listen for click)

### Step 6 RAISE ROLLER

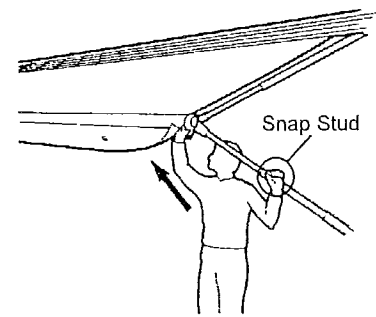

Raise the awning to the desired height by releasing the snap stud on the main arm and pushing up and outward on the roller assembly.

REPEAT STEPS 3 - 6 FOR THE OTHER END OF THE AWNING.


SEE REVERSE SIDE FOR "CARAVAN" POSITION INSTRUCTIONS  
AND FOR CLOSING AWNING INSTRUCTIONS

## PARTIAL EXTENSION OR "CARAVAN" POSITION

**Step 1**  
UNLOCK AWNING


Follow Steps 1 and 2 on front page.

**Step 2**  
PARTIALLY UNROLL FABRIC

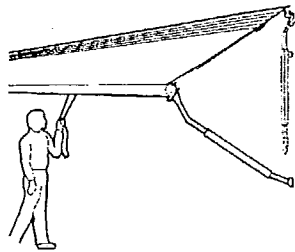


Insert the pull rod in the loop of the center control strap and unroll the awning to the desired extension.

**Step 3**  
PLACE RAFTER ARM

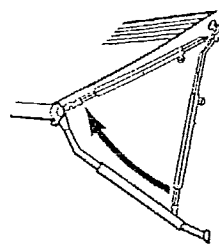

To prevent billowing, lift (do not extend) the rafter arm and hook the claw over the roller shaft. This will require that the awning be extended approximately four and one half feet.


**Step 4**  
RAISE ROLLER

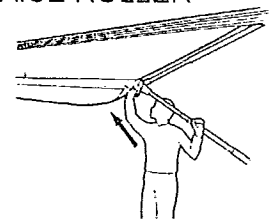

Raise the awning to the desired height by releasing the snap stud on the main arm and pushing up and outward on the roller assembly


## TO CLOSE THE AWNING

**Step 1**  
LOWER ROLLER

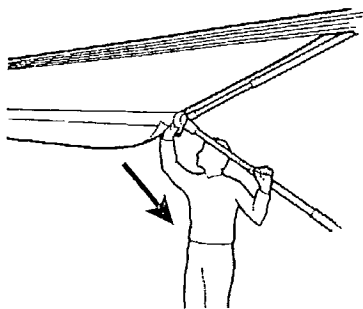

Release the snap stud of the main arm and lower the awning to its lowest position.


**Step 2**  
RELEASE AND STORE RAFTER ARM

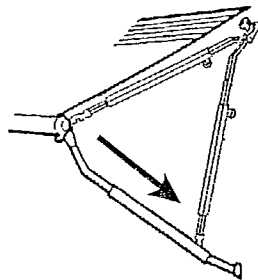

Release the ratchet stud on the rafter arm by pulling outward on the cap. Lift the claw from the roller shaft and place it on the height adjustment stud located on the inside of the main arm.


Repeat Steps 1 and 2 for the other end of the awning

**Step 3**  
ROLLER CLOSED

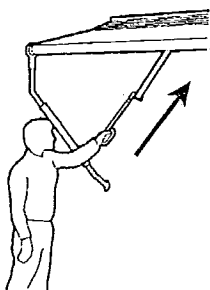


Face the awning and hold the end of the center strap then push the roller up briskly with a rolling motion until you feel the spring take over. Control the speed by holding the center strap until all but 6 inches of the fabric has been rolled up. Release the strap and let the awning roll freely the rest of the way.

**Step 4**  
LOCK WHEEL CLAMP

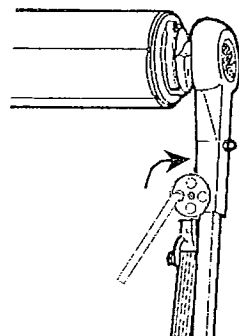

Swing the clamp wheel assembly toward the hardware and fit into place. Then turn the clamp wheel clockwise to tighten.

**Step 5**  
LOCK TRAVEL LATCH

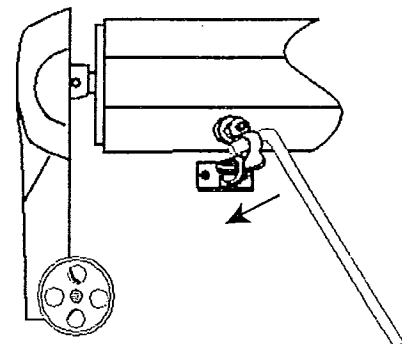

Insert the pull rod into the travel latch loop and twist shut.