


REPLACING A BACK BEARING:

IF YOUR BACK BEARING IS GREASED EVERY 150 HOURS OF USE IT SHOULD LAST FOR YEARS. IF NOT YOU MAY NEED TO REPLACE IT IN 1-2 YEARS OR LESS.

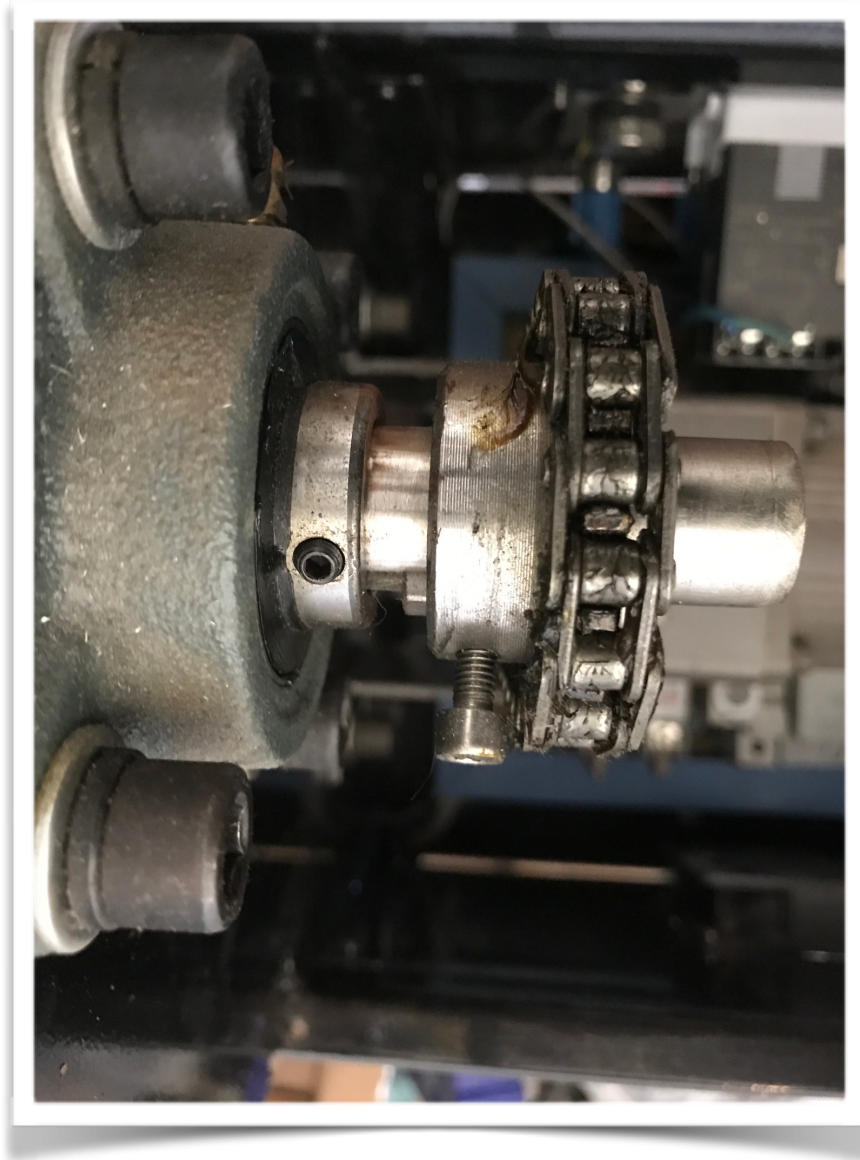

TYPICAL BEARING ASSEMBLY:

AS CAN BE SEEN HERE THE BEARING GOES THROUGH THE SHAFT OF DRUM. IN MOST CASES THERE IS A PULLEY ASSEMBLY HELD IN BY A BOLT OR BOLTS AND A PIN.

REPLACING A BACK BEARING:


BEFORE REMOVING BEARING YOU WILL NEED TO REMOVE CHAIN OR BELT AND PULLEY WHICH MAY REQUIRE THE USE OF A GEAR/BEARING PULLER TOOL SUCH AS SHOWN BELOW:

iPad 12:53 PM 100%
[Close](#) Capri Tools 10500 3-Jaws Gear Puller, 3-Inch



REPLACING A BACK BEARING:

TYPICAL BACK BEARING:

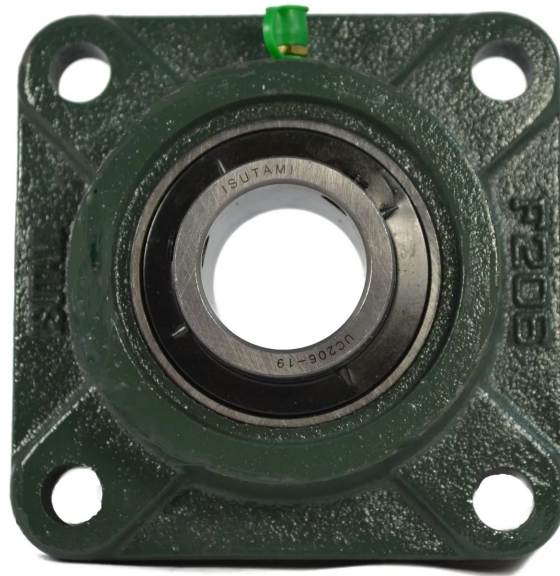

1 of 1

Please Note the 2 set screws will need loosened also before removing and replacing bearing

If you need more help contact tech@BuckeyeCoffee.com. Please provide your invoice account number in all emails.