

Monitor Hook Up Versa-Pak (with starter)

These instructions are for the hooking up a monitor to a power unit with Versa-Pak control system and a starter. For Motor Drive installation see appropriate instructions. **DO NOT** use these instructions for power units with motor drives (i.e. VFD's, Vector Drives, etc.)!

If you have any questions, please call us at 352-742-4774.

ONEPLUS:

- (H) Black wire goes on Versa-Pak terminal block #2.
- (G) Ground wire goes on Versa-Pak green (ground) terminal block.
- (N) White wire goes on Versa-Pak terminal block #1.

Waste Management Monitor:

- (HOT) Black wire goes on Versa-Pak terminal block #2.
- (NEUT) White wire goes on Versa-Pak terminal block #1.
- (GRD) Green wire goes on Versa-Pak green (Ground) terminal.
- (MOTOR) Violet wire goes on Versa-Pak terminal block #5.

Versa-Pak Motor Drive Monitor Hook Up

These instructions are for the Eaton MMX Motor Drive that PSI Waste currently uses in our 1Ph panels.


BE CAREFUL!!! If you hook 120V up to the wrong terminal, you will **FRY** the motor drive. If you have any questions, please call us at 352-742-4774.

ONEPLUS:

- (H) Black wire goes on Versa-Pak terminal block #2.
 - (G) Ground wire goes on Versa-Pak green (ground) terminal block.
 - (N) White wire goes on Versa-Pak terminal block #1.
- Waste Edge does NOT use a motor starter wire so you are done!

Waste Management Monitor:

- (HOT) Black wire goes on Versa-Pak terminal block #2.
 - (NEUT) White wire goes on Versa-Pak terminal block #1.
 - (GRD) Green wire goes on Versa-Pak green (Ground) terminal.
 - (MOTOR) Violet wire goes to motor drive terminal block #23.
- Run an additional wire from Versa-Pak terminal block #4 to motor driver terminal block #22

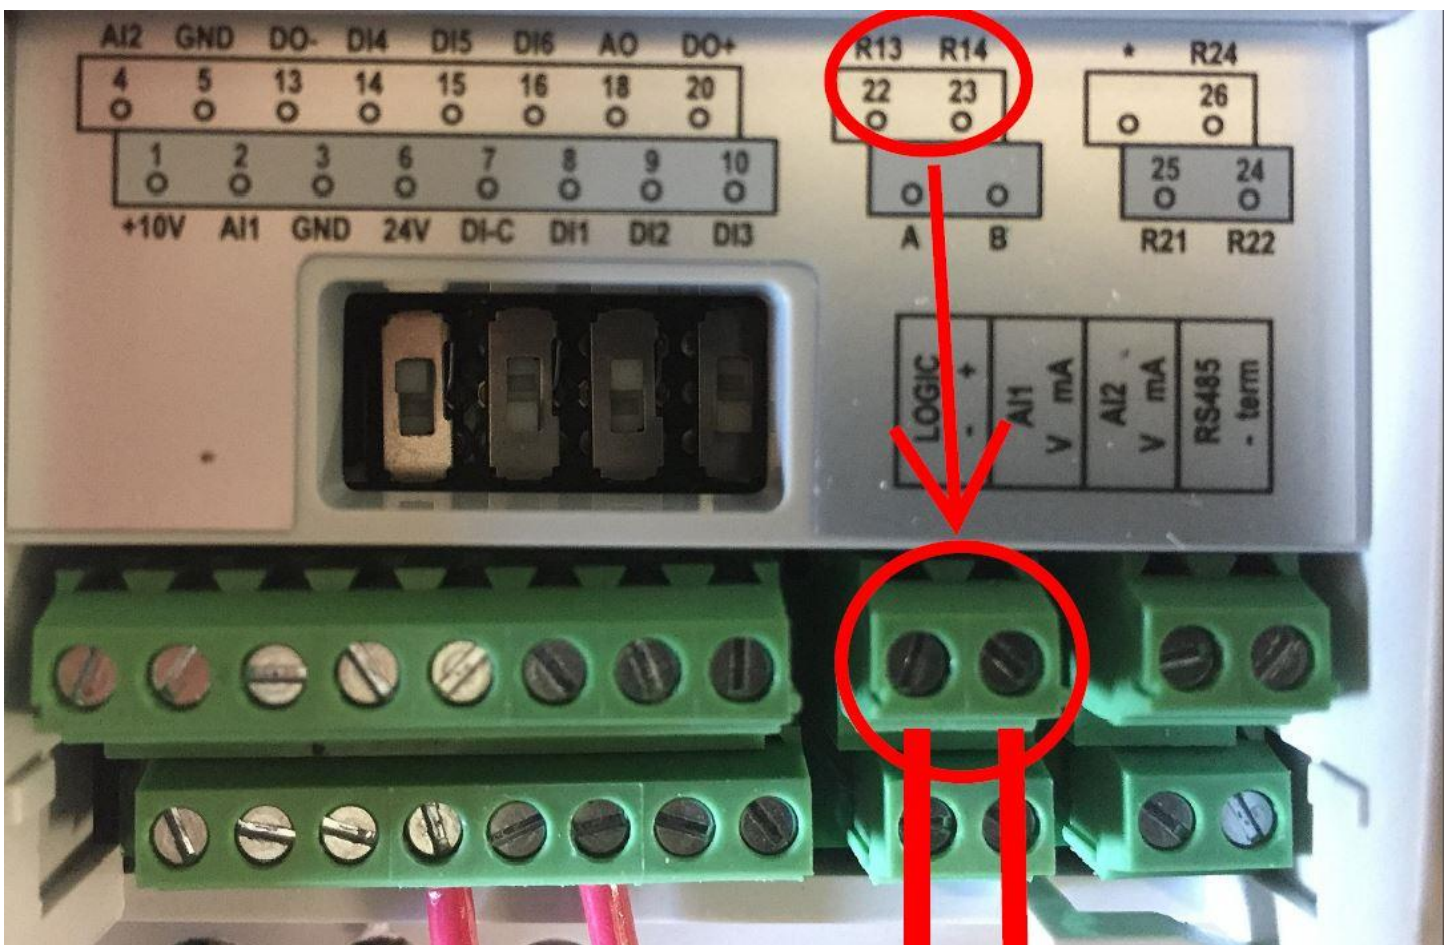

WM Monitor ONLY: Versa-Pak Terminal Block #4 ↑ ↑ Monitor signal wire