

Setting time and Date on your new Nixie Clock



Your clock has been set at the factory to match your specific time zone, however, . If you want to adjust the time and date please follow the procedure below:

- Press the selection pushbutton on the back of your clock for 1- 2 seconds. The clock background LEDs will blink with one pulse. The Hours digit will be illuminated¹. Quick press the selection button for less than one second to advance the digit



- Press the selection pushbutton again on the back of your clock for 1- 2 seconds. The clock background LEDs will blink with two pulses and the Hours digit now will be illuminated¹. Quick press the selection button for less than one second to advance the digit



- Press the selection pushbutton again on the back of your clock for 1- 2 seconds. The clock background LEDs will blink with three pulses and the seconds digit now will be illuminated. Quick press the selection button for less than one second to reset the seconds to Zero (0)
- Press the selection pushbutton once again on the back of your clock for 1- 2 seconds. The clock background LEDs will blink with four pulses and the Day digit now will be illuminated. Quick press the selection button for less than one second to advance the day.



- Press the selection pushbutton again on the back of your clock for 1- 2 seconds. The clock background LEDs will blink with five pulses and the month digit now will be illuminated. Quick press the selection button for less than one second to advance the month.
- Press the selection pushbutton again on the back of your clock for 1- 2 seconds. The clock background LEDs will blink with 6 pulses and the year digit now will be illuminated. Quick press the selection button for less than one second to advance the year. Year digit will recycle back to 2015 after you pass year 2030.
- **You now have a choice**
- If you want to to adjust the advanced settings on the clock- Press the selection pushbutton again on the back of your clock for 1- 2 seconds and follow the main table in the user's guide.
- **However**, At this point you are done setting time and date. A press of the selection button for 3-4 seconds will exit the programming mode and return the clock back to time display mode.

¹ The order of the day/ month bulbs may be reversed depending on the selected clock settings- see setting # 4 under "basic settings" in the main users manual.