



**WINGS AEROSPACE, LLC**  
**CN-235 REPAIR/OVERHAUL CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
2230419	6610-01-323-7045	DATA DISPLAY GROUP
0030AH1	6685-01-328-6789	INDICATOR, ANGLE OF ATTACK
020-960-001	1560-01-328-1257	TANK FUEL AIRCRAFT - ROUTINE
021-922-001	1560-01-328-1260	TANK,FUEL,AIRCRAFT
103696-1	4820-01-312-1674	VALVE REGULATING
103698-1	4820-01-312-1675	VALVE REGULATING
124-1006-1	6620-01-328-0926	PRESSURE DIAL INDICATOR
124-1007-1	6620-01-308-2520	INDICATOR PRESSURE
124-1207	6685-01-328-7139	INDICATOR TEMPERATURE - REPAIR, PRIORITY
126-178	6620-01-308-2603	INDICATOR,ELECTRICAL TACHOMETER
126-179-2	6685-01-330-0269	INDICATOR,TEMPERATURE,THERMOCOUPLE
130544-1		SELECTOR PRESSURIZATION
131410-1	4320-01-312-1581	EJECTOR ASSEMBLY, AIR
17M800-251	6610-01-329-0924	RECORDER, FLT DATA
17M800-261	7025-01-345-1687	RECEIVER DIGITAL DA
1C12-34		PUMP,FUEL BOOST
1C7-21		PUMP, LOW-FUEL
2100-4043-00	6610-01-499-0741	RECORDER FLIGHT DATA
2118-363	6610-01-492-6515	ACCELEROMETER,MECHANICAL
21546-001	4820-01-484-0170	VALVE, ANTI-ICE
223-0419	6610-01-323-7045	DATA DISPLAY GROUP
23079-005	2920-01-391-0427	STARTER GENERATOR
2A6205C	3010-01-577-4474	ACTUATOR, ROLL TRIM
2A8213A	4810-01-530-9261	ACTUATOR, PITCH TRIM
2A8213C	1680-01-593-6847	ACTUATOR, PITCH TRIM
2LA005171-05		READING LIGHT
30-1033-49	6220-01-305-9703	LIGHT
30-1738-2	6220-01-305-9706	LIGHT
30AH1	6685-01-328-6789	INDICATOR, ANGLE OF ATTACK
31342-001	6115-01-370-4562	GENERATOR ALTERNATI
35-41050-0009		LANDING GEAR, MAIN LEFT
35-41050-0010		LANDING GEAR, MAIN RIGHT
35-42311-0011		SHAFT
35-42311-0013		SHAFT ASSY-DRIVE
35-43120-0007		PACK, NLG STEERING
35-61480-0001		PANEL, CONT. ELECT. - ROUTINE
39400-1	4810-01-478-2280	VALVE, SOLENOID
394408-8-1	2915-01-337-2924	FUEL FLOW DIVIDER
3950AC1	4810-01-329-0901	VALVE, SOLENOID
3950AC-1		VALVE,SOLENOID
3950AC2		VALVE, SOLENOID
3A67-42-35F05-1U		ALTIMETER
4052T54P03	6150-01-324-5971	LEAD,ELECTRICAL
4122-009004	4320-01-329-0030	PUMP, CENTRIFUGAL
454620-01-28		INU LTN 72



**WINGS AEROSPACE, LLC**  
**CN-235 REPAIR/OVERHAUL CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
458900-06-01	6605-01-290-5721	CONTROL DISPLAY UNI
4A16-42-40F05-1K	6610-33-001-3022	INDICATOR V
51634-001	6110-01-325-4790	CONTROL MOTOR
51653-120	6340-99-109-2216	CONTROL
51653-151	6340-99-051-8281	CONTROL ALARM
5506L-SG512	6615-01-329-0045	CONTROL ALTITUDE AU
5506SG53	6610-01-342-0889	ALTIMETER PRESSURE
6044T35P11	2840-01-495-3518	GEARBOX
6068T56P01	4820-01-329-0877	VALVE CHECK
6071T20P16		CONTROL IND
622-2504-001	5985-01-304-3741	ANTENNA
622-2855-001	5841-01-272-2715	ALTIMETER SET ELECT
622-2855-011	5841-01-564-6729	TRANSCEIVER RADIO ALT
622-5735-004	5340-01-308-9726	PLATE, MENDING
622-5798-010	5895-01-304-3886	CONSOLE SWITCHING
622-5812-002	6605-01-329-0833	CONTROL-IND
622-6019-001	5985-01-304-3724	DIRECTIONAL COUPLER - ROUTINE
622-6020-022	5980-01-289-5788	DISPLAY OPTOELECTRO
622-6135-011	1270-01-342-1396	COMPENSATOR LEAD AN
622-6332-001	5985-01-304-3725	COUPLER DIRECTIONAL
622-6522-003	5895-01-325-4789	CONTROL-INDICATOR
622-7337-001	5841-01-315-0645	RECEIVER/TRANSMITTER
622-7338-022	5841-01-333-7910	CONTROL, RADAR MAPPING CENTRAL
622-7876-012	5895-01-324-1442	DISPLAY, MULTIFUNCTION
622-8111-006	5821-01-446-6132	CONTROL, RADIO SET
622-8112-002	5826-01-366-3357	HF RECEIVER-TRANSMITTER,RADIO
622-8113-002	5985-01-411-9943	HF COUPLER ANTENNA
622-8149-002	5826-01-324-1500	RECEIVER/TRANSMITTER, RADIO
622-8149-012	5821-01-505-2826	TRANSCEIVER
622-8678-004	1680-01-372-5219	PROCESSING UNIT,DIG
622-8678-024		DPU
622-8679-003	1680-01-345-2179	CONTROL, MULTIFUNCTION PROCESSOR UNIT
622-8679-004	6605-01-369-9163	CONTROL UNIT,NAVIGATION SET
622-8679-024		MULTIFUNCTION PROCESOR
70-0275-1	6130-01-323-7051	STATIC INVERTER LIGHT
702GC01ADY02		BOX, GENERATOR PROTECTION
712GC01AAY		BOX, GENERATOR PROTECTION
72-113111-000	6350-01-308-2787	ALARM, SMOKE, AUTO
750659-17		SWITCH, OVERTEMPERATURE
754661-10	5930-01-324-5957	SWITCH THERMOSTAT
776902-3	4820-01-308-6454	VALVE REGULATOR
778686-2	4810-01-310-3449	FLUID PRESSURE REGULATION VALVE
778695-2	1650-01-310-3450	VALVE REGULATING PR
780876-8		ACTUATOR
782490-49		CONTROL PROPELLER



**WINGS AEROSPACE, LLC**  
**CN-235 REPAIR/OVERHAUL CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
782490A38		CONTROLLER PROPELLER
782490A49		CONTROL PROPELLER
782630-2	4140-01-324-5970	CENTRIFUGAL FAN
782630-3	4140-01-329-0336	TURBINE AIR
782630-4	1660-01-369-4191	REFRIGERATION UNIT,AIR CYCLE,AIR
782630-5	4140-01-498-2289	FAN CENTRIFUGAL
783670-1	4130-01-310-3506	CONDENSER AND MIXER
8160-530		STARTER-GENERATOR, ENGINE, AIRCRAFT
8210-162	1650-01-328-1274	GOVERNOR
861CAV	6610-01-309-5361	TRANSMITTER ANGLE
895380-4	3010-01-418-8164	TORQUE LIMITER ASSEMBLY,MECHANICAL
897390-4	2995-01-420-4405	FUEL PUMP
9-231-07	6680-01-329-0895	METER FLUID
9-464-06	6680-01-545-0964	INDICATOR
A24282032		VALVE, SHUT-OFF
A24399031		VALVE, RELIEF
A2470903		VALVE, NOSE STEERING
A24709031-2	4810-14-452-0434	SOUPE MISE
AC66920	6615-99-853-6209	CONTROL BOX
AHA1291		WHEEL, MAIN LANDING GEAR
AHA1349		WHEEL, NOSE LANDING GEAR
AHA1802		BRAKE ASSEMBLY
AHM8337		VALVE, SHUTTLE
B1594542051N		AIRCRAFT CLOCK
BL-8053-3	6105-01-475-1001	MOTOR ALTERNATING
BL8810-6	1680-01-590-6284	CONTROL ASSY
BTI600-202M	6685-01-356-7401	INDICATOR TEMPERATURE
C16221EA02		INTEGRATED ELECTRONIC INSTRUMENT SYSTEM
C24166002		VALVE, NOSE STEERING
C24244005-2A	1650-14-519-2935	BOX ASSY-UPLOCK LH
C24245005-2A	1620-14-526-7401	UPLOCK ASSY LEANDIN
C24295309-1	4810-14-452-6552	VALVE, HYDRAULIC
C3495100078	2915-01-305-1619	REGULATOR, FUEL FLOW, TURBO-PROP ENGINE
C3495100084	6615-01-329-1060	SWITCH VORTEX RATE
CA54500-0003	4820-33-001-6857	VALVE STOP-CHECK
CA54600-0007	1650-33-001-6667	CYLINDER HYRAULIC
CA54600-0009	1650-33-003-4779	VALVE FLUID PRESSUR
CA54600-0011		VALVE, ANTI-SKID
CA75810-0001	3010-33-001-8008	ACTUATOR HYDRAULIC
CA84500-0010	3010-33-001-9625	ACTUADOR HIDRAULIC
CA84500-0011	3010-33-002-0043	ACTUATOR
CA84500-0012	3010-33-002-0044	ACTUATOR HYDRAULIC
CA91300-0001	4810-33-004-8616	VALVE, LINEAR, DIECT
CA91300-001	4810-33-004-8616	VALVE LINEAR
CA94300-0009		NOSE LANDING GEAR



**WINGS AEROSPACE, LLC**  
**CN-235 REPAIR/OVERHAUL CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
CA94300-0015		NOSE LANDING GEAR
CE100270-0005		UNIT, HYDRAULIC POWER
D1508-120A	2915-99-701-4347	FUEL HEATER AIRCRAFT
D22554011		SHOCK ABSORBER, NLG
D22554011-1	1620-33-200-9289	SHOCK ABSORBER, NLG
D22555000		VALVE, ANTI-SHIMMY
D22555000-50		VALVE, ANTI-SHIMMY
D22565010		STRUT, MAIN LANDING GEAR
D22565030		SHOCK ABSORBER, MLG
D22566010		BAR ASSEMBLY, CONNECTION
D22569020-4		BRACE, FOLDING DRAG
D22575000-2		ACTUATOR, MLG, LEFT
D22576000-2		ACTUATOR, MLG, RIGHT
D22622000		ACCUMULATOR, NLG
D22629020-3		LANDING GEAR, LEFT FRONT MAIN
D22630020-3		LANDING GEAR, RIGHT FRONT MAIN
D22631020-3		LANDING GEAR, LEFT REAR MAIN
D22632020-3		LANDING GEAR, RIGHT REAR MAIN
D22737000-1		PIVOT POINT, MLG
D25050		PANEL, MONITOR
D25-050	5985-14-435-0135	TABLEAU CONTROLE
DL3933M1-1	2910-01-305-1499	ACTUATOR, AILERON TRIM
DL3933M2-10MOD1	1650-01-328-7278	ACTUATOR, RIGHT PITCH TRIM
DL3933M2-11MOD1	1650-01-328-7279	ACTUATOR, LEFT PITCH TRIM
DL3933M3-1	3010-01-328-7281	ACTUATOR, RUDDER TRIM
DMN25-2	5985-00-483-0518	ANTENNA
EC11000-1	5998-01-386-1209	ELECTRONIC COMPONENTS ASSEMBLY
EC-11000-1	5998-01-386-1209	ELECTRONIC COMPONENTS ASSEMBLY
ECT115-195NVG		INDICATOR, BRAKE TEMPERATURE
ECT6445-003-00NVG		INDICATOR, POWER LEVEL
EM48-6	6105-01-625-4930	MOTOR ASSEMBLY,ELECTRIC
KAA1505K		ALTIMETER INDICATOR
L94B31-201		VALVE, FUEL
PMP05VC-040		HYD PUMP & ELE MOTOR ASSY
RFC11R1-0C	1610-01-342-6139	BLADE,PROPELLER,AIRCRAFT
RFC11R1-0C	1610-01-328-1277	BLADE,PROPELLER,AIRCRAFT
RFC11R1R0C		BLADE PROPELLER, AIRCRAFT
RFC11W1-0C	1610-01-540-7743	BLADE,PROPELLER,AIRCRAFT
RFC11W1R0C	1610-01-540-7745	BLADE,PROPELLER,AIRCRAFT
RFC11Y1-0C	1610-01-540-7740	BLADE,PROPELLER,AIRCRAFT
RFC11Y1P0C	1610-01-563-0465	BLADE,PROPELLER,AIRCRAFT
RR52000E	2915-01-419-1751	FUEL BOOSTER PUMP