

REPLACE OR REMOVE TO CLEAN FRONT BEARING PHOENIX ROASTER:

REMOVE FRONT COVER WITH A HEX KEY:



REMOVE INNER SHAFT BOLT AND WASHER:



**LOOSEN BUT DON'T REMOVE SET SCREWS:
THEN UNSCREW CASING:**



MAKE SURE NOT TO LOOSE WASHER



**USING A WOOD DOWEL OR OTHER TOOL THAT FITS INSIDE BACK SIDE OF BEARING HOLDER
TAP OLD BEARING OUT:**



**ONCE REMOVED REPLACE WITH NEW BEARING FOLLOWING
REVERSE PROCEDURE AND PACK BEARING WITH FRESH NEW
GREASE:**

**IF BEARING IS GOOD AND YOU ARE
ONLY CLEANING IT SOAK IN A SOLVENT
THAT REMOVES OLD GREASE AND ANY
BUILDUP OF CHAFF. THEN REINSTALL
AND PACK WITH NEW HIGH
TEMPERATURE FOOD GRADE GREASE
SUCH AS: SUPER LUBE:**

