

# INSTALLATION INSTRUCTIONS

## HONEYCOMB SHADES HYBRID PLEAT SHADES

### SIMPLICITY MOTORIZATION




Thank you for your purchase. This shade has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shade.



## TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners





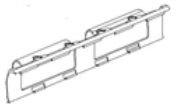




Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 
Wood	No. 6 Hex Head Screws (Provided) 

# GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below. **NOTE:** Some parts may vary depending upon your mounting option.
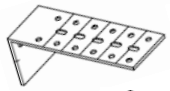
## PARTS

- Installation Brackets ..... 
- Spacer Blocks (optional) ..... 
- Extension Bracket (optional) ..... 
- Hold Down Brackets (optional) ..... 
- Battery Wand Clip (headrail) ..... 
- Battery Wand Clip (wall mount) ..... 
- Screws ..... 

# MOUNTING THE BRACKETS

The installation brackets may be used for **INSIDE or OUTSIDE** mounts.

If mounting the battery wand to the head rail, bracket positions may need to be adjusted to accommodate the battery wand. You must have at least 19" between bracket centerlines to fit the battery wand.

## **Mounting the brackets level is essential for proper operation of the shade.**

Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart. When installing shades with Simplicity Motorization, allow a minimum of 17-1/2" for the motor and battery wand.

**Installation Bracket Requirement Chart**

Shade Width	Brackets Required
up to 38"	2
38-1/8" to 72"	3
Over 72-1/8"	4

## **INSIDE MOUNTS:**


For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket. Refer to the mounting depth chart below.

	Minimum Depth	Fully Recessed
Wall Mounted Wand	1/2"	2-1/4"
Headrail Mounted Wand	1-1/4"	3"

Note: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

## **ATTACH THE BRACKETS:**

- Screw installation brackets through top two holes to desired window sill location.
- Ensure all brackets are level and aligned.

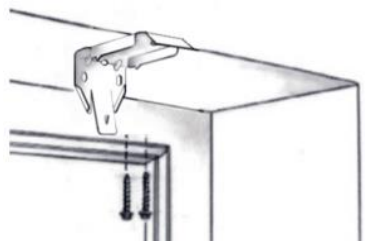


## **OUTSIDE MOUNTS:**

For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart below.

Minimum Height
1-1/2"

### **ATTACH THE BRACKETS:**

- Screw standard brackets through two back holes to desired location.
- Ensure all brackets are level and aligned.

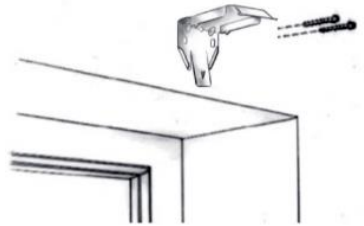

### **OUTSIDE MOUNT FOR HEADRAIL MOUNTED BATTERY WAND**

- Two spacer blocks must be stacked to give enough clearance for the battery wand.
- Ensure all brackets are level and aligned.
- Screws should be long enough to secure the bracket to the mounting surface.

### **EXTENSION BRACKETS (optional):**

- Position the extension brackets to the desired wall location.
- The bracket tops must be aligned and level to one another.
- Mount the extension brackets through the back holes with two screws.
- Attach installation brackets to extension brackets with included screws & nuts.



Note: Use the same holes for all brackets to ensure even projection from the surface.

## STEP 2: INSTALLING THE BATTERY WAND

 
(IF USING A TRANSFORMER, SKIP THIS STEP)

### WALL MOUNT

Attach the wand clips in the desired location with the screws provided. Before mounting the wand, make sure that the wand and excess wire will not interfere with the operation of the shade. Extension wires are available if needed.

Press the wand into the clips.

**Note:** Be sure battery wire will reach motor plug.



### HEAD RAIL MOUNT

Attach the battery wand clip to the back of the head rail as shown.

**Important:** Position the clip so that the battery wand will be between mounting brackets.

Before mounting the wand, make sure that the wand and excess wire will not interfere with the operation of the shade. Extension wires are available if needed.

Press the wand into the clip.

**Note:** Be sure battery wire will reach motor plug.

**CAUTION:** Do not connect the battery wand to the power cable prior to installing the shade





# SHADE INSTALLATION

Before mounting the headrail make sure that the receiver wire is out of the head rail. For optimal performance, position the receiver wire so that it is facing into the room.

Position the motor wire so that it comes out the back side of the shade.

## MOUNT THE HEADRAIL:

- With the front side of the shade facing you...
- Tilt the headrail slightly backward to angle the front inside lip to the brackets. (A)
- Push the headrail back and upward to snap in it into place (B).

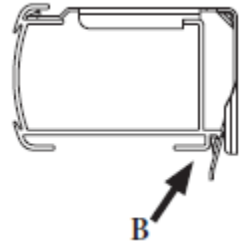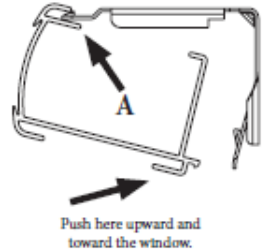

Make sure that no fabric is pinched between the brackets and the head rail.


Be sure the motor wire is not pinched by the bracket.

# REMOVING THE SHADE

To remove a shade, insert a screwdriver between the head rail and the bottom back of the bracket (tab which extends out slightly from each bracket).

Gently pry the screwdriver to release the bracket from the head rail. Take care not to damage the painted finish of the head rail.


As you release the brackets, support the head rail to keep it from falling.

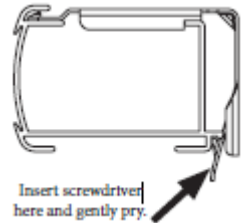

## CONNECT TO A POWER SOURCE

### BATTERY WAND

Plug the battery wand wire into the motor wire.

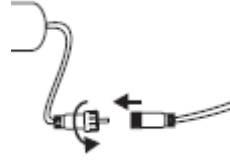


### TRANSFORMER (OPTIONAL)

Plug the transformer wire into the motor wire. Secure the wire behind the shade and along the window casing as required.



Plug the transformer into an electrical outlet.

 
If the wire is not long enough to reach, optional 48" extension wires are available.



# OPERATION

The factory has set your shade to the channel that was specified at the time of order. If no channel was specified, the shade was set to operate on channel 1.

Select the desired channel with the **CHANNEL** buttons. The channel indicator light will illuminate the channel that is on. If all 5 lights are lit the remote will control all 5 channels at once.

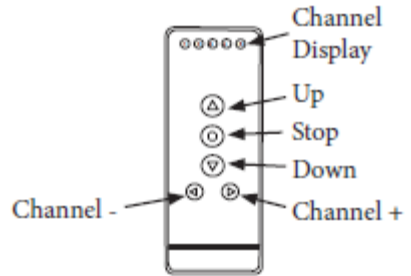

Tapping the **UP** or **DOWN** buttons for less than 2 seconds will move the shade in short steps. Holding the **UP** or **DOWN** buttons down for more than 2 seconds before releasing will operate the shade in the faster standard speed.


Press the **UP** or **DOWN** buttons to raise or lower the shade.

Press the **STOP** button to stop the shade anywhere along the travel.

## SETTING AND USING A FAVORITE POSITION

Use the **UP** or **DOWN** buttons to position the shade at the desired "favorite" position. First press and hold the **LIMIT** button on the back of the remote with a small screwdriver or tip of a pen. While holding the **LIMIT** button press and hold the **UP** button. Release both buttons when the shade jogs.

With the shade at either the upper or lower limit, simply press the **STOP** button to bring the shade to the "favorite" position. To go to the "favorite" position from any other location, make sure the shade has been stopped for at least three seconds before pressing the **STOP** button.

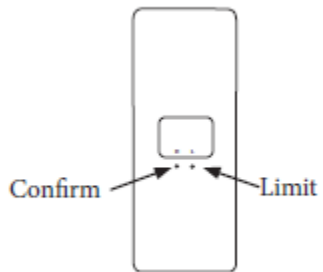





# ADJUST MOTOR LIMITS ON PRIMARY REMOTE (If Desired)

The lower and upper limits have been set at the factory. If you need to make adjustments to the limits, follow the instructions below.

**NOTE:** When clearing the factory set limits, both the upper and lower limits will need to be reset.

Use the **CHANNEL** button to select the channel for the shade that needs to be adjusted. Then follow the directions below. If only adjusting one shade on a channel, unplug the other shades.

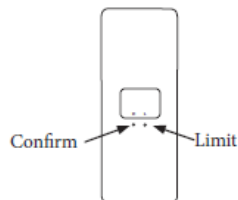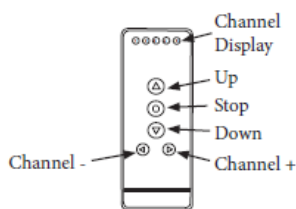

## Set Lower Limit

	OPERATION	RESULT
1	Hold <b>LIMIT</b> button down	The motor begins to jog
2	Release the button after jogging starts	The motor is ready for limit setting
3	Press <b>DOWN</b> button	The motor will go down continuously
4	When the motor is close to the desired lower limit, press <b>STOP</b> button on the remote	The motor stops running
5	Press either the <b>UP</b> or <b>DOWN</b> button	The motor runs step by step to adjust lower limit accurately
6	Confirm the setting by pressing the <b>CONFIRM</b> button on the remote	The motor jogs and the lower setting is completed

## Set Upper Limit

	<b>OPERATION</b>	<b>RESULT</b>
<b>1</b>	Press <b>UP</b> button on the remote transmitter	The motor will go up continuously
<b>2</b>	When the motor is close to the desired upper limit, press <b>STOP</b> button on the remote	The motor stops running
<b>3</b>	Press either the <b>UP</b> or <b>DOWN</b> button	The motor runs step by step to adjust upper limit accurately
<b>4</b>	Confirm the setting by pressing the <b>CONFIRM</b> button on the remote	The motor jogs and the upper setting is completed

 
## CHANGE FAVORITE POSITION (If One Was Set)

Use the **UP** or **DOWN** buttons to position the shade at the desired "favorite" position. First press and hold the **LIMIT** button on the back of the remote with a small screwdriver or tip of a pen. While holding the **LIMIT** button press and hold the **UP** button. Release both buttons when the shade jogs.

To erase the "favorite" position bring the shade to the **upper** limit. Press and hold the **LIMIT** button on the back of the remote, then press and hold the **UP** button. Release both buttons when the shade jogs.

## HOLD-DOWN BRACKETS (OPTIONAL)

- Lower the shade and place the hold down pins into the bottom rail end caps.
- Mark the hold down bracket locations on the mounting surface
- With the brackets level, attach them using two screws.





## ADJUSTING THE SHADE

- Raise and lower the shade several times.
- If the length is incorrect or the bottom rail is not level, use the following steps to correct.

### BOTTOM RAIL SHADE ADJUSTMENT:

- Lift bottomrail on the side to be adjusted. This will take the weight off the cord.
- Use a screwdriver or dime.
  - Turn screw clockwise to lift that side of the shade
  - Turn screw counter clockwise to lower that side of the shade
  - Half a revolution is  $\frac{1}{4}$ " adjustment (maximum adjustment is  $\frac{1}{2}$ " )

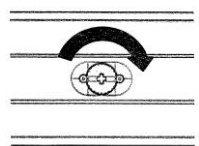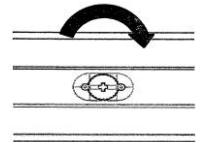

# TROUBLESHOOTING

## THE MOTOR DOES NOT WORK

1. Check that the power source and motor are connected properly.
2. If using a battery wand - confirm that the batteries are fresh and are placed in the wand in the correct orientation.

## THE MOTOR CONTINUES TO RUN IN ONE DIRECTION

The limit setting was unsuccessful and needs to be reset.

## THE INDICATOR LIGHT ON THE REMOTE DOES NOT SHINE OR THE REMOTE-CONTROL RANGE BECOMES SHORTER

Replace the battery in the remote (CR2430 lithium).


## THE MOTOR STOPS WORKING OR WORKS INTERMITTENTLY

If using a battery wand, replace the batteries in the wand with 8 fresh AA alkaline batteries.

## REPLACING THE BATTERY IN THE REMOTE

Remove the battery tray from the remote by inserting a fingernail into the indentation on the back of the remote. To avoid the battery falling out of the remote, remove the tray while the remote is face up.

Insert fingernail here

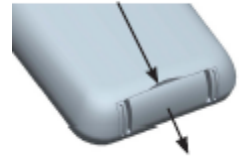

Insert the new battery (CR2430 lithium) into the battery tray so that the writing is facing up when the remote is face up. Slide the tray back into the remote.



## CLEANING INSTRUCTIONS

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

**DUSTING:** Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

**VACUUMING:** Use a hand-held vacuum with low suction for more thorough dust removal.

**SPOT CLEANING:** Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

**CAUTION:** Avoid creasing Blackout fabrics during cleaning.

**DEEP CLEANING:** Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

**CAUTION:** Do not immerse Blackout fabrics. Do not immerse the headrail or any fabric-wrapped rail.

**ULTRASONIC CLEANING:** Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail or any fabric-wrapped rail in the solution.
- Dry the shade completely in the lowered position.

**CAUTION:** Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.

# SAFETY NOTES

## WARNING

Inner or exposed cords can pull out to form a loop, which can STRANGLE a young child.

### CHILD SAFETY



- Children can climb furniture to access inner or exposed cords. Move cribs, playpens, and other furniture away from window coverings.
- Always keep cords out of the reach of children.



### CANADIAN RESIDENTS ONLY:



For more safety information  
call 1-866-662-0666 or go to  
[www.healthcanada.gc.ca/blindcords](http://www.healthcanada.gc.ca/blindcords)



## WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Shades

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.