
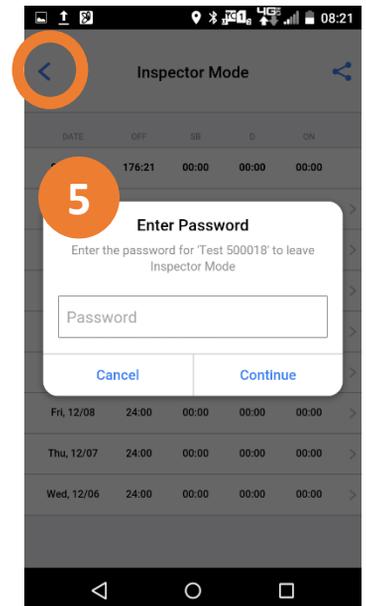
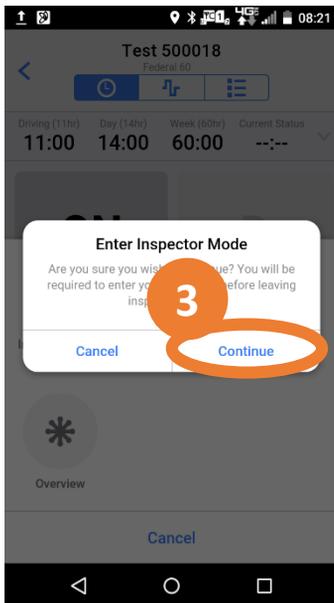
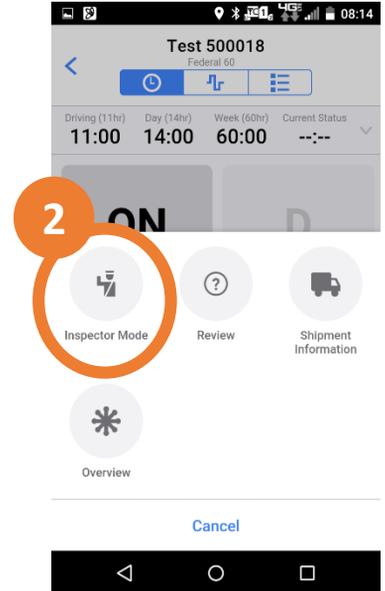



Inspector Mode is located under the “Actions” button located at the bottom of the HOS screen.

1. Select Actions
2. Select Inspector Mode
3. Select Continue
4. View Inspector Mode
5. To exit Inspector Mode, select the blue < and reenter password




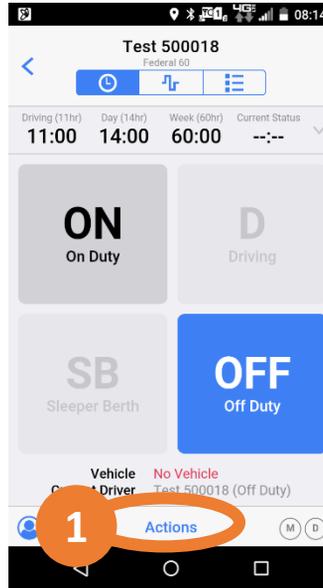


When asked for In- Cab Documents

1. Select the home button
2. Select the In Cab Docs Icon
3. If needed, select the menu button
4. Select Content Library
5. VC_HOS_ELD_Diagnostic and VC_HOS_ELD_Quick are the required In-Cab Documents
6. To return to WorkPlan select the home button

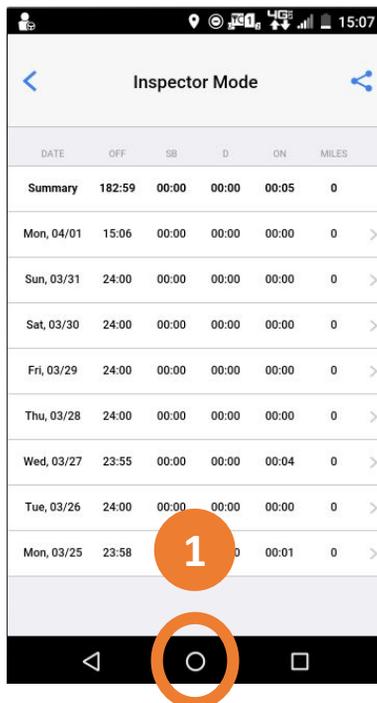

OR

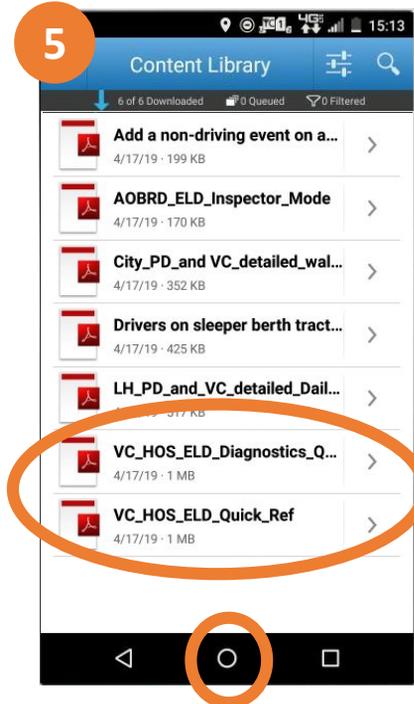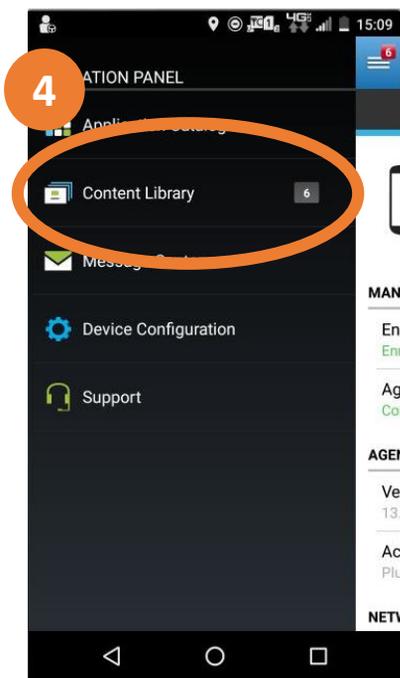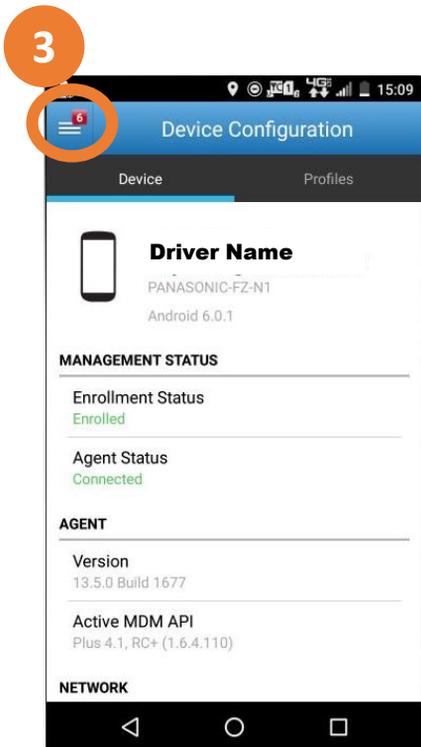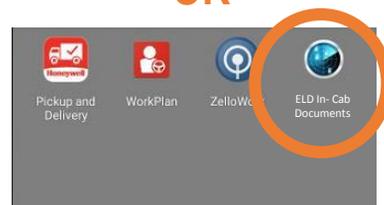

Note: Electronic versions of In Cab Documents are allowed per FMCSA guidance