


IGNITOR NEEDLE ALIGNMENT BC ROASTERS

IF YOUR ROASTER IGNITER NEEDLE GETS OUT OF ALIGNMENT IT MAY CONTINUE TO BUZZ (OR TRY TO SPARK AND IGNITE) EVEN AFTER BURNERS LIGHT.

IF YOU HAVE THIS ISSUE THE FIRST THING TO DO IS CHECK THE ALIGNMENT OF YOUR IGNITOR NEEDLE AFTER MACHINE IS OFF AND COOL.

YOU CAN OPEN BACK PLATE ON ROASTER TO GET TO THE BURNER ROOM.
NEXT YOU CAN CHECK THAT THE 3 PRONGS ON THE IGNITOR ARE PROPERLY ALIGNED ACCORDING TO THE FOLLOWING DIAGRAM & PICTURES.
ALSO INSPECT NEEDLE TO ENSURE THERE IS NO DAMAGE.

BELOW IS A PHOTO OF THE BC IGNITOR NEEDLE: THERE ARE 3 NEEDLES
1 & 2 SPARK TO LIGHT FLAME
3 MUST BE TOUCHING THE FLAME AFTER SPARK TO SENSE THAT ROASTER LIT UP. IF IT IS NOT TOUCHING FLAME IT WILL KEEP TRYING TO LIGHT:

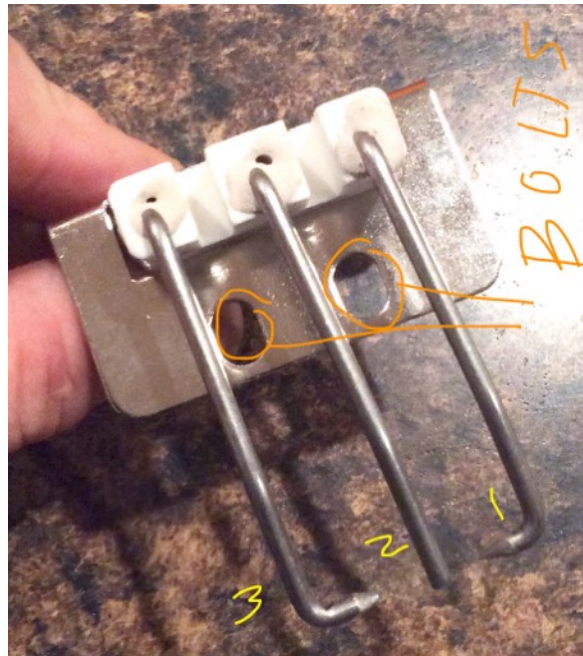

IGNITOR NEEDLE ALIGNMENT BC ROASTERS

