

EezTire

Tire Pressure Monitoring System (TPMS)

REPEATER INSTALLATION INSTRUCTIONS

The Repeater is designed to amplify the signal from your TPMS system sensors. In situations where length or interference prevents your monitor from receiving a signal, the Repeater increases the sensors transmitting distance.

PLACEMENT INSTRUCTIONS


Motor Coach Placement:

It is recommended to install the Repeater in an outside - aft compartment or in your rear closet.



Tractor - Trailer Placement:

It is recommended to install the Repeater outside between the tractor and towed trailer.

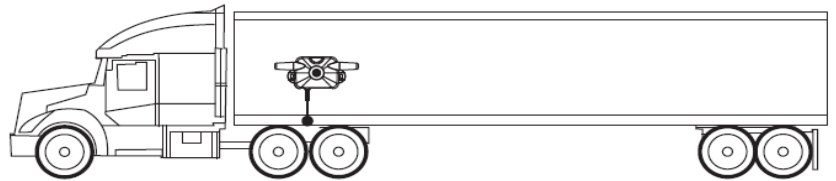

Fifth Wheel Placement:


It is recommended to install the Repeater in an outside compartment (battery/generator) under the front bed area.



INSTALLATION INSTRUCTIONS

Be sure to wire the Repeater into a 12V power source that will be “on” during vehicle operation. The Repeater will be on as soon as it is connected to power. The red light stays on when power is connected and periodically flashes 3 times during receiving and transmitting.

INSTALLATION OF THE REPEATER ONLY REQUIRES IT BEING CONNECTED TO A 12V POWER SOURCE AND GROUND - WHEN THE RED LIGHT COMES ON IT IS FUNCTIONING.

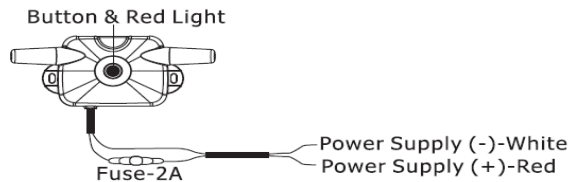

REPEATER SPECIFICATIONS

Operation Temperature	-20°C ~ 80°C
Storage Temperature	-30°C ~ 85°C
Working Voltage	12 ~ 24V
Transmission Power	<18dBm
Frequency	433.92MHz
Size(LxWxH)	91mm x 38mm x 15mm
Weight	42g

IMPORTANT

1. Please read instructions before installation.
2. Repeater should be mounted securely.
3. The Repeater is water and dust resistant.
4. Minimize the amount of metal in mounting area.
5. Ensure all wires are mounted securely.
6. Verify Repeater is operating after installation.
7. The center button is also a RESET button.

TRACTOR TRAILER DRIVERS WITH A FLEET THAT DOES MULTIPLE DROP AND PULLS - SEE PAGE 26 OF YOUR EEZTIRE TPMS OPERATORS MANUAL FOR ADDITIONAL INSTRUCTIONS