

BREEZAIRE PRODUCTS COMPANY

8610 Production Avenue San Diego, California 92121

Phone (858) 566-7465 Fax (858) 566-1943

Web Site: www.breezaire.com Email: info@breezaire.com

FAN MOTOR & BLADE CHANGE OUT

1. Remove plastic fan blade from fan motor shaft.
2. Remove the four (4) #8 Lock Nuts.
3. Pull motor up through the motor brackets and cut both wires as close to the motor as possible.
4. Strip the wire ends from the old motor and wire them together to the new motor.
5. Replace the motor back on the brackets and use the same #8 Lock Nuts.
6. After tighten the nuts and making sure all wires are out of the way put on the new fan blade.

TO REPLACE THE BLADE ONLY FOLLOW 7-9

7. Position the fan blade with the metal band on the center hub facing up.
8. While keeping the metal band UP, align the flat side of hole with the flat side of the motor shaft and press down.
9. Push the fan blade onto the shaft firmly until it comes in contact with the shoulder on shaft or seats flush with the top of the shaft.