



# ANDERSON RENTALS & EQUIPMENT

## BOUNCE RIDE INSTRUCTIONS

1312 W 6<sup>TH</sup>; LAWRENCE, KS 66044; (785) 843-2044

### General Guidelines:

- No shoes allowed on ride.
- All riders must empty all pockets.
- All riders must remove eyeglasses, jewelry, and any hard or sharp objects before entering ride.
- Riders must be grouped according to age and size before entering ride.
- No flips, wrestling, or other forms of rough housing allowed while on ride.
- Do not bounce closer than four feet from each other.
- Do not bounce on step or near doorway.
- No climbing or hanging on the outside walls or roof.
- No one is allowed on ride while it is being inflated or deflated.
- Do not erect in high wind.
- If during operating the wind becomes excessive (20 mph), unload occupants and deflate the ride.
- This ride is not to be used when raining or wet.
- Do not spray water on ride for any reason.
- No silly string or glitter is to be used.
- Number of riders should be limited according to age and size and is the responsibility of adult in charge.
  - 10' x 10' FunTec recommends no more than 4 – 5 riders
  - 13' x 13' FunTec recommends no more than 6 – 7 riders
  - 15' x 15' FunTec recommends no more than 8 – 9 riders
- Unit must be anchored prior to and during operation.

### Safety Rules:

- Do not inflate in high winds or rain.
- Unload all occupants and deflate the ride if the wind becomes excessive.
- Use an adequate (min. 12 gauge for 100'), three wire extension cord.
- Never cut or remove the round grounding pin from the cord.
- Always connect the GFI to the extension cord before plugging into the power source. This reduces the possibility of arching the GFI contacts. Check the GFI operation at least once daily.
- Obtain marking and location information from the utility companies if there is a possibility of underground utilities.
- Ensure there are no underground irrigation pipes, electric wires, gas lines, or telephone cables that the utility company or property owner may have installed.
- Limit occupants to the number specified on the label.
- Always ensure that there is adequate clearance around and above the ride.
- Do not allow any children or adults in the rear of the ride or near the electric blower fan at any time.
- Do not put fingers/hands into fan inlet or outlet when running.
- Do not put fingers/hands into fan motor or motor housing when running.
- Never roll up or pack a ride when wet unless you plan to dry it that same day.
- Never use chlorine based cleanser or bleach to clean, as this may damage the thread or vinyl.
- If power should go off during the time the children or adults are playing, the bounce ride will deflate rapidly. Ask all occupants to immediately sit down, then the responsible adult will evacuate each person individually.

### Site Layout:

- Pick a location free from overhead electric power or telephone lines.
- Location should be free from trees that could damage or stain the inflatable.
- An unobstructed area should be maintained for 5 feet around the perimeter of the inflatable.
- Contact all utility companies and have all underground utility lines properly located so no accidental contact occurs when driving stakes.
- Ensure there are no underground irrigation pipes or other utilities that the property owner has installed.
- Place your ground liner over the site where you want the inflatable to stand.
- Keep the front of the inflatable clear and accessible at all times.

### Installation:

- Unroll and position the inflatable on the liner with the inflation tube located to the rear of the inflatable. Note: If rolled up properly, the rear of the inflatable is the end where you started unrolling.
- Stake the inflatable before inflating.
- Be sure the stake heads are away from the inflatable to avoid abrasion.
- Remove the power cord and GFI from the fan outlet and install the cone, using the four screws provided. (Silver box fan only). Place the blower fan with GFI on a dry, flat surface connect to the inflatable's inflation tube. Either tube whichever is most convenient can be used. BE SURE TO TIE OFF THE OTHER TUBE THAT YOU DO NOT PLACE OVER THE BLOWER.
- Connect a properly sized extension cord (min. 12 gauge for 100') to the GFI, then plug into the power source.
- Check the GFI to ensure operation.
- Check the inflation tube to make sure it is properly attached to the blower fan. The inflation tube must be properly closed around the fan outlet cone to prevent large air leakage.
- Do not place fingers/hands into the fan inlet or outlet when the fan is operating.
- Do not allow any children or adults in the rear of the ride or near the electric blower fan at any time.
- Check for rips, holes, and damaged seams. When properly inflated, the play area, walls, and columns will be firm.

### Operating Instructions:

- Check stakes regularly to ensure they are tight.
- Check the blower/inflation tube regularly to ensure there isn't any excessive leakage.
- Check GFI at least once daily.
- Prohibit excessive roughhousing by occupants.
- Ensure that shoes have been removed by occupants.
- Observe the maximum occupancy rules.
- Keep clean and dry. If the inflatable gets wet, dry it as soon as possible by blowing air through it.
- The "Silver Box" Electric Blower Fan has a thermal overload protector which can be reset with the eraser end of a pencil through a hole in the box. The Marathon and GE motors on the Airtech blower reset automatically.
- Do not allow any children or adults in the rear of the ride or near the electric blower fan at any time.

### Cleaning:

- Do not use a chlorine based cleaner or bleach to clean, as this may damage the threads.
- Use water and/or cleaner sparingly by "sponging."
- Excessive water or cleaner may penetrate the seams and collect inside of the tubes. Also, "bubbling" from the seams during operation may occur. This will last for a short time and will dry out if the sun is out within ½ hour.