Firearms Safety Rules

<u>1</u>: Treat every firearm as if it is loaded.

<u>2:</u> Never point a firearm at anything you do not intend to shoot.

<u>3:</u> Keep your finger straight and off the trigger until you have identified your target and are ready to shoot.

<u>4</u>: Keep the safety engaged until you are ready to shoot.

<u>5:</u> Be sure of your target, background, and foreground.



Sling Attachment Instructions

WARNING!

Always ensure all firearms safety rules are followed, and your firearm is unloaded before attaching your sling in a designated safe area.

Overview

The rear of the sling has a single adjustment point which is used to set the overall length of the sling. The front of the sling has the rapid adjustment loop that allows the shooter to quickly set sling tension and length.





CONTACT: KEN@SHIBUMITACTICAL.COM PHONE: 910-546-5825 WWW.SHIBUMITACTICAL.COM

1 - Rear Attachment

Note: No additional sling mounting hardware is necessary, the sling attaches directly to the rifle.

<u>Step 1</u>: Feed the rear loop and keeper through the stock from left-to-right for a right-handed shooter. Opposite for a left-handed shooter.



<u>Step 2:</u> Run the rest of the sling through the end of the loop.



<u>Step 3:</u> Slide the keeper into place to prevent the loop from loosening.



2 - Front Attachment

<u>Step 1</u>: Form a loop at the front of the sling.



Step 2: Place the loop over the muzzle and handguards, move any wires to prevent them from being pinched by the sling.



<u>Step 3</u>: Tighten the loop and slide the keeper into place.



Storage

The sling can be routed as shown below for storage. This also allows access to all rifle

controls.

