

HOW TO REPLACE A SOLENOID BC ROASTERS

On most BC Roasters the Solenoid is on the very end of gas line where the LPG hose or NG line from building connects to roaster

Most are attached with a bracket. Remove pipe attached to solenoid with a proper metric wrench. Next locate the 2 wires and remove at source. You may need to use twist on insulator wire connectors



Twist on wire connectors



Two wires re-connect from new solenoid. wires are the same and can be flipped. They just connect for electric impulse to open solenoid



HOW TO REPLACE A SOLENOID BC ROASTERS

New Solenoid should be attached to gas lines using either Yellow gas tape and or joint compound to seal gas lines

