

## GREASE FRONT BEARING ON BC-1 & 2


TO GREASE THE FRONT BEARING ON A BC-1 OR 2 ROASTER THAT HAS THE OPEN TYPE BEARINGS (2019 MODELS AND NEWER) YOU WILL SEE THAT THERE ARE 3 SHORT HEX KEY SCREWS OR BOLTS THAT HOLD THE GOLD COVER PLATE OVER BEARING. REMOVE ONLY THE 3 THAT HOLD THE OUTER GOLD COVER PLATE.

IF NEEDED YOU CAN REMOVE THE INNER CIRCLE GOLD COVER HELD IN PLACE BY ONE SHORT SCREW

NEXT INJECT HIGH TEMPERATURE FOOD GRADE QUALITY GREASE INTO OPEN BEARING AND PRESS GREASE IN PLACE. IN GENERAL WE RECOMMEND SUPER LUBE HIGH TEMP FOOD GRADE GREASE.

NEXT REASSEMBLE BY PUTTING GOLD COVER BACK OVER BEARING AND TIGHTEN THE SCREWS IN PLACE.

THIS SHOULD BE DONE EVERY COUPLE MONTHS.

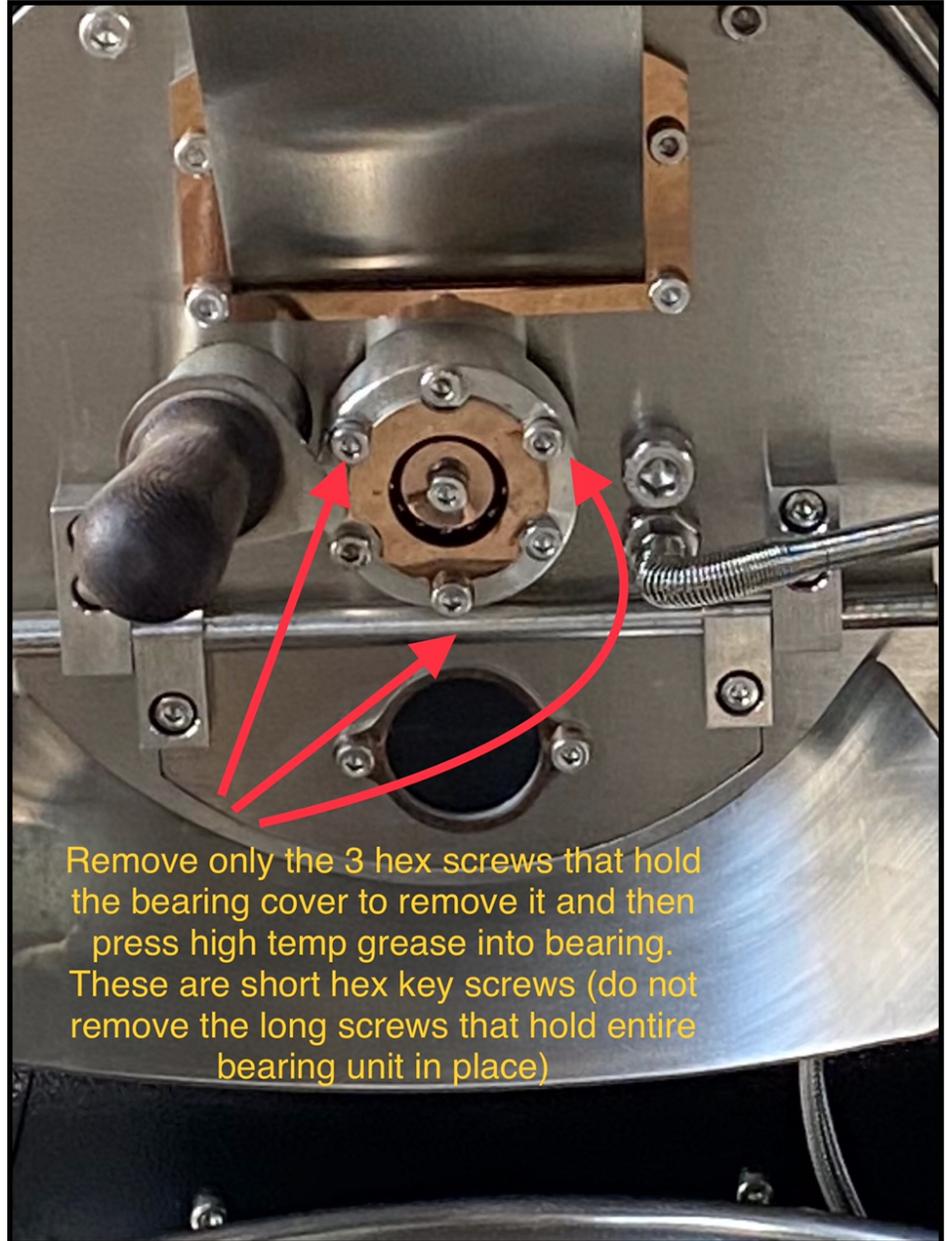

Remove only the 3 hex screws that hold the bearing cover to remove it and then press high temp grease into bearing. These are short hex key screws (do not remove the long screws that hold entire bearing unit in place)