



How to remove the drum




Firstly, take down the stainless clamp

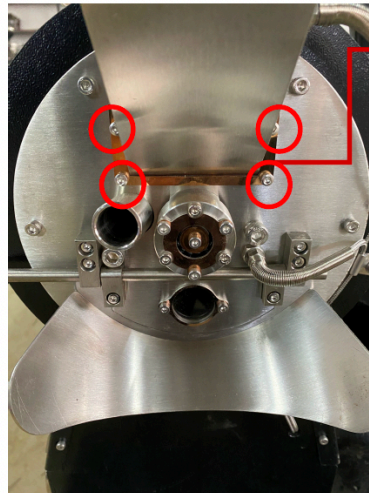


Secondly, loosen these bolts, then take down the whole neck.

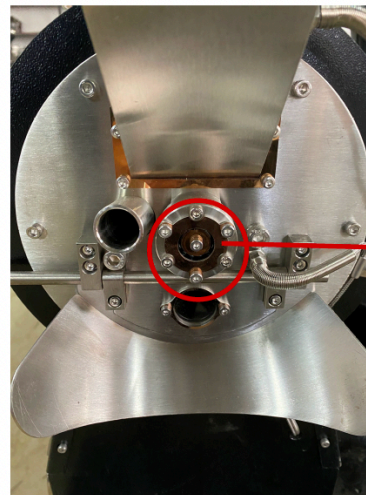


Thirdly, Loosen these 7 bolts which are holding the bearing. Take down the bearing holder and the bearing. There is a possibility that the bearing is difficult to be taken down, if so, please use a tool, like hammer to help with this.

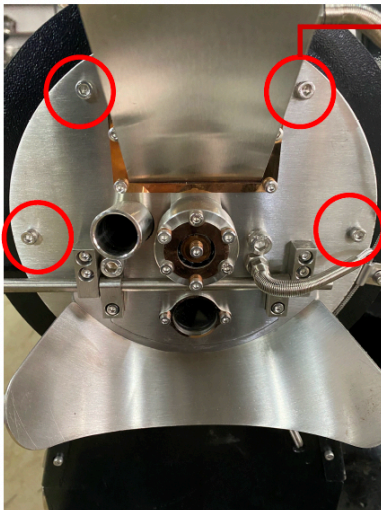

Fourthly, Loosen these bolts which are holding the front panel. Then take down the front panel.

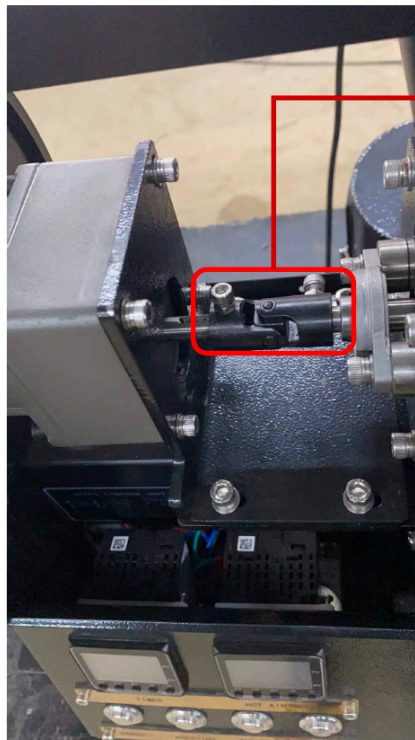

Fifthly, remove the housing cover, then you will see the motor, the bearing and the coupler. There are 2 bolts on the coupler, please loosen them and take down the coupler.

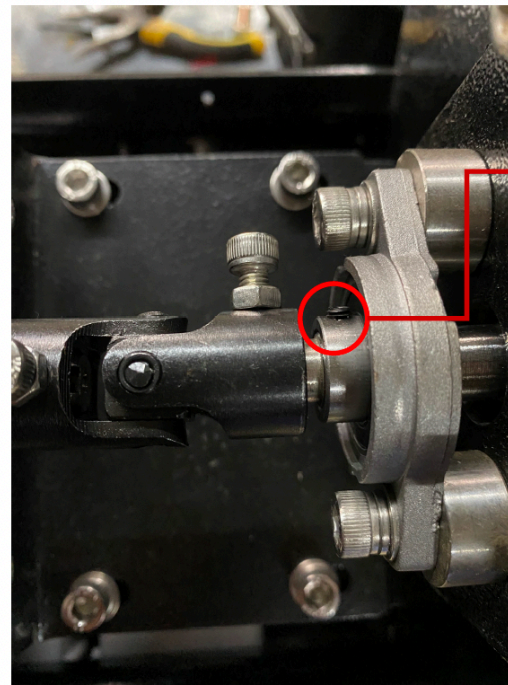

Finally, please loosen the set screw. Don't need to take down the back bearing. Then you can remove the drum.

Then use the same way to install a new drum.