



Annual Generator Maintenance

General Appearance:

- Remove debris from the generator
- Examine for visual damage or unusual wear and tear.
- Including all visible connections and guards for proper safety protection and fastening.

Cooling System:

- Ensure there are no obstructions in the air intake and discharge ventilation (for air-cooled systems).
- Check coolant levels and top off if necessary for liquid-cooled units.

Oil System:

- Check engine oil level and inspect for leaks in engine seals.
- Replace engine oil, filters, and gaskets if needed.

Engine:

- Replace air filter and clean the air box as needed.

Battery:

- Clean and tighten battery terminals as required.
- Inspect battery charge.

Automatic Transfer Switch:

- Inspect voltage output
- Check all programming and settings if accessible.