


## BC-2 BALANCE THE DRUM: DRUM REALIGNMENT

CHECK THE GAP BETWEEN THE DRUM AND FRONT PLATE, IT SHOULD BE ABOUT 2MM. IF THE GAP IS TOO SMALL, YOU CAN REMOVE DRUM HOUSING (LOOSEN BOLTS ON BOTH SIDES AND REMOVE HOUSING) THEN LOCATE THE BACK BEARING:

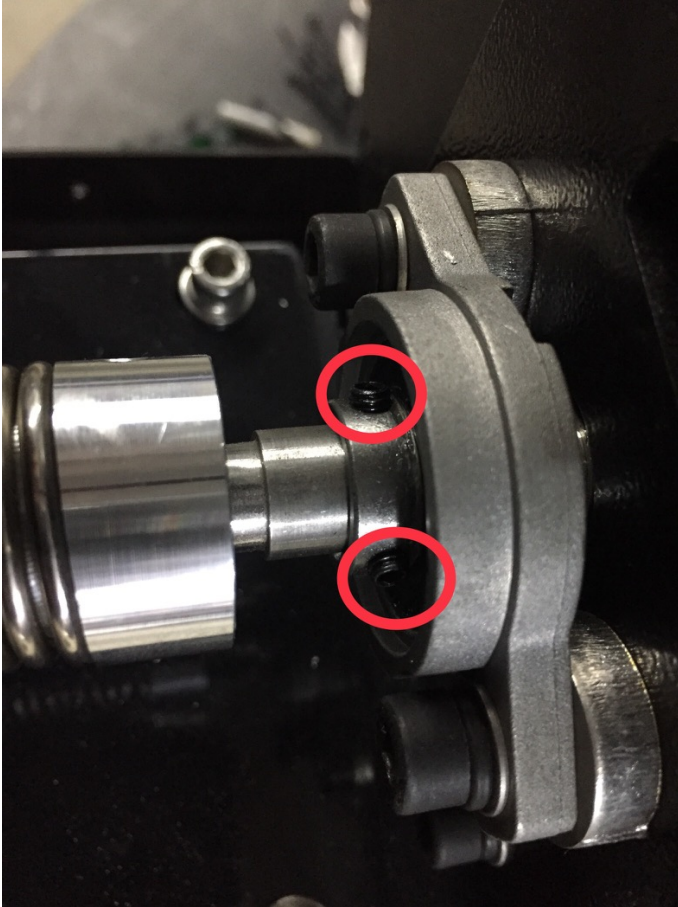

LOOSEN 2 SCREWS OF THE BACK BEARING, AND KNOCK THE FRONT END OF DRUM CHART (NO NEED TO LOOSE THE SCREW), MAKE SURE THE GAP ABOUT 2MM, THEN LOCK TWO SCREWS OF BACK BEARING AND TEST THE MACHINE.

