

BC DRUM NOISES


BC DRUM MAKING NOISE (VIBRATION)

GENERALLY THERE ARE TWO SOUNDS THAT CAN COME FROM DRUM:

1. A RUBBING CLUNKING SOUND WHEN DRUM IS OUT OF ALIGNMENT AND HAS MOVED TO CLOSE TO FRONT PLATE IN ROASTER AND WHEN HEATED IT EXPANDS DRUM AND MAKES THE CLUNKING SOUND OR
2. THE CHAIN ON DRUM MOTOR BECOMES TOO TIGHT OR TOO LOOSE CAUSING VIBRATION AT VARIOUS DRUM SPEEDS.

1. IF YOU THINK IT'S THE FIRST ISSUE THERE ARE VIDEOS AND A PDF ON THE TECH PAGE TO SHOW HOW TO REALIGN DRUM:

[HTTP://WWW.BUCKEYECOFFEE.COM/TECH-SUPPORT.HTML](http://www.buckeyecoffee.com/tech-support.html)

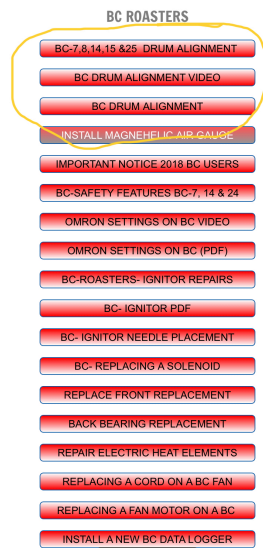

2. IF IT IS THIS LATTER ISSUE YOU WILL NEED TO REMOVE HOUSING COVER AND LOOSEN THE 4 BOLTS HOLDING MOTOR TO ROASTER AND ADJUST. IF CHAIN SEEMS TOO TIGHT THEN GIVE IT JUST A BIT OF SLACK. OR IS IT IS VERY LOOSE GIVE IT A BIT MORE TENSION. MAKE SURE THE MOTOR IS LEVEL AND NOT PUSHED DOWN MORE ON ONE SIDE THAN THE OTHER AND MAKE SURE CHAIN IS VERTICAL NOT SLANTING IN ONE DIRECTION.

HERE IS A PICTURE OF WHERE THE 4 BOLTS ARE LOCATED THAT HOLD MOTOR ON AND ALLOW TENSION ADJUSTMENTS. YOU ALSO MAY NEED TO GREASE CHAIN AS WELL:

