

D153-23


Digital Cabinet locks

Electronic Lock Instruction Manual (Private/Public)

V1.0



Product Introduction

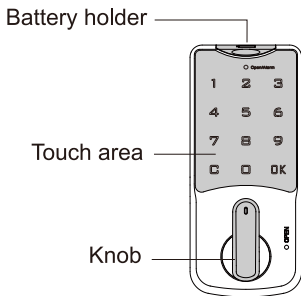


- Smart touch screen, high-end experience.
- User code can be 1 to 15 digits in length, 100000 of possible combination.
- The password is set and changed by the user, and it is automatically saved when the power is off, and the code will never be dropped and garbled.

Public and private switchover

(the password will be restored to the factory password after switching)


This small plastic slider moves to the down “G” position, switches to a public function.

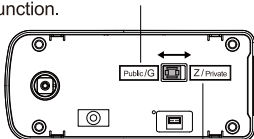


Moves to the up “Z” position to a private function.

Install the battery

1. Push the battery holder upwards and insert the battery.

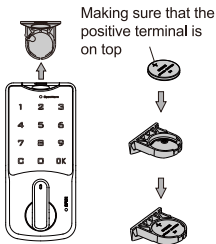

2. Insert the battery holder, press any button to have an audible and visual prompt, it proves installation correct.

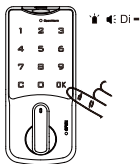


How to use the private mode

The password is valid for a long time, and the old password can be changed, which is suitable for private use.


1). Factory default password

(The factory default password is 12345678)

1. Enter the factory password, press the OK button again, and hear a long beep.

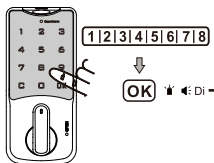


2. Turn the knob to the "OPEN" position and the unlock is successful.

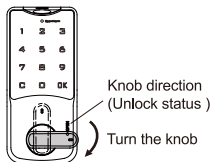


2). Locked

1. Turn the knob counterclockwise.

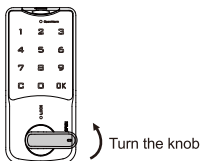


2. The knob returned to "LOCK" position and the lock was successful.

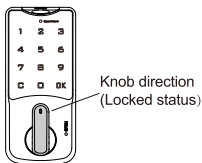

3). Change password (1-15 digit passcode can be set)

Example: Change the factory password to "88888888"

Operation method: old password + C + new password + OK — the code is changed successfully.

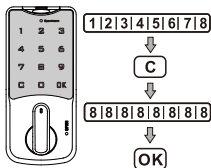

8|8|8|8|8|8|8|8 = ✓



password:88888888

Please remember and keep your password safe in case you lose it.

How to use the public mode

Public mode is one-time password, user code will be overridden after unlocking. Which is suitable for public area.

The factory default password is "123123", pls follow the instructions below:

1

➤ Open the door and deposit the items

2


- Close the door
- Set a 6-digit password
- Turn the knob to the "LOCK" position

3


- Enter the same 6-digit as previous setting code
- Turn the knob to the "OPEN" position
- Open the door to pick up the object

Alarm function

1. If the user enter the wrong password 4 times in a row, it will call an alarm for 60 seconds.

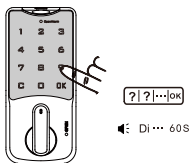


2. Enter the correct password to dismiss the alarm.

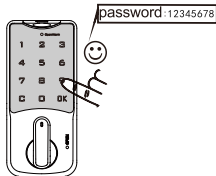


Replace the battery

1. After unlocking, if there are three "Dididi" sounds, it means that the battery is insufficient, please replace the battery.

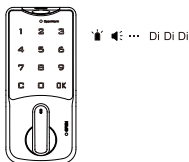

2. Replace the battery as shown in steps 1-2-3 below.

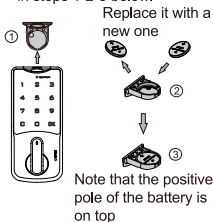


⚠ Prompt

This lock uses a button battery (Model: CR2032 3V), the battery can generally be used for 1 year when fully power, when the power is insufficient, it will emit three prompt tones of "Di, di, di" when unlocking, please replace the battery as soon as possible.


Installation Instructions

Left opening


1. Drill holes

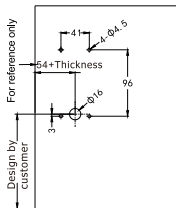


2. Install lock with supplied hardware

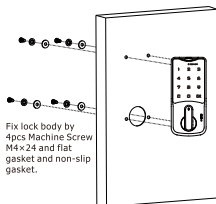

3. Install supplied CAM and screws

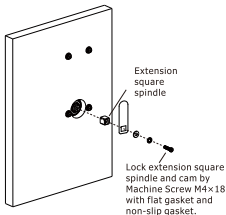


4. Install L-type strike plate using supplied screws

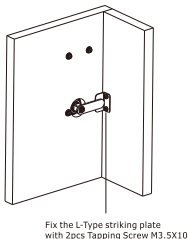


Right opening


1. Drill holes

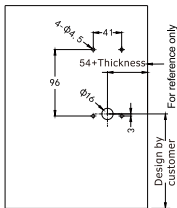


2. Install lock with supplied hardware

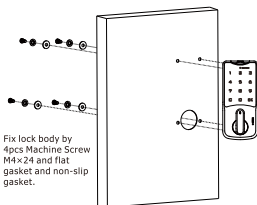




3. Install supplied CAM and screws

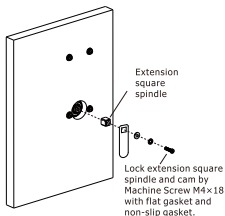


4. Install L-type strike plate using supplied screws

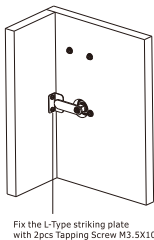

Lock size (mm)

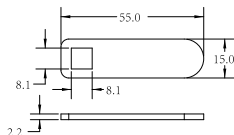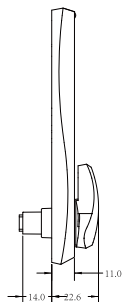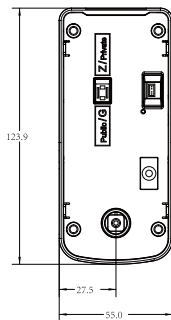

CM03(Wooden Cabinet)

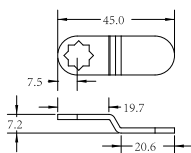

CM10(Metal Cabinet)