



Sentry III Wiring Diagram


**Warning: Unplug unit before changing Sentry III**

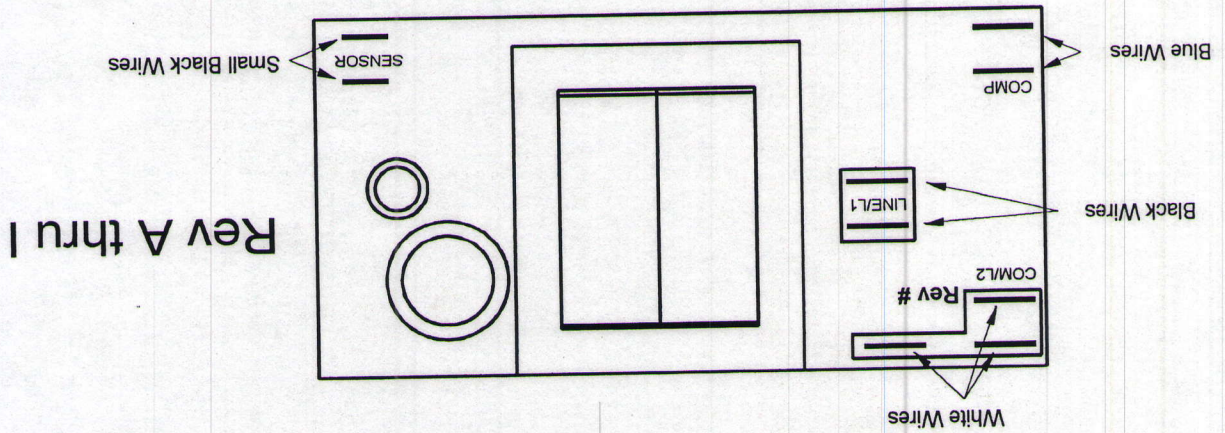

Rev A thru I

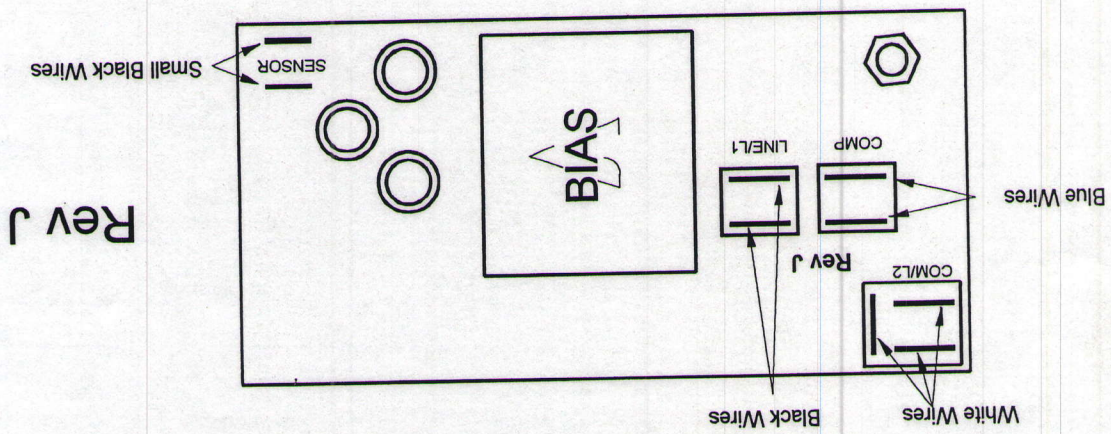

Rev J

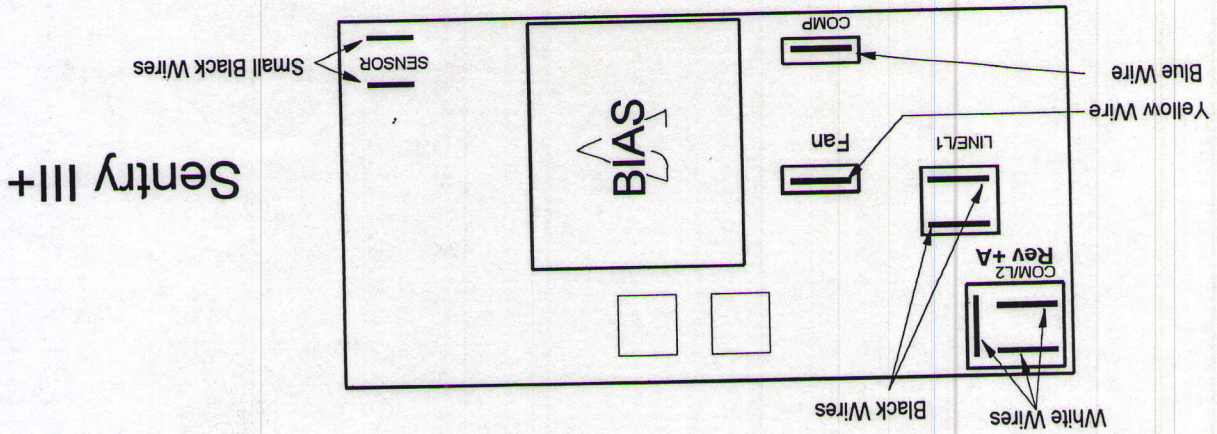

Sentry III+