



## Setup Code list for DirecTV RC71H Remote Control

**\*\*Note:** In order to program the RC71H remote control; Press and hold “Select” & “Mute” keys for 3 seconds (until the visible green LED blinks twice) → Press the first digit of the code → Wait for 2 green LED blinks → Press the rest of the code. If a valid code has been entered, the green LED will blink twice.

### ##### Setup Codes For Audio - Accessory (M) #####

ZVOX 32332, 32334

### ##### Setup Codes For Satellite Set Top Box (S) #####

DirecTV 00001, 00002, 00003, 00004,  
00005, 00006, 00007, 00008,  
Hughes Network Systems 00001  
Humax 00001  
Qwest 00001  
Samsung 00001

### --- SAT/PVR Combination (S) ---

DirecTV 00001, 00002, 00003, 00004,  
00005, 00006, 00007, 00008,  
Humax 00001  
Samsung 00001

### ##### Setup Codes For Television (T) #####

Aaxa 13634  
Acer 11339  
Admiral 10093, 10463, 10179  
Advent 11570  
Affinity 13577, 13716, 13717  
Aiwa 11362, 11916  
Akai 10702, 11675, 10765, 10672,  
11207, 11385, 11688, 11690,  
11692, 11903, 11935, 12232  
Akura 11498  
Alaron 10179  
Albatron 10700  
America Action 10180  
Anam 10180  
AOC 11589, 12087, 11089, 11365,  
11590, 12014, 12402, 12621,  
13707  
Aomni 11623



## Setup Code list for DirecTV RC71H Remote Control

---

Apex Digital	12397, 10748, 10765, 10890,
11217, 11943	
Astar	11531
Asus	13340
Audiosonic	11675
Audiovox	11564, 10451, 10180, 13410,
13065, 12513, 12413, 12121,	
11769, 11766, 11276, 10875,	11951, 11937, 11868, 11865,
	10846, 10802, 10623
Auria	12087, 12277
Aventura	10171
Axion	11937
Bang & Olufsen	11620
Bell & Howell	10154
BenQ	11756, 11315, 11562
Berkshire	10047
Bradford	10180
Broksonic	10463, 11911, 11935, 11938
Byd:sign	11311
Candle	10186
Carver	10054
CCE	10623
Celera	10765
Champion	11362
Changhong	10765
Citizen	10060, 10186, 11672, 11935
Clarion	10180
Claris	13807
Coby	13478, 13646, 13629, 13627,
13493, 13202, 12560, 12348,	
12326, 12315, 12314, 12306,	12347, 12344, 12340, 12338,
	12017, 11634, 11538
Commercial Solutions	11447, 10047
Conia	11498
Contec	10180
Cornea	13677
Craig	10180, 13423
Crosley	10054, 13115
Crown	10180
CTX	10700
Curtis	12397, 11326, 12352, 12466,
12855, 12859, 13228, 13577,	
	13636, 13895, 13939
Curtis Mathes	10702, 10054, 10093, 10060,
10047, 10154, 10451, 10145,	
	11661, 11347, 11959
CXC	10180
Cytron	11326



## Setup Code list for DirecTV RC71H Remote Control

---

Daewoo	10154, 10451, 11661, 10623,
10661, 10672, 13115	
Dell	11264, 11863
Denon	10145
Digital Lifestyles	11765, 11822
Disney	11665, 11892
Dumont	10017
Durabrand	10178, 10171, 10463, 10180,
11463, 11570, 11595, 11665	
Dynex	12049, 11463, 12184
Electric Mirror	13166
Electrograph	11755, 11623
Electrohome	10463, 11570, 11670, 11672
Electron	12855
Element	11886, 12183, 12964, 13559
Elite	13867
Emerson	11864, 11394, 11886, 10178,
10171, 10154, 10451, 10463,	
	10180, 11661, 11595, 11665,
10623, 10179, 11911, 11913,	
	11944, 11963, 12183, 13559
Emprex	11422, 11765
Envision	11589, 12087, 11365, 12014
Epson	11122
ESA	10171, 11595, 11944, 11963
Fisher	10154, 11362
Fluid	12964
Fujimaro	11498
Fujitsu	10809, 10179, 10186, 10853
Fujitsu Siemens	10809
Funai	11394, 10171, 10180, 10179,
11271, 11904, 11913, 11963	
Futuretech	10180
Gateway	11756, 11755
GE	11447, 10178, 10047, 10051,
10451, 10765, 11347, 11547,	
	11917
GFM	11864, 11886, 10171, 11665,
11963	
Gibraltar	10017
GoldStar	10178
GPX	10179, 12617, 12784, 13402
Grunpy	10180, 10179
H & B	11366
Haier	11753, 11749, 11748, 11570,
12293, 12309, 12494, 12690,	
	13204, 13382
Hallmark	10178
Hanns.G	11783



## Setup Code list for DirecTV RC71H Remote Control

---

Hannspree	11348, 11351, 11352, 11745,
11783, 12786	
Harley Davidson	10179, 11904
Harman/Kardon	10054
Harvard	10180
Havermy	10093
Helios	10865
Hello Kitty	10451
Hewlett Packard	11642, 11494, 11089, 13126
Hidear	13817
Hisense	10748, 11314, 11660, 12183,
13519	
Hitachi	11643, 10145, 10679, 10797,
11484, 11576, 11904, 12207,	
	12756
Hyundai	11219, 13418
iLo	11394, 11463, 11286, 11603,
11665, 11684, 11990, 13149	
Infinity	10054
InFocus	11366
Initial	11603, 11990
Insignia	12049, 11423, 11564, 10171,
10463, 12751, 12432, 12417,	
	12184, 12088, 12002, 11963,
11892, 11660, 11641, 11517,	
	11385, 11326, 11204
Inteq	10017
iRIS	12189
iSymphony	13094, 13118, 13382
JBL	10054
JCM	12189, 12256
Jensen	11299, 11326, 12541, 13204
JVC	11601, 12271, 12264, 10650,
11774, 10463, 10731, 11253,	
	11352, 11670, 11923, 12321,
13650, 13854	
KDS	11498
KEC	10180
Kingston	13284
Klegg	11366
KLH	10765
Konka	11385
Kost	11483
KTV	10180
Lasonic	13198
LG	11423, 12358, 12731, 12424,
12834, 10178, 10017, 11265,	
	10700, 12612, 12864, 13941
Lloyd's	11904
LodgingStar	13147



## Setup Code list for DirecTV RC71H Remote Control

---

LXI	10156, 10054, 10178, 10047,
10154	
MAG	11498
Magnasonic	11913
Magnavox	11867, 11454, 11455, 12597,
12372, 11755, 10054, 10171,	
	10051, 10706, 13292, 12492,
10179, 11990, 11963, 11944,	
	11931, 11913, 11904, 10186,
11856, 10230, 10802, 11365,	
	11198, 11054, 11012
Marantz	11454, 10054, 10704, 11054,
11154, 11398, 11714	
Matsushita	10250, 10650
Maxent	11755, 11714, 11757
MB Quart	11868
Megapower	10700
Megatron	10178, 10145
Memorex	10178, 10154, 10463, 10150,
10179, 11570, 11665, 11670,	
	11892, 11903, 11911, 11924,
11927, 11938, 12739	
MGA	10178, 10150
Midland	10047, 10017, 10051
Mintek	11603, 11990
Mitsubishi	11250, 10093, 10178, 10150,
11797, 11917	
Monivision	10700
Motorola	10093
MTC	10060
Multitech	10180
Mx Onda	11498
NAD	10156, 11156, 10178
Naxa	12104, 12735, 13154, 13382
NEC	10704, 11398, 11704, 11797,
12293, 13257	
NetTV	11755
Nexus Electronics	12183
Nikko	10178
Nimbro	12104
Norcent	11589, 10748, 11089, 11365,
11590, 11591, 11745	
Norwood Micro	11286
NuVision	11657, 12158
Ölevia	11610, 11144, 11240, 11331
Onwa	10180
Optimus	10250, 10650, 10154, 11913,
11924, 11927	
Optique	12189
Optoma	11348



## Setup Code list for DirecTV RC71H Remote Control

---

Optonica	10093
Orion	10463, 11463, 10179, 11911,
11938, 13540	
Otic	11498
Panasonic	11480, 10250, 11291, 12264,
10650, 10051, 11271, 11924,	
	11927, 11941, 11946, 11947,
12240, 12654	
PARK	11376, 12104, 12194, 12202
Penney	10156, 10178, 10060, 10047,
10051, 11347	
Philco	11394, 10054, 10171, 10179,
11271, 11665, 11963	
Philips	11867, 11454, 11455, 11744,
12597, 12372, 11394, 10054,	
	10171, 13565, 13292, 12740,
12665, 12652, 12492, 11990,	
	11961, 11944, 11856, 11483,
11365, 11154, 11054, 11012,	
	10230
Pioneer	11457, 10679, 11260, 11398,
12240, 13254	
Planar	11589
Polaroid	11523, 11498, 10765, 11276,
11286, 11314, 11316, 11326,	
	11385, 10865, 11538, 11762,
11766, 11767, 11769, 11826,	
	12002, 12121
Portland	10451, 11661
Power Acoustik	11865
Prima	11753, 11749
Princeton	10700
Prism	10051
Proscan	11447, 10047, 11347, 12147,
12183, 12256, 13382, 13577,	
	13717
Proton	10178
Proview	11498
Pulsar	10017
Pyle	12196, 12641
Quasar	10250, 11291, 10650, 10051,
11924, 11927	
RadioShack	10178, 10047, 10154, 10180,
11904	
RCA	11447, 12434, 12746, 12932,
12187, 10093, 10047, 10051,	
	11661, 13938, 13717, 13577,
13382, 13147, 12855, 12183,	
	12002, 11959, 11958, 11917,
11868, 11781, 11547, 11385,	



## Setup Code list for DirecTV RC71H Remote Control

---

Realistic	11347, 10679, 10090
RevolutionHD	10178, 10154, 10180
Runco	11623
Sampo	10017, 11398
Samsung	11755
10766, 10814, 11060, 11235,	10702, 10650, 10178, 10060,
12733, 12814	11267, 11903, 11959, 12596,
Sansui	10171, 10463, 11463, 11409,
11670, 11892, 11904, 11911,	11935, 11938, 13540, 13564
Sanyo	11142, 10054, 10154, 10088,
11362	10878, 11217, 11360, 11599,
Sceptre	12337, 12506, 12528
Scotch	10178
Scott	10178, 10180, 10179, 11711
Sears	10156, 10054, 10178, 10047,
10171, 10154, 10179, 11904	10178, 12964, 13559, 13560,
Seiki	11351
13953	11865
Seleco	12360, 10818, 10093, 11393,
Sens	11917, 12402, 13867
Sharp	Sheng Chia 10093
11917, 12402, 13867	Sherwood 11399, 13061
Sheng Chia	Sigmat 13423, 13477
Sherwood	Signature 10054
Sigmat	Silo Digital 13794
Signature	Simpson 10186
Silo Digital	Skyworth 11799, 13253
Simpson	Solé 11366, 11483, 11623
Skyworth	Sony 11300, 11317, 11685, 11786,
Solé	11791, 11904, 12736
Sony	Soundesign 10178, 10180, 10179, 10186
11791, 11904, 12736	Soyo 11520, 11826
Soundesign	Spectroniq 11498
Soyo	Squareview 10171
Spectroniq	SSS 10180
Squareview	Starlite 10180
SSS	SunBriteTV 11610, 11420, 11435, 12337,
Starlite	12528, 12925, 12935
SunBriteTV	Superscan 10864, 10093, 11944
12528, 12925, 12935	Supersonic 11753, 12104, 12784, 13154,
Superscan	13204, 13593, 13595, 13877,
Supersonic	13894
13204, 13593, 13595, 13877,	SVA 10748, 10865, 11963
SVA	



## Setup Code list for DirecTV RC71H Remote Control

---

Sylvania	11864, 11394, 11886, 10054,
10171, 11271, 11314, 11595,	
	11665, 11913, 11931, 11944,
11963	
Symphonic	11394, 10171, 10180, 11595,
11904, 11913, 11944	
Syntax	11610, 11144, 11240, 11331
TAG	13498
Tandy	10093
Tatung	11756, 11286
TCL	12434
Technics	10250, 10051
Technol Ace	10179
Techwood	10051
Teknika	10054, 10060, 10180, 10150,
10179, 10186	
Telefunken	10702
Thomas America	11904
TMK	10178
TNCi	10017
Toshiba	11524, 11656, 10156, 11156,
11256, 11936, 12006, 10650,	
	10060, 10154, 11265, 11369,
11343, 11704, 11916, 11935,	
	11945, 11959, 12667, 12684
Toshinaer	13576
TruTech	11665, 11723, 12066
TVS	10463
US Logic	11286
Venturer	11865, 11868
Vidikron	10054, 11398
Vidtech	10178
Viewsonic	12049, 10864, 11755, 11564,
12087, 13706, 12839, 12745,	
	12277, 12111, 12014, 11742,
11627, 11578, 11542, 11365,	
	11330, 10885, 10857, 10797
Viore	11207, 11684, 11811, 12104,
12352, 13094, 13118, 13159,	
	13382
VisionQuest	13380
Vivitek	11369
VIZIO	11758, 13758, 12757, 10864,
11756, 10885	
Vuon	13418
Wards	10156, 11156, 10054, 10178,
10060, 10047, 10154, 10017,	
	10051, 10180, 10179, 10186,
11347	
Waycon	10156





## Setup Code list for DirecTV RC71H Remote Control

---

Westinghouse	11712, 13470, 13579, 12397,
10451, 13949, 13908, 13382,	
	13094, 12499, 12293, 12195,
11577, 11300, 11282, 11217,	
	10890, 10885
White Westinghouse	10463, 11661, 10623
Wyse	11365
Yamaha	10797, 11576
Zenith	11423, 12358, 12731, 10178,
10047, 10017, 10463, 11265,	
	10145, 11661, 11365, 11904,
11911, 12612, 12742	
--- 3D TV (T) ---	
Coby	13478
Dynex	12049
Elite	13867
Hisense	13519
LG	11423, 12731, 12424, 11265
Panasonic	11480, 11941
Sanyo	11142
Sceptre	12337
Sharp	12360, 13867
Toshiba	11524
VIZIO	11758, 13758
--- DLP (T) ---	
Audiovox	11951
Durabrand	11665
Hewlett Packard	11494
iLo	11463
LG	11423, 11265
Mitsubishi	11250
NuVision	12158
Orion	11463
Panasonic	11480, 11291, 10650
Philips	11867
RCA	11447
Samsung	11060
Sansui	11463, 11892
Toshiba	11524, 11265
Viore	11811
--- LCD (T) ---	
Acer	11339
Akai	11675, 11385, 11688, 11692,
11935, 12232	
AOC	11589, 12087, 11365, 12014,
12402, 12621	
Aomni	11623



## Setup Code list for DirecTV RC71H Remote Control

---

Apex Digital	12397, 10890, 11217
Astar	11531
Asus	13340
Audiosonic	11675
Audiovox	11564, 10180, 13410, 13065,
12513, 12413, 12121, 11951,	
11766, 11276, 10875, 10846,	11937, 11868, 11865, 11769,
	10802
Auria	12087, 12277
BenQ	11315, 11562
Byd:sign	11311
Citizen	11672, 11935
Claris	13807
Coby	13478, 13646, 13627, 13493,
13202, 12560, 12348, 12344,	
12314, 12306, 12017, 11634,	12340, 12338, 12326, 12315,
	11538
Cornea	13677
Craig	13423
Crosley	13115
Curtis	12397, 12352, 12466, 12855,
12859, 13228, 13577, 13895	
Dell	11264, 11863
Digital Lifestyles	11765, 11822
Dynex	12049, 12184
Electric Mirror	13166
Electrohome	11672
Electron	12855
Element	11886, 12183, 12964, 13559
Emerson	11864, 11394, 11886, 10171,
11963, 12183, 13559	
Emprex	11422, 11765
Envision	11589, 12087, 11365, 12014
Epson	11122
Fluid	12964
Funai	10171
GFM	11864, 11886
GPX	10179, 12617, 12784, 13402
H & B	11366
Haier	11753, 11749, 11748, 12293,
12309, 12690, 13382	
Hanns.G	11783
Hannspree	11348, 11351, 11352, 11745,
11783, 12786	
Hewlett Packard	11642, 11494, 13126
Hidear	13817
Hisense	11314, 11660, 12183, 13519
Hitachi	11643, 11576, 12207, 12756



## Setup Code list for DirecTV RC71H Remote Control

---

Hyundai	11219, 13418
iLo	11394, 11286, 11603, 11684,
11990, 13149	
InFocus	11366
Initial	11603, 11990
Insignia	12049, 11564, 11204, 11517,
12002, 12184, 12417, 12751	
iRIS	12189
iSymphony	13094, 13118, 13382
JCM	12189, 12256
Jensen	11299, 12541, 13204
JVC	11601, 12271, 11774, 11253,
11670, 12321, 13650, 13854	
Kingston	13284
Klegg	11366
Kost	11483
Lasonic	13198
LG	11423, 12358, 12731, 12424,
12834, 10178, 11265, 12864	
LodgingStar	13147
Magnavox	11455, 12372, 10802, 11012,
11198, 11365, 11944, 11990,	
	13292
Marantz	11454
Maxent	11755, 11714, 11757
MB Quart	11868
Memorex	10179, 11570, 11670, 11892,
12739	
Mintek	11603, 11990
Mitsubishi	11250, 10150, 11797
Naxa	12104, 12735, 13154, 13382
NEC	11398, 11797, 12293, 13257
Nexus Electronics	12183
Norcent	11589, 11089, 11365, 11591,
11745	
Norwood Micro	11286
NuVision	11657, 12158
Ölevia	11610, 11144, 11240, 11331
Optique	12189
Orion	13540
Panasonic	11480, 11291, 10650, 11941
PARK	12104, 12194, 12202
Philco	11394, 10171, 11963
Philips	11867, 11454, 11455, 11744,
12372, 10230, 11483, 11856,	
	13292, 13565
Pioneer	11260
Planar	11589
Polaroid	11523, 11498, 11276, 11314,
11316, 11538, 11762, 11766,	



## Setup Code list for DirecTV RC71H Remote Control

---

Prima	11767, 11769, 12121
Proscan	11753, 11749
13577	12147, 12183, 12256, 13382,
Pyle	12196, 12641
RCA	11447, 12434, 12746, 12932,
12187, 10047, 11781, 11868,	11958, 12183, 12855, 13382,
13577, 13938	
RevolutionHD	11623
Sampo	11755
Samsung	10702, 10766, 10814, 11235,
12596, 12733, 12814	
Sansui	11409, 11670, 11892, 11935,
13540, 13564	
Sanyo	11142, 11362
Sceptre	10878, 11217, 11360, 11599,
12337, 12506, 12528	
Scott	11711
Seiki	10178, 12964, 13559, 13560,
13953	
Sens	11865
Sharp	12360, 10818, 10093, 11393,
12402	
Sherwood	11399, 13061
Sigmac	13477
Silo Digital	13794
Skyworth	11799, 13253
Solé	11366, 11483, 11623
Sony	11317, 11685, 11786, 11791,
12736	
Soyo	11520, 11826
SunBriteTV	11610, 11420, 11435, 12337,
12528, 12925, 12935	
Superscan	10864
Supersonic	12104, 12784, 13154, 13204,
13593, 13595, 13877, 13894	
SVA	11963
Sylvania	11864, 11394, 11886, 10171,
11271, 11314, 11963	
Symphonic	11394, 10171, 11595
Syntax	11610, 11144, 11240, 11331
TAG	13498
Tatung	11286
TCL	12434
Toshiba	11524, 11656, 10156, 11256,
12006, 11343, 11935, 12667	
Toshinaer	13576
TruTech	11723
US Logic	11286



## Setup Code list for DirecTV RC71H Remote Control

---

Venturer	11865, 11868
Vidikron	11398
Viewsonic	12049, 10864, 11564, 12087,
10857, 10885, 11330, 11365,	11542, 11578, 11627, 11742,
12014, 12111, 12277, 12745	
Viore	11684, 11811, 12104, 12352,
13094, 13118, 13159, 13382	
VisionQuest	13380
Vivitek	11369
VIZIO	11758, 13758, 12757, 10864,
11756, 10885	
Vuon	13418
Westinghouse	11712, 13470, 13579, 12397,
13949, 13908, 13382, 13094,	12499, 12293, 12195, 11577,
11300, 11282, 11217, 10890,	10885
	11365
Wyse	11423, 10178, 10017, 11265,
Zenith	11365, 12612, 12742
--- TV/DVD Combination (T) ---	
Advent	11570
Affinity	13717
Akai	11675, 11935, 12232
Apex Digital	10765, 11943
Audiovox	11766, 11865, 11868, 11937,
11951, 12413, 12513, 13065,	13410
	11937
Axion	10463, 11935
Broksonic	11935
Citizen	11538, 12314, 12315, 12340,
Coby	13627
12344, 12347, 12560, 13202,	12466, 12855, 13895
	10171
Curtis	12049, 12184
Durabrand	11670
Dynex	11864, 11394, 11886, 11963
Electrohome	11963
Emerson	11394, 11963
ESA	11963
Funai	12617, 12784
GFM	11753, 11749, 11748, 12309
GPX	13519
Haier	12207, 12756
Hisense	11990
Hitachi	11990
iLo	
Initial	



## Setup Code list for DirecTV RC71H Remote Control

---

Insignia	12049, 11892, 11963, 12002,
12417, 12751	
iSymphony	13094
JVC	12271, 11774, 11670, 13854
LG	11423
Magnavox	11454, 12372, 11944, 11963,
11990	
Maxent	11714
Memorex	10463, 11670, 11911
Mintek	11603, 11990
Naxa	12104, 13382
Nimbro	12104
Panasonic	10051, 11924, 11927, 11941,
11947, 12654	
Philco	11963
Philips	11454, 12372, 11394, 11961,
12740	
Polaroid	11523, 11538, 11766, 11769,
12002	
Power Acoustik	11865
Prima	11753
Proscan	12256
Pyle	12196
RCA	11447, 12746, 12932, 12187,
10047, 11868, 11958, 12002,	
	13382
Samsung	11903
Sansui	11670, 11935, 13564
Sceptre	12528
Sens	11865
Sharp	12360, 10818
Skyworth	11799, 13253
Supersonic	11753, 12104, 12784, 13593,
13595, 13877, 13894	
Sylvania	11864, 11394, 11886, 10171,
11944, 11963	
Symphonic	11595, 11944
Toshiba	11524, 11656, 11256, 12006,
11935, 12667, 12684	
TruTech	12066
Venturer	11865, 11868
Viewsonic	12049, 10864
Viore	11811, 12104, 12352, 13094,
13118, 13382	
VisionQuest	13380
Westinghouse	11712, 11300