


2ND SEASON OVERHEAD CONSOLE PUSHBUTTON SET MANUAL

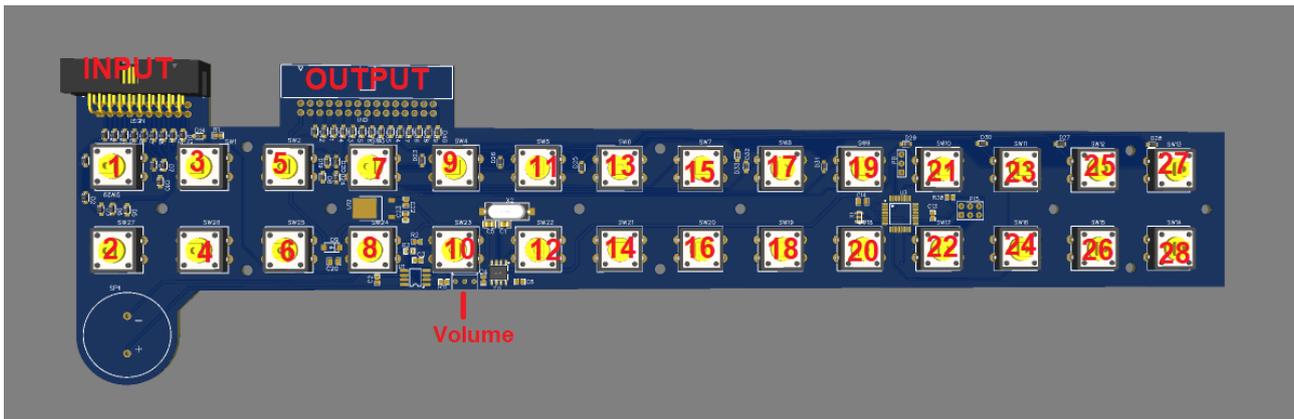

Flat INPUT cable for tonegen (narrow):

- 1 – red positive cable +12v
- 2 - ground
- 3 - temporary negative input
- 4 - temporary negative input
- ...up to 20 - temporary negative input

Flat OUTPUT cable (large):

- 1 - red positive cable +12v
- 2 - ground
- 3 - pushbutton 1
- 4 - pushbutton 2
- ...up to 30 pushbutton 28

Max Output rate = 50mA @ 12VDC (for signals only, do not connect high power elements such as engine starter)

A positive and a negative must be connected just on one of the two flat cables, not both flats.

Do not use these the pins as a power supply for external devices