Operating Instruction and Parts Manual

Instrucciones de operación y manual de partes de los modelos d'instructions d'utilisation et de pièces pour le modèle





WARNING

DO NOT ATTEMPT TO START OR OPERATE THE MACHINE UNTIL ALL THE INSTRUCTIONS HAVE BEEN READ AND UNDERSTOOD BY THE OPERATOR. FAILURE TO DO SO COULD RESULT IN SERIOUS BODILY INJURY AND/ OR PROPERTY DAMAGE!

PRODUCTS, LLC

10601 S Sam Houston Pkwy, STE 140 Houston, TX 77071 281-313-2506 • 800-469-4178

SET-UP OR OPERATING ASSISTANCE WITH YOUR PRODUCT,

DO NOT RETURN TO ORIGINAL PLACE OF PURCHASE

oAfter referring to the operation manual, if assistance is still needed, please consult our web Site at

www.kushlanproducts.com

o From our web site you may **e-mail us** directly If assistance is still required, please call our customer service

department at 1-800-469-4178

Safety Alert Symbol: This safety alert symbol is used to attract your attention!

o Personal Safety is involved when you see this symbol, Pay extra attention, become alert-be sure to heed it's message. Failure to do so may lead to serious personal injury or damage may occur.

o Warnings and safety instruction: If these warnings and safety instructions are not read and carefully followed, serious personal injury could occur.

WARNINGS

- 1. Do not use, start, or attempt to operate this machine until all of the instructions have been read and fully understood.
- 2. Never allow anyone to operate this machine unless the person is well acquainted with these rules of safe operation.
- 3. Never operate this machine without all guards in place and firmly attached to the machine.
- 4. Make certain that the mixing drum is clear of obstructions and stand clear of the machine with out all guards in place and firmly attached to the machine.
- 5. When cleaning, lubricating, or adjusting the mixer, disconnect the power plug.
- 6. Keep all people (except operator) a minimum of five (5) feet away from the machine during operation.
- 7. Always make certain that the mixer is connected to a properly grounded electric circuit to protect the operator from possible electric shock.
- 8. Do not plug or unplug the motor while standing in or around damp or wet ground.
- 9. Do not start the motor if the drum is Fully loaded
- 10. Do not overload the mixer
- 11. Never attempt to move the mixer While the motor is on.

SAFETY INSTRUCTIONS For the safety of yourself and others around you, it is extremely important that you observe the following notes.

- 1. Keep hands and clothing away from moving parts at all times.
- 2. Do not operate this machine under the influence of alcohol or while taking medication that impairs the senses or reactions.
- 3. Make certain that the work area around the machine is clear of debris and obstructions.
- 4. Keep all unauthorized and untrained people away from the machine at all times.
- 5. Never let the mixer run unattended even for a brief moment.
- 6. Turn off the motor when you leave the machine.
- 7. Only use or operate the mixer on level ground to prevent the mixer from tipping over.
- 8. Do not abuse the power cord; i.e. Never yank on the cord to disconnect it. Keep the cord away from heat, oil, and sharp edges.
- 9. Do not overreach while working with the mixer. Keep proper Footing and balance at all times when loading or unloading the mixer.
- 10. Never allow children or inexperienced operators to operate or repair the mixer.
- 11. Use only factory authorized parts for replacement
- 12. Keep these operation instructions with the machine at all times
- 13. Always wear safety glasses and safety shoes when operating and moving equipment
- 14. Safety decals replace missing damaged safety decals.

Mixer Instructions

A. LUBRICATION: There are grease fittings on all models. Apply any type of EP grease until grease begins to come out of the bushings. **LUBRICATE ALL FITTINGS BEFORE EACH USE**


- B. GEARBOX MOTOR: Mixer shipped with lubricate/oil in gearbox. Change lubricate/oil every 200 hours. Use 8 ounces of 75W-90 oil.
- **C. GENERAL**: Check all screws for tightness before each use.
- **D. CONCRETE MIXING:** Do not insert sharp objects into the plastic mixing drum. Doing so will damage the drum.
- **E. CLEANING:** Do not spray water on or into the motor. Thorough cleaning of the mixer after each use is recommended and will add to the service life.

Model 1000DD Parts List

1 1000DD-1 Lower wheel Frame 1			PEGODIPTION	0 T V
2	ITEM	PART NO	DESCRIPTION	QTY
1 1000DD-3 Polyethylene Drum 1 1 1 1000DD-4 Inside Drum Plate 1 1 1 1 1 1 1 1 1	1	1000DD-1	Lower wheel Frame	1
1	2	1000DD-2	Frame Pivot	1
5 1000DD-5 Bottom Drum Plate 1 6 1000DD-6 Large Sprocket 1 7 1000DD-7 Gearbox Frame 1 8 1000DD-8 Ball Bearing 1 9 1000DD-9 Small Sprocket 1 10 1000DD-10 Screw 1 1/2" x 7 1 11 1000DD-11 Mounting Base Plate 1 12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 24 DD-1000 Gear Motor 1 15 1000DD-13 Screw 3/8"-35 1 16 1000DD-15 Screw 3/8"-35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 *8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Whe	3	1000DD-3	Polyethylene Drum	1
6 1000DD-6	4	1000DD-4	Inside Drum Plate	1
7 1000DD-7 Gearbox Frame 1 8 1000DD-8 Ball Bearing 1 9 1000DD-9 Small Sprocket 1 10 1000DD-10 Screw 1 1/2" x 7 1 11 1000DD-11 Mounting Base Plate 1 12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"-35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Gre	5	1000DD-5	Bottom Drum Plate	1
8 1000DD-8 Ball Bearing 1 9 1000DD-9 Small Sprocket 1 10 1000DD-10 Screw 1 1/2" x 7 1 11 1000DD-11 Mounting Base Plate 1 12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"-35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	6	1000DD-6	Large Sprocket	1
9 1000DD-9 Small Sprocket 1 10 1000DD-10 Screw 1 1/2" x 7 1 11 1000DD-11 Mounting Base Plate 1 12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"- 35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	7	1000DD-7	Gearbox Frame	1
10 1000DD-10 Screw 1 1/2" x 7 1 11 1000DD-11 Mounting Base Plate 1 12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"-35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	8	1000DD-8	Ball Bearing	1
11 1000DD-11 Mounting Base Plate 1 12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"- 35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	9	1000DD-9	Small Sprocket	1
12 1000DD-12 Dump Handle 1 13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"-35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	10	1000DD-10	Screw 1 1/2" x 7	1
13 1000DD-13 Handle Grips 2 14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"- 35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	11	1000DD-11	Mounting Base Plate	1
14 DD-1000 Gear Motor 1 15 1000DD-15 Screw 3/8"- 35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	12	1000DD-12	Dump Handle	1
15 1000DD-15 Screw 3/8"-35 1 16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	13	1000DD-13	Handle Grips	2
16 1000DD-16 Main Frame 1 17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	14	DD-1000	Gear Motor	1
17 1000DD-17 Screw M20 x 100 2 18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	15	1000DD-15	Screw 3/8"- 35	1
18 1000DD-18 300 * 8 Flat Free Wheel 2 19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	16	1000DD-16	Main Frame	1
19 1000-DD19 Wheel Axle Tube 1 20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	17	1000DD-17	Screw M20 x 100	2
20 1000DD-20 Draw Bar 1 21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	18	1000DD-18	300 * 8 Flat Free Wheel	2
21 1000DD-21 Wheel Bearing for Flat Free Wheel 4 22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	19	1000-DD19	Wheel Axle Tube	1
22 1000DD-22 Steel Washer 2 23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	20	1000DD-20	Draw Bar	1
23 1000DD-23 R-clip 2 24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	21	1000DD-21	Wheel Bearing for Flat Free Wheel	4
24 1000-17 Blades for 1000 (Not shown) 3 25 1000DD-29 Grease Fitting 1	22	1000DD-22	Steel Washer	2
25 1000DD-29 Grease Fitting 1	23	1000DD-23	R-clip	2
	24	1000-17	Blades for 1000 (Not shown)	3
26 1000DD-24 Chain 1	25	1000DD-29	Grease Fitting	1
	26	1000DD-24	Chain	1

Gearbox and	Motor	Assembl	v Par	ts List

_		JUX AIIU MULUT ASSEIIIDIY PARLS LISL	
Item	Part Number	DESCRIPTION	Qty
1	DD-1000	Gearbox and Motor Assembly (110V-60Hz)	1
2	DDMA-02	Screw (6x25mm)	1
3	DDMA-03	Seal (40mm)	1
4	DDMA-04	Screw (6x50mm)	4
5	DDMA-05	Gearbox Case Front Half	1
6	DDMA-06	Gearbox Gasket	1
7	DDMA-07	Pin (8x20mm)	1
8	DDMA-08	Locking Key For Gear and Axle (8x7x15mm)	1
9	DDMA-09	Gearbox Ball Bearing	1
10	DDMA-10	Gear (Z79)	1
11	DDMA-11	Locking Key for Gear Axle (5x5x12mm)	1
12	DDMA-12	Pinion (Z9)	1
13	DDMA-13	Gearbox Case Back Half	1
14	DDMA-14	Motor Seal (20mm)	1
15	DDMA-15	Space Washer A (30mm)	1
16	DDMA-16	Motor Bearing (6004z)	1
17	DDMA-17	Motor Casing	Seceral
18	DDMA-18	Motor Rotor	1
19	DDMA-19	Motor Bearing (6003z)	1
20	DDMA-20	Bell Housing	1
21	DDMA-21	Fan	1
22	DDMA-22	Screw (4x10mm)	4
23	DDMA-23	Fan Cover	1
24	DDMA-24	Bolt (5x135mm)	4
25	DDMA-25	Electric Panel (110V-60Hz)	1
26	DDMA-26	On/Off Switch	1
27	DDMA-27	Power Cord with Plug	1
28	DDMA-28	Screw (4x22mm)	1
29	DDMA-29	Electric Panel Gasket	1
30	DDMA-30	Support	1
31	DDMA-31	Screw (4x15mm)	1
32	DDMA-32	Condenser	1
33	DDMA-33	Manual Reset Themal Protector	1
34	DDMA-34	Electric Box Assembly	1
35	DDMA-35	Motor Gasket	1
36	DDMA-36	Gearbox Nut (6mm)	10
37	DDMA-37	Gearbox Washer (6mm)	10
38	DDMA-38	Gearbox Washer (6hm) Gearbox Bearing (36205)	1
39	DDMA-39	Space Washer B (30mm)	1
40	DDMA-40	Gear (Z68)	1
41	DDMA-41	Gearbox Bearing (36108)	1
41	DDMA-41 DDMA-42	Locking Pin (6x10mm)	2
42	DDMA-42 DDMA-43	Bolt (6x40mm)	1
43	DDMA-43 DDMA-44	Motor (110V-60Hz)	1
	+	Gearbox Washer (4mm)	1
45	DDMA-45	Screw (4x6mm)	8
46	DDMA-46	Gearbox Drive Shaft	
47 48	DDMA-47 DDMA-48	Stop Ring (30mm)	1
40	DDMA-40	Stop King (Sumin)	1

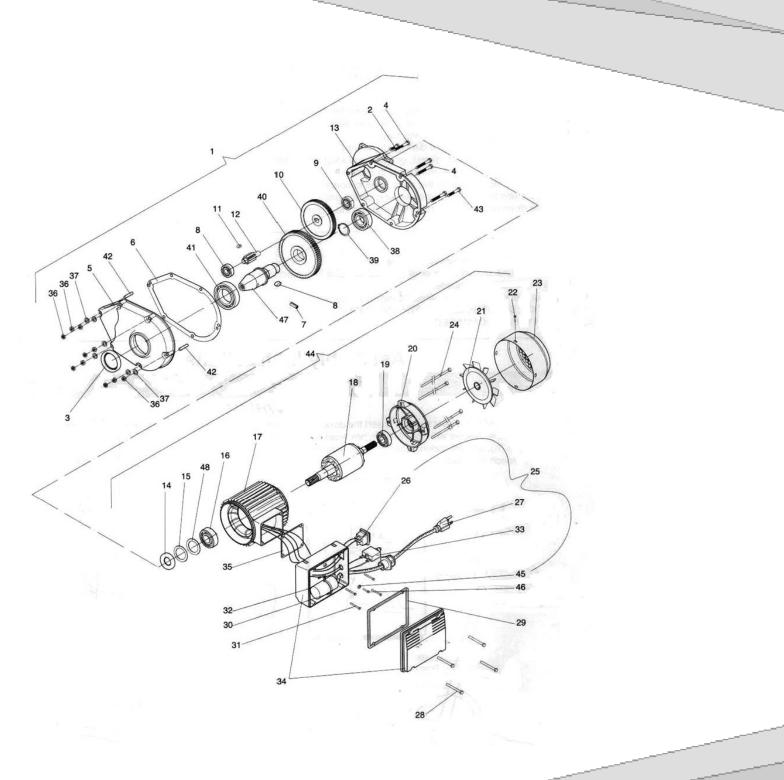

Assembly Instruction






Step 1. Insert Axle in Lower Wheel and Install Wheels.



Step 2. Install R-clip in Axle.




Step 3. Put Main Frame with Lower Wheel Frame and Install Bolt.

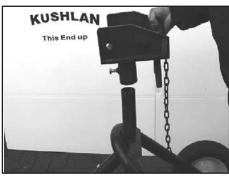


Step 4. Install Frame Pivot on Lower Wheel Frame and Tighten Bolt.




Step 5. Install Gear Box Frame with 5/8" \times 10" Pivot Pin.

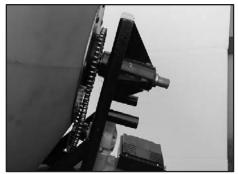

Step 6. Thread Drum into Bearing and Install Castle Nut and Install Cotter Pin.

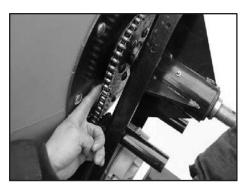

Step 7. Slide Gear Motor Down to Tighten. Chain Holes on Gear Motor Frame are Slotted to Provide Adjustment.

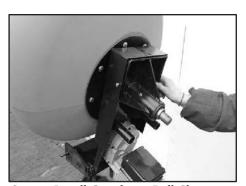

Step 8. Install Guard over Roll Chain.



Step 9. Install Castle Nut and Cotter Pin. Note: Do Not Over Tighten Castle Nut.

How To Mix Concrete -100

You will need approximately 6 gallons water

- ⋅4 to 5 –80 pound bags premix concrete
- ·Start mixer In motion
- ·Add 4 gallons water

Add 3-80 pound bags of premix concrete NOTE: MIXTURE WILL BE VERY SLOPPY

·Slowly add remaining(2)bags of premix

Add 1 gallon water slowly to obtain desired thickness

WILL YIELD 3 CUBIC FEET CONCRETE

How To Mix Sand & Gravel

Use an 8-1/2 x 12" square point shovel Portland cement, gravel or round stone And masonry sand

- ·Start mixer In motion
- ·Put In 4 gallons water
- ·Add 12 shovels full of gravel or round
- ·Add 4 shovels full of Portland cement Slowly add 8 shovels full masonry sand

NOTE: WATER WILL VATER WILL VARY ACCORDING TO MOISTURE CONTENT OF SAND & GRAVEL WILL YIELD 3 CUBIC **FEET CONCRETE**

Kushlan Products

Limited Warranty Policy

Kushlan Products makes every effort to assure that its products meet high quality and durability standards and warrants to the original retail consumer purchaser of our products (you) that each such product be free from defects in materials and workmanship as follows:

ONE(1)YEAR limited warranty on motors. This warranty covers replacement of parts found to be defective in material or workmanship for a period of 90 days from the date of purchase. This warranty does not apply to typical replacement of parts or assemblies that fail as a consequence of normal wear and tear, for example bushings, tires, belts, and pinion gears.

This warranty does not apply to defects due, directly or indirectly. To misuse abuse .negligence or accidents .Repairs or alter the actions outside our facilities or the lack of maintenance.WE LIMIT ALL IMPLIED WARRANTIES TO THE PERIOD SPECIFIED ABOVE FROM THE DATE OUR PRODUCT WAS PURCHASED AT RETAIL .EXCEPT AS STATED HEREIN. ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG THE IMPLED WARRANTY LASTS. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE SHALL IN NO EVENT BE LIABLE FOR DEATH, INJU- RIES TO PERSONES OR PROPERTY OR FOR INCIDENTAL, CONTINGENT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLU- SION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

To take advantage of this warranty, the product or part must be returned for examination, postage prepaid. To Kushlan Products. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection discloses a defect, we will either repair or replace the product, at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with repair or replacement, if you are willing to accept such refund. We will return the repaired product or replacement at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of storing and returning this product. This warranty gives you specific legal rights, and you may also have other right which vary from state to state. For service. Contact Kushlan Products 10601 South Sam Houston Pkwy West, Ste 140 o Phone (281)313-2506 Fax (281)313-2509

