

# On-Grid PV Inverter

Installation and Operation Manual



UGI New Energy Technology

**T** (042) 37456318 **F** +92 333 3120972, +92 317 4454362 **E** info: hassan@uniongroupindustries.com

**A**d Building #287, AbPara Housing Society, Canal Road Lahore, Punjab, Pakistan.

UGI New Energy Technology

# Contents

1. About This Manual . . . . .	1
1.1 Scope of Validity . . . . .	1
1.2 Target Group . . . . .	1
1.3 System Diagram . . . . .	1
2. Safety & Symbols . . . . .	3
2.1 Safety Precautions . . . . .	3
2.2 Explanations of Symbols . . . . .	4
3. Installation . . . . .	5
3.1 Pre-installation . . . . .	5
3.1.1 Unpacking & Package List . . . . .	5
3.1.2 Product Overview . . . . .	6
3.1.3 Mounting Location . . . . .	9
3.2 Mounting . . . . .	10
4. Electrical Connection. . . . .	12
4.1 PV Connection . . . . .	12
4.2 Grid Connection . . . . .	15
4.3 Earth Connection . . . . .	17
4.4 Communication Connection . . . . .	18
4.5 Zero-injection Smart Meter (Optional) . . . . .	19
5. Operation . . . . .	21
5.1 Control Panel . . . . .	21
5.2 Menu Structure . . . . .	22
5.3 Setting . . . . .	24
5.3.1 Startup . . . . .	24
5.3.2 Voltage Range . . . . .	24
5.3.3 Frequency Range . . . . .	25
6. Commissioning . . . . .	26
7. Start-up & Shut Down . . . . .	26
7.2 Shut down . . . . .	26
7.3 Restart . . . . .	26
8. Maintenance&Trouble Shooting . . . . .	27
8.1 Maintenance . . . . .	27
8.2 Trouble Shooting . . . . .	27
9. Specifications . . . . .	33

# 1. About This Manual

## 1.1 Scope of Validity

This manual describes the installation, commissioning, operation and maintenance of the following on-grid PV inverters produced by UGI New Energy:

### Three-Phase

UGI003OTP   UGI004OTP   UGI005OTP   UGI006OTP   UGI008OTP  
 UGI010OTP   UGI012OTP   UGI013OTP   UGI015OTP   UGI017OTP  
 UGI020OTP   UGI025OTP

Please keep this manual available all the time in case of any emergency.


## 1.2 Target Group

This manual is for qualified personnel. The tasks described in this manual must only be performed by qualified personnel.


## 1.3 System Diagram

The typical on-grid PV system connection diagram.


UGI003OTP   UGI004OTP   UGI005OTP  
 UGI006OTP   UGI010OTP   UGI012OTP  
 UGI008OTP

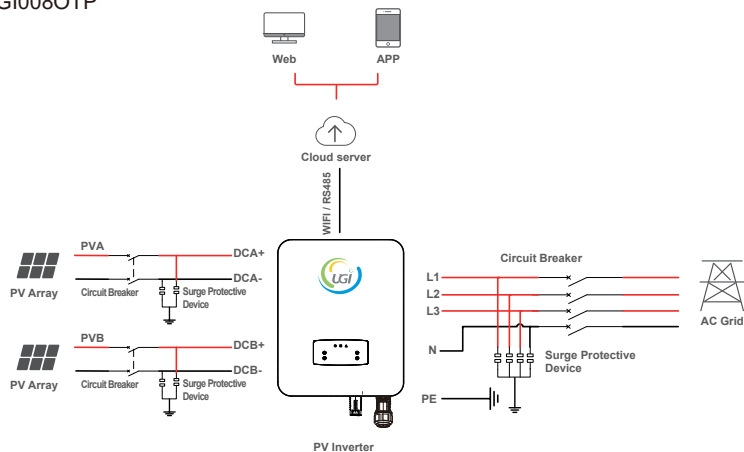

## UGI013OTP UGI015OTP

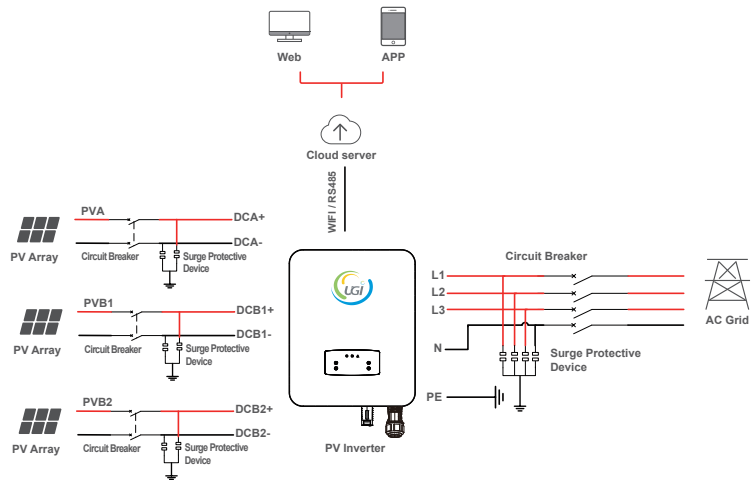

## UGI017OTP UGI020OTP UGI025OTP

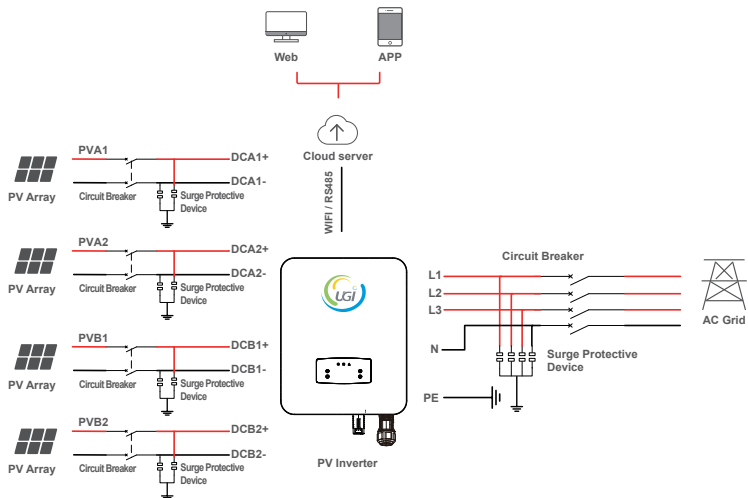



### Circuit Breaker Recommendation

Type	Max AC Current (A)	Rated current of AC breaker (A)
UGI003OTP	5.3	32
UGI004OTP	7	32
UGI005OTP	8.5	32
UGI006OTP	10.5	32
UGI008OTP	13.5	32
UGI010OTP	17	32
UGI012OTP	21.5	63
UGI013OTP	22	63
UGI015OTP	27	63
UGI017OTP	30	63
UGI020OTP	32	63
UGI025OTP	40	63

### Surge Protector Recommendation

- AC side, nominal discharge current 20KA, second grade lightning protection, protection voltage 2.5KV.
- DC side, nominal discharge current 20KA, second grade lightning protection, protection voltage 3.2KV.

#### Note:



The Inverter can be only connected to low-voltage grid.  
(380/400/415Vac, 50/60Hz).

## 2.Safety & Symbols









### 2.1 Safety Precautions

1. All work on the inverter must be carried out by qualified electricians.
2. The device may only be operated with PV panels.
3. The PV panels and inverter must be connected to the ground.
4. Do not touch the inverter cover until 5 minutes after disconnecting both DC and AC power supply.

5. Do not touch the inverter enclosure when operating, keep away from materials that may be affected by high temperatures.
6. Please ensure that the used device and any relevant accessories are disposed of in accordance with applicable regulations.
7. UGI inverter should be placed upwards and handled with care in delivery. Pay attention to waterproof. Do not expose the inverter directly to water, rain, snow or spray.
8. Alternative uses, modifications to the inverter not recommended. The warranty can become void if the inverter was tampered with or if the installation is not in accordance with the relevant installation instructions.

## 2.2 Explanations of Symbols

UGI inverter strictly comply with relevant safety standards. Please read and follow all the instructions and cautions during installation, operation and maintenance.

	<b>Danger of electric shock</b> The inverter contains fatal DC and AC power. All work on the inverter must be carried out by qualified personnel only.
	<b>Beware of hot surface</b> The inverter's housing may reach uncomfortably hot 60°C (140°F) under high power operation. Do not touch the inverter enclosure when operation.
	<b>Residual power discharge</b> Do not open the inverter cover until 5 minutes after disconnection both DC and AC power supply.
	<b>Important notes</b> Read all instructions carefully. Failure to follow these instructions, warnings and precautions may lead to device malfunction or damage.
	<b>Do not dispose of this device with the normal domestic waste.</b>
	<b>Without transformer</b> This inverter does not use transformer for the isolation function.
	<b>CE mark</b> The inverter complies with the requirements of the applicable CE guidelines.
	<b>Refer to manual before service.</b>

## 3.Installation

### 3.1 Pre-installation


#### 3.1.1 Unpacking & Package List

##### Unpacking

On receiving the inverter, please check to make sure the packing and all components are not missing or damaged. Please contact your dealer directly for supports if there is any damage or missing components.

##### Package List

Open the package, please check the packing list shown as below.

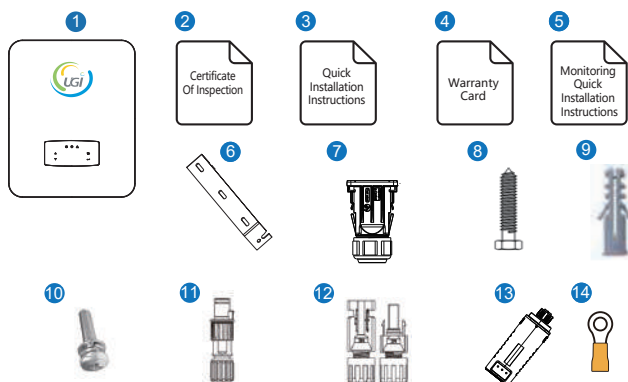


No.	Qty	Items	No.	Qty	Items
1	1	Solar Inverter	8	3	Mounting Bracket Screw
2	1	Certificate Of Inspection	9	3	Plastic Expansion Tube
3	1	Quick Installation Instructions	10	1	Security Screw
4	1	Warranty Card	11	1	Zero-Injection Connector (Optional)
5	1	Monitoring Quick Installation Instructions	12	2/3/4	DC Connector sets
6	1	Wall Mounting Bracket	13	1	Monitor Module
7	1	AC Waterproof Cover	14	1	Grounding Terminal

##### Note:




DC connectors Qty.: 3-12kW 2 pairs, 13-15kW 3 pairs, 17-25kW 4 pairs.


### 3.1.2 Product Overview

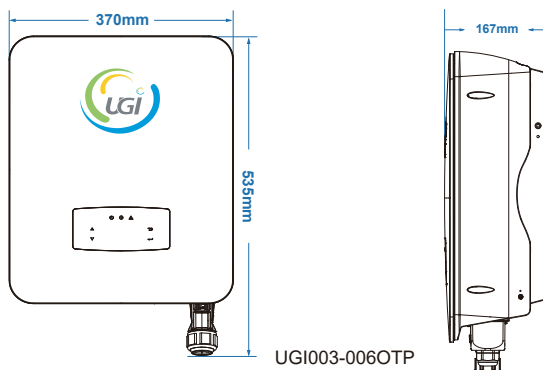

UGI003-006OTP

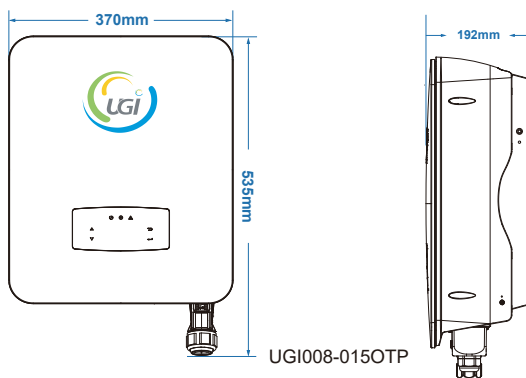


UGI008-015OTP

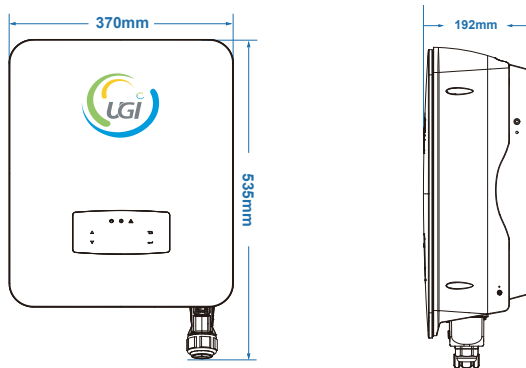


UGI017-025OTP

## Inverter Terminals


UGI003-006OTP

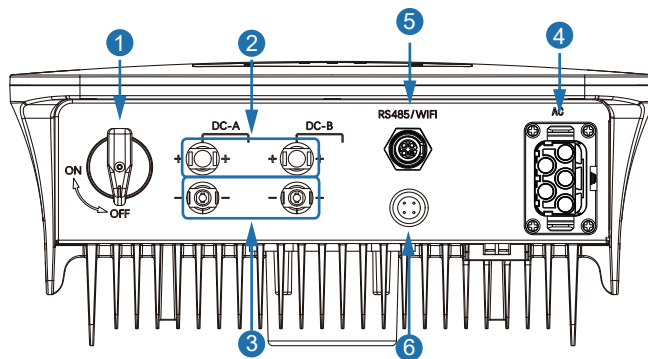


UGI008-012OTP

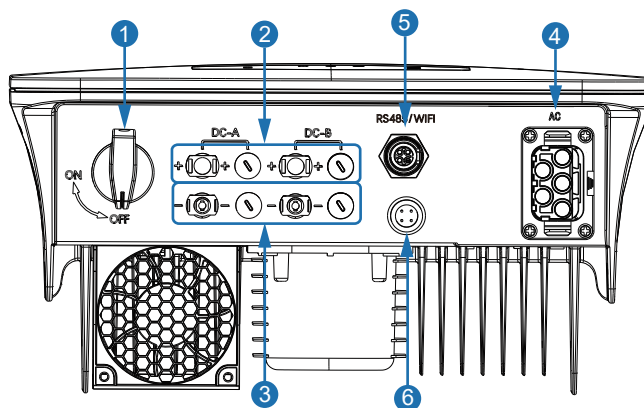

UGI013-015OTP

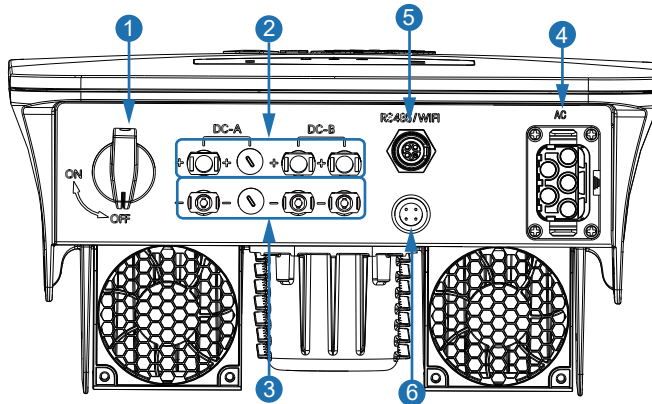

UGI017-025OTP

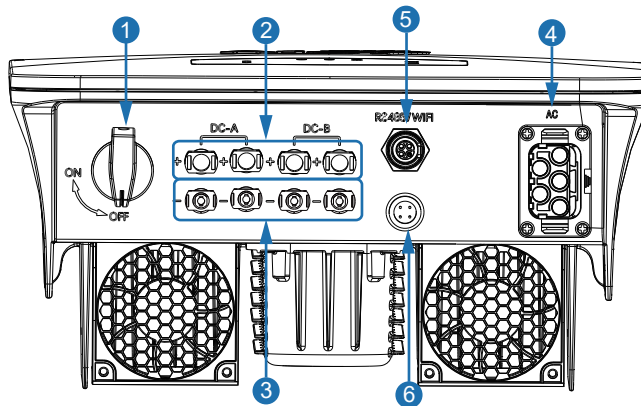


No.	Items
1	DC Switch
2	DC Connectors ( + ) For PV Strings
3	DC Connectors ( - ) For PV Strings
4	AC Connector
5	Zero-Injection Port (Optional)
6	Monitor Module Port


### 3.1.3 Mounting Location

The inverters are designed for indoor and outdoor installation (IP66), to increase the safety, performance and lifespan of the inverter, please select the mounting location carefully based on the following rules:


- The inverter should be installed on a solid surface, far from flammable or corrosion materials, where is suitable for inverter's weight and dimensions.
- The ambient temperature should be within  $-25^{\circ}\text{C} \sim 60^{\circ}\text{C}$  (between  $-13^{\circ}\text{F}$  and  $140^{\circ}\text{F}$ ).
- The installation of inverter should be protected under shelter. Do not expose the inverter to direct sunlight, water, rain, snow, spray lightning, etc.

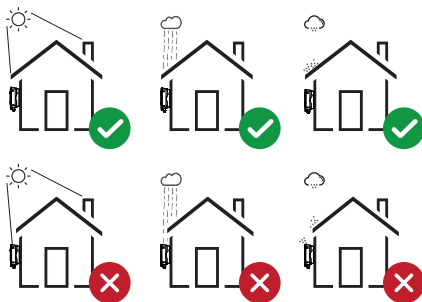

- The inverter should be installed vertically on the wall, or lean back on plane with a limited tilted angle. Please refer to below picture.

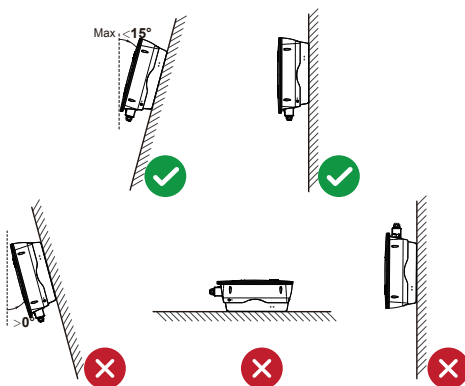


- Leave the enough space around inverter, easy for accessing to the inverter, connection points and maintenance.

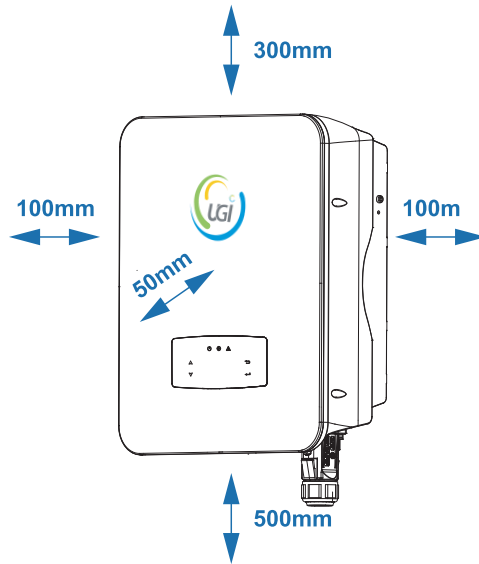


## 3.2 Mounting

### Step 1


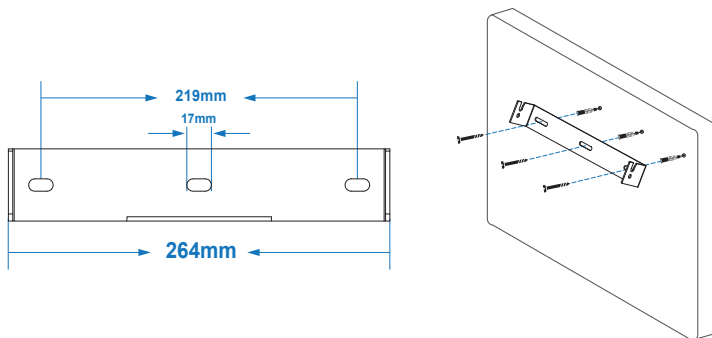




## Step 2

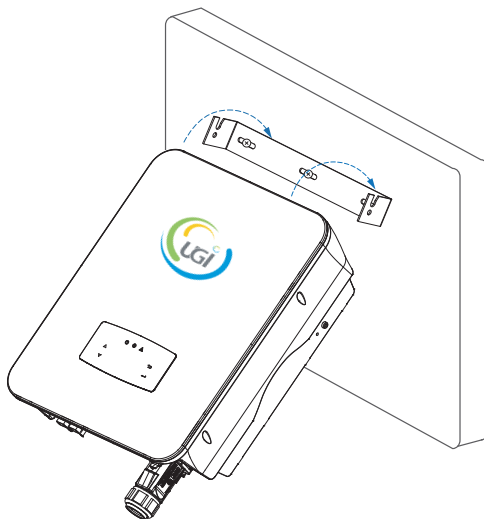

## Step 3

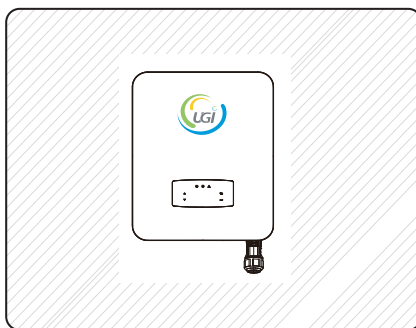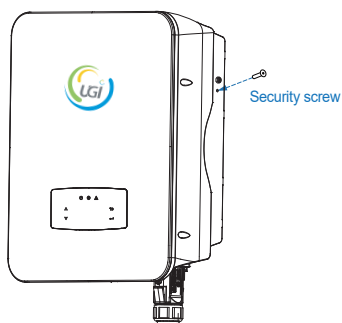

## 4. Electrical Connection

### 4.1 PV Connection

3-10kW three phase inverters have dual MPPT channels, each channel includes one PV string input;

12-15kW three phase inverters have dual MPPT channels, channel A includes 1 PV string input, and channel B includes 2 PV string inputs;

17-25kW three phase inverters have dual MPPT channels, each channel includes two PV string inputs;

For the best results, make sure that each MPPT channel is correctly connected with PV string. Otherwise, the inverter will activate voltage or current protection automatically.

Please make sure below requirements are followed:

- The open-circuit voltage and short-circuit current of PV string should not exceed the reasonable range of the inverters.
- The isolation resistance between PV string and ground must exceed 10 kΩ.
- The polarity of PV strings are correct.
- Use the DC plugs in the accessory.
- The lightning protector should be equipped between PV string and inverter.
- Disconnect all of the PV (DC) switch during wiring.




#### Warning:

The fatal high voltage may on the DC side, please comply with electric safety when connecting.

Please make sure the correct polarity of the cable connected with inverter, otherwise inverter could be damaged.

#### Step 1

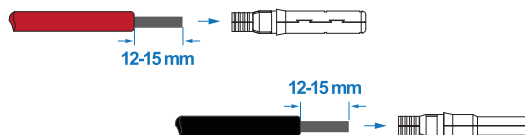


#### Note:

PV cable suggestion

Cross-section

4mm<sup>2</sup>


## Step 2

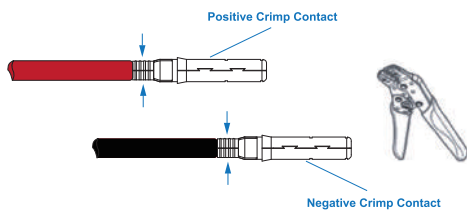

### Note:


Please use PV connector crimper to pinch the point of the arrow.


## Step 3

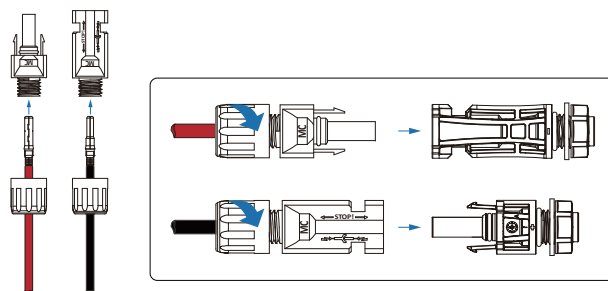

### Note:


You'll hear click sound when the connector assembly is correct.

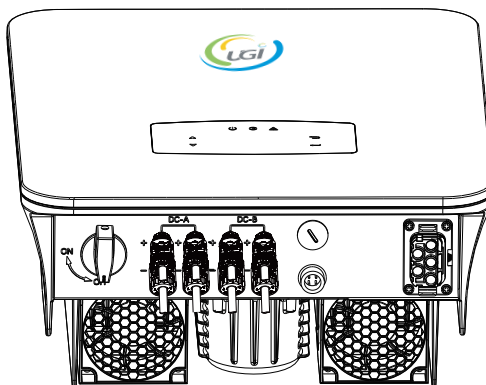

**Note:**  
 PV string suggestion:


## Option 1

Please ensure that each two strings of solar panels connected to inverter's each MPPT channel, the model and quantity of the solar panels of each string should be the same.

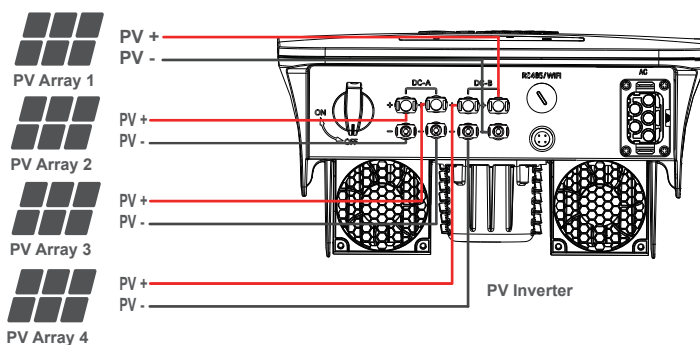

## Option 2

In the high-power PV panel system, can connect each MPPT channel with one PV string, please make sure each PV string's voltage and current are within the recommended range of the inverter.

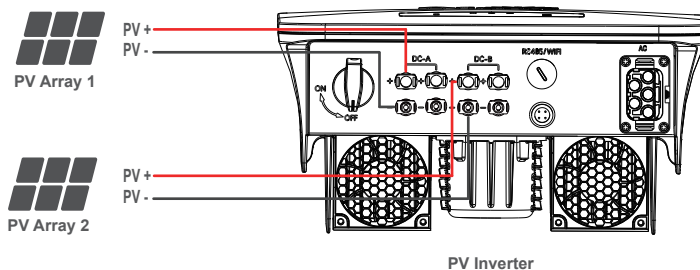

## 4.2 Grid Connection

The external AC switch should be installed between inverter and grid to isolate from grid. Please make sure below requirements are followed before connecting AC cable to the inverter.

- The AC (grid) voltage should not exceed the reasonable range of the inverters.
- The phase-line from AC distribution box are correctly connected.
- Use the AC plugs in the accessory.
- The surge protector should be equipped between grid and inverter.
- Disconnect the AC (grid) switch during wiring.



### Warning:

The fatal high voltage may on the AC side, please comply with electric safety when connecting.

Please make sure the right line of AC grid connected with inverter, otherwise inverter could be damaged.

### Step 1


Cable suggestion:

3-12kW Cross-section (Copper) 4-6mm<sup>2</sup> / 10AWG

13-15kW Cross-section (Copper) 6-10mm<sup>2</sup> / 8AWG

17-20kW Cross-section (Copper) 6-10mm<sup>2</sup> / 8AWG


After the terminals are crimped, wrap the joint position with insulation tape.

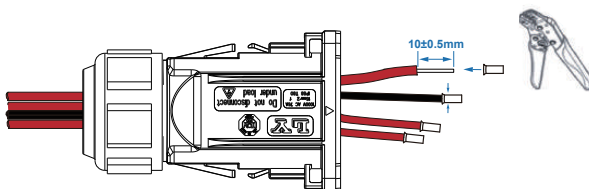

### Note:

The wiring terminals should be wrapped with insulation tape, otherwise it will cause a short circuit and damage the inverter.

**Step 2**

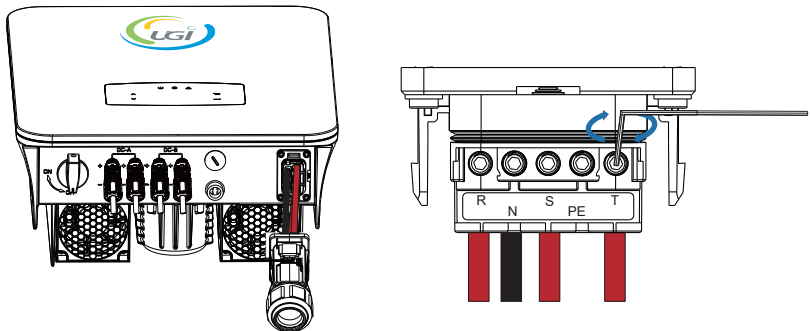


N = Neutral line

R, S, T = Live line

Unscrew the row of screws, insert the wire harness into the N, R, S, T caps one by one, and tighten the screws.

**Step 3**

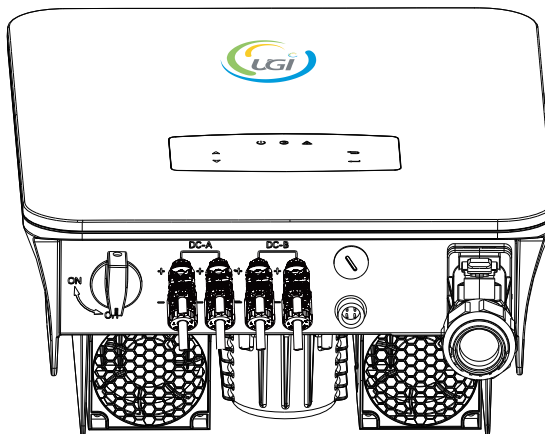


## 4.3 Earth Connection



### Note:

The user must connect a protective earth (PE) terminal to prevent electric shock. And make sure this PE terminal is properly grounded.


### Step 1

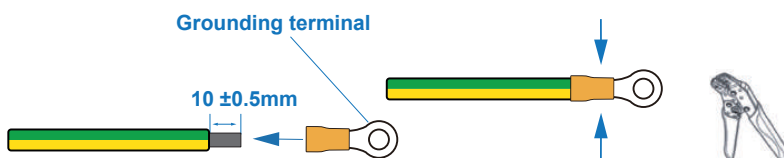

### Note:

Earth cable PE suggestion:  
Cross-section (Copper) 4-6mm<sup>2</sup> / 10AWG

### Step 2

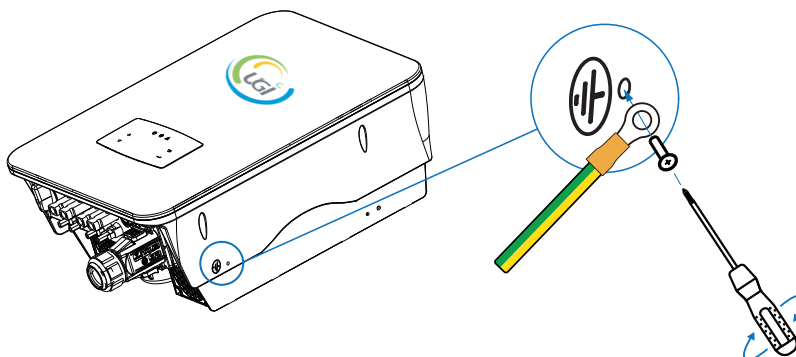

Grounding terminal is connected to the inverter at left or right side.


## 4.4 Communication Connection

The monitoring module could transmit the data to the cloud server, and display the data on the PC, tablet and smart-phone.


### Install the WIFI / Ethernet / GPRS / RS485 Communication

WIFI / Ethernet / GPRS / RS485 communication is applicable to the inverter. Please refer to "Communication Configuration Instruction" for detailed instruction.

#### Step 1

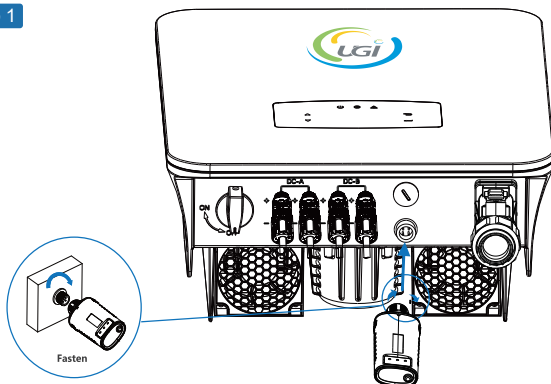

#### Step 2

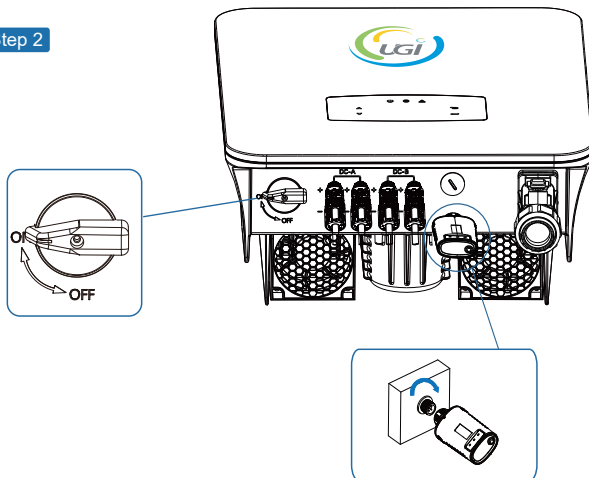


Turn on the DC switch and AC circuit breaker, and wait until the LED indicator on the monitoring module flashes, indicating that the monitoring module is successfully connected.



## 4.5 Zero-injection Smart Meter (Optional)

Smart meter is an intelligent control equipment which is used for on-grid inverters. Its main function is to measure the forward and reverse power on the grid-connected side, and transmit data to the inverter through RS485 communication to ensure that the power of the inverter is less than or equal to the user's home load, and no current flows into the grid.


### Step 1

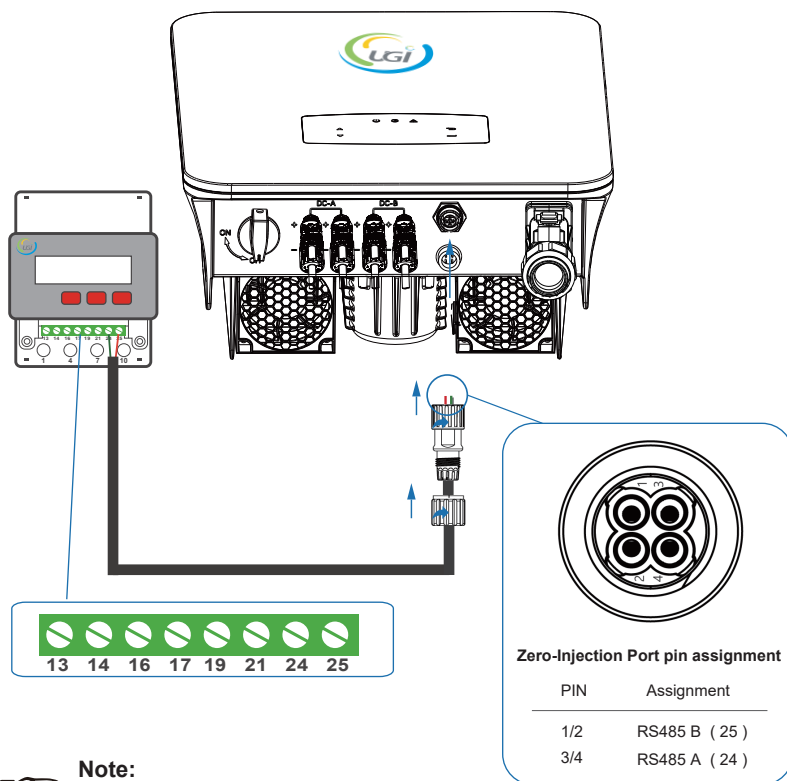

### Note:


please follow below pin order  
 RS485B (Pin 1/2) to three-phase meter (Pin 25)  
 RS485A (Pin 3/4) to three-phase meter (Pin 24)

## Step 2

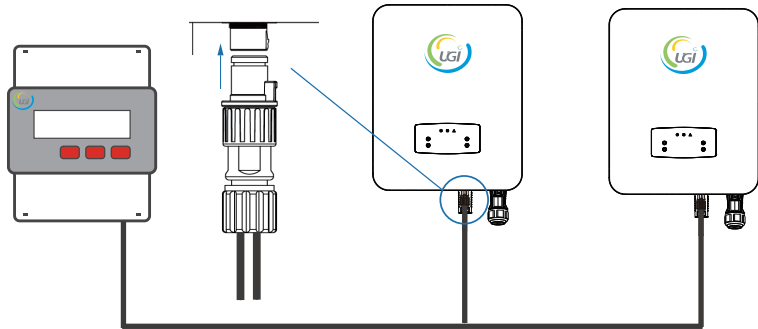

### Note:

When multiple inverters are connected in parallel, the total output power could not exceed the reasonable range of the smart meter.

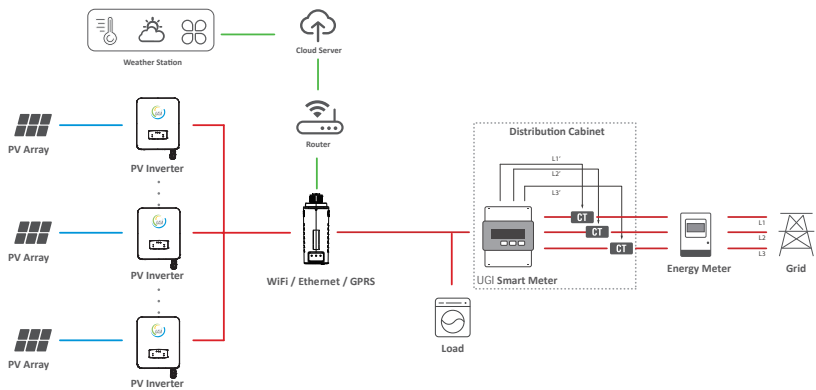


### Note:

The Inverter could be connected in parallel with Smart Meter, make sure the total load power not exceed Smart Meter's limitation.

## 5.Operation


### 5.1 Control Panel

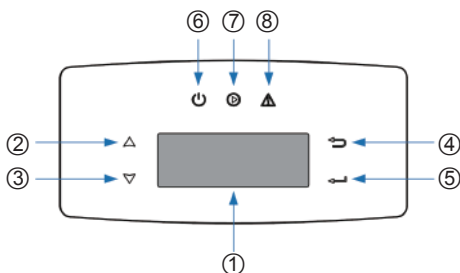


No.	Items	No.	Items
1	LCD Display	5	<b>ENT</b> Touch Button
2	<b>UP</b> Touch Button	6	<b>POWER</b> LED Indicator
3	<b>DOWN</b> Touch Button	7	<b>GRID</b> LED Indicator
4	<b>ESC</b> Touch Button	8	<b>FAULT</b> LED Indicator

Sign	Power	Color	Explanation
<b>POWER</b>	ON	Green	The inverter is stand-by
	OFF		The inverter is power off
<b>GRID</b>	ON	Green	The inverter is feeding power
	OFF		The inverter is not feeding power
<b>FAULT</b>	ON	Red	Fault occurred
	OFF		No fault

## 5.2 Menu Structure

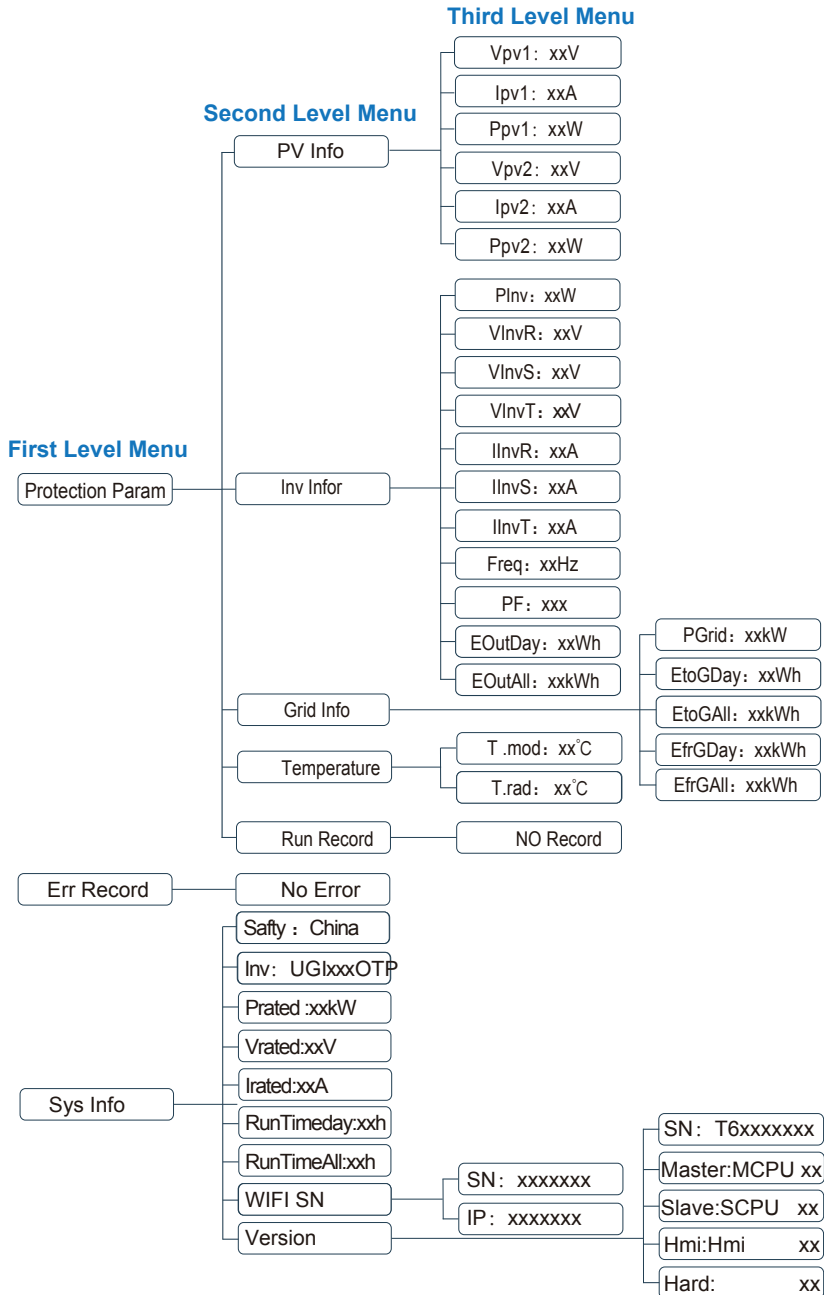

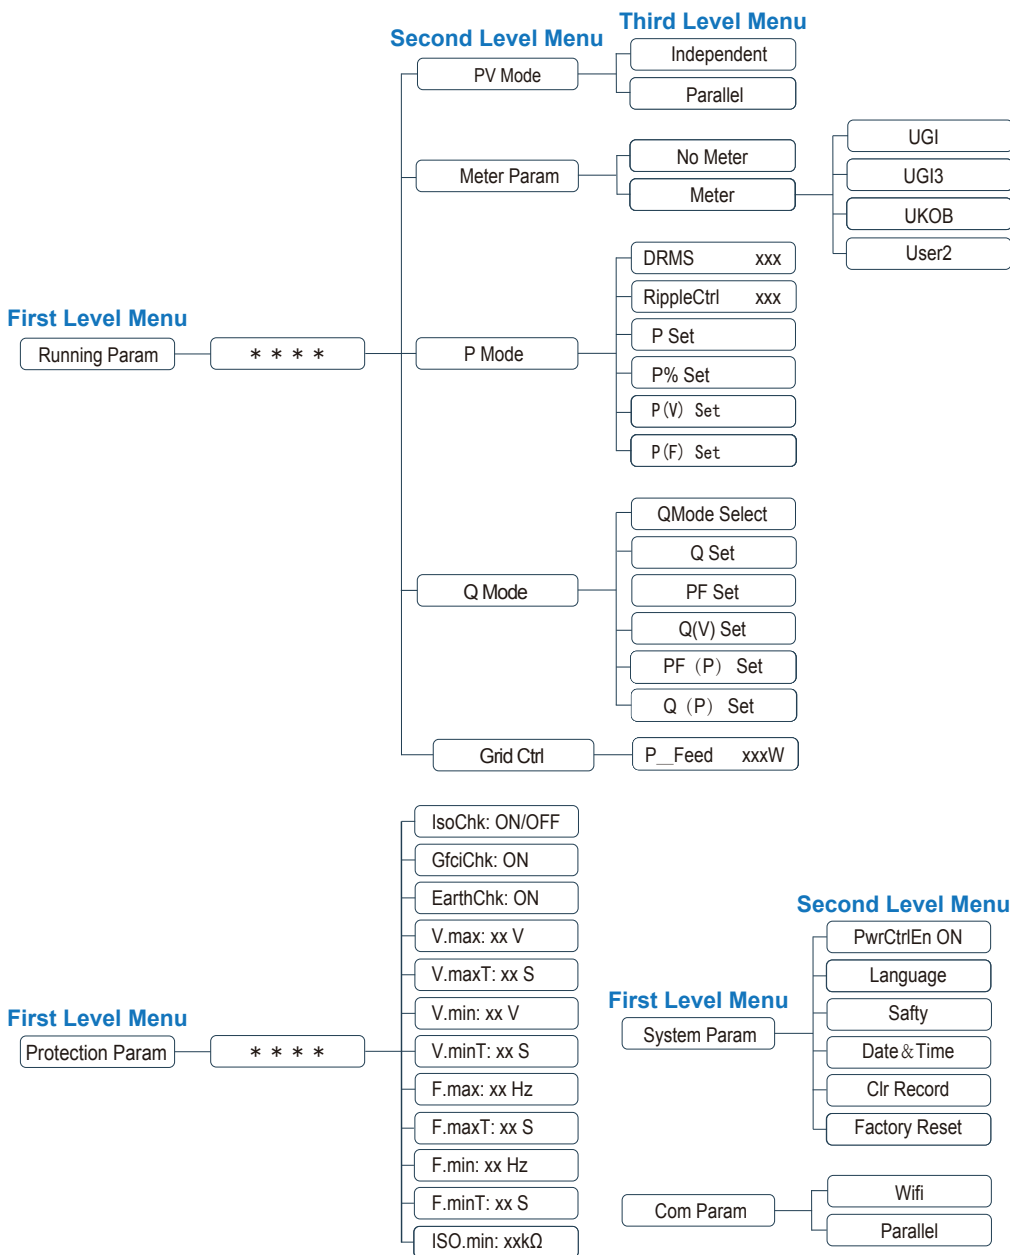


## Explanation of LCD Display Content


Nouns	Explanation
Sys Info	Check the inverter's real-time operating information
Error Record	Check the inverter's fault records with date and time
System Param	Set the inverter's safty code / lanuage / time & date, restore to factory settings
Version	Check the inverter's SN and firmware version
Protection Param	Set the inverter's protection parameters
Running Param	Set the inverter's operating mode like parellel, active / reactive power control


## 5.3 Setting

### 5.3.1 Startup

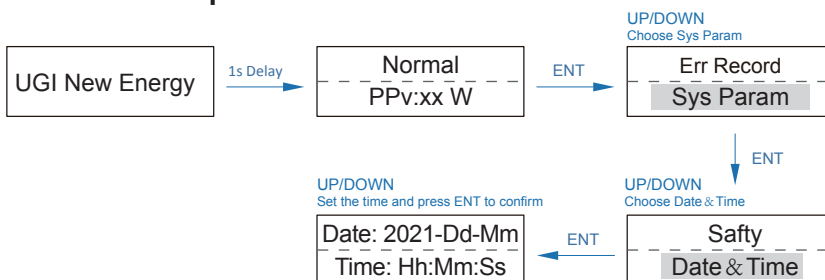


### 5.3.2 Voltage Range

 

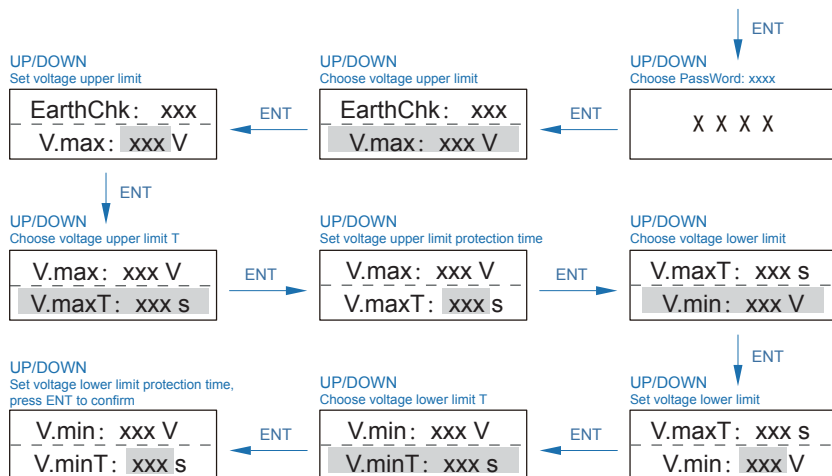

### 5.3.3 Frequency Range

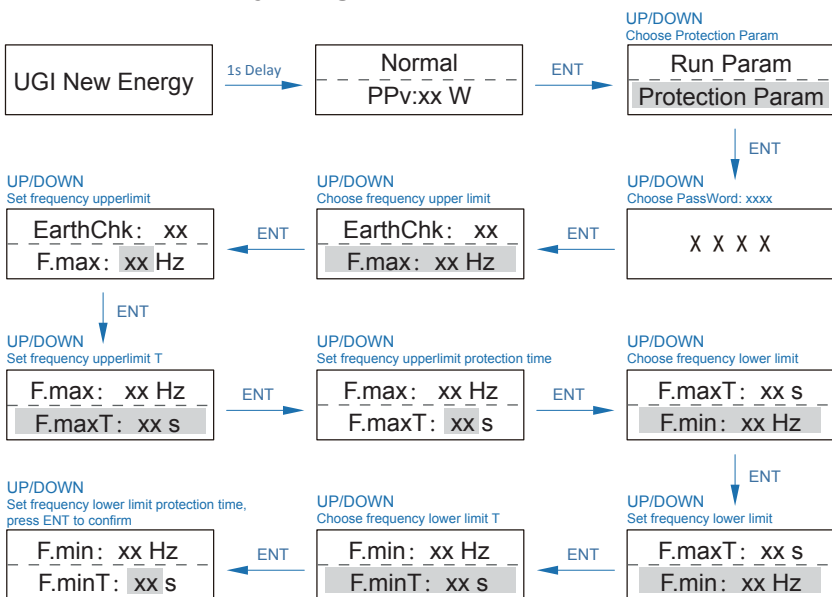

**Note:**

The parameters setting only works after the inverter is restarted.

## 6. Commissioning

Before starting up commissioning at site, please make sure below procedures and requirements are fully meet.

- Mounting location is meet the requirements.
- All of the electrical wiring is firmly connected, including PV wiring, Grid wiring and Earth wiring.
- The inverter setting has been finished accordingly to local standards or regulations.

### Commissioning Procedures

- Turn on the AC switch between inverter output and the public grid;
- Turn on the DC switch on the inverter;
- Turn on the PV switch of the system.

## 7. Start-up & Shut Down

### 7.1 Shut down

- Turn off the DC switch on the inverter.
- Turn off the DC switch between PV panels and the inverter (if any).
- Close the AC switch between the inverter and the public grid.

**Note:**

The inverter will be operable after minimum 5 minutes.

### 7.2 Restart

- Shut down the inverter according to Chapter 7.1.
- Start-up the inverter according to Chapter 6.



## 8.Maintenance&Trouble Shooting

### 8.1 Maintenance

Periodically maintenance are necessary, please follow steps as below.

PV connection: twice a year

AC connection : twice a year

Earth connection: twice a year

Heat sink: clean with dry towel once a year.

### 8.2 Trouble Shooting

Fault messages will be displayed when fault occurs, please according to trouble- shooting table find related solutions.

## Trouble-Shooting List

Type of Fault	Code	Name	Description	Recommend Solution
PV Fault	A01	PvConnectFault	The actual PV connection type (independent, parallel) different from setup.	<ul style="list-style-type: none"> <li>Set PV connection type according to the actual PV connection type.</li> </ul>
	A02	IsoFault	ISO check among PV panels/ the wires to the ground is abnormal.	<ul style="list-style-type: none"> <li>Check whether the PV modules and its wiring are immersed in water and whether the insulation is damaged, and then make corrections.</li> <li>If the fault occurs continuously and frequently, contact the local distributors for help.</li> </ul>
	A03	PvAfcFault	PV current arcing	<ul style="list-style-type: none"> <li>Check whether the PV cables and wiring terminals are broken or connection abnormal, and correct them.</li> <li>If the fault occurs continuously and frequently, contact the local distributors for help.</li> </ul>
	A04	Pvs1OverVoltFault	PV Voltage over, beyond the reasonable range.	<ul style="list-style-type: none"> <li>Reconfiguration of PV strings, reduce the PV number of a PV string to reducing inverter PV input voltage.</li> <li>Contact local distributors for suggestion.</li> </ul>
	A05	PVs2OverVoltFault		
	A16	PVs1ReverseFault	PV(+) and PV(-) reversed Connection	<ul style="list-style-type: none"> <li>Check whether PV(+) and PV(-) connection reversed or not. If reversed, make correction.</li> </ul>
	A17	PVs1ReverseFault		
	A33	Pv1AbnormalFault	Compared with previous voltage and other PV voltages, this PV voltage suddenly becomes higher or lower.	<ul style="list-style-type: none"> <li>Check if PV modules are partially blocked or cells are damaged.</li> <li>Check if PV cables and terminals broken or loose connection, then repair it.</li> </ul>
	A34	Pv2AbnormalFault		
DC Fault	E01	Pv1HwOverCurrFault	PV current over, triggered the hardware protection circuit	<ul style="list-style-type: none"> <li>Power off, then restart</li> <li>If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	E02	Pvs2HwOverCurrFault		
	E13	PVs1SwOverCurrFault	PV current over, triggered the software protection circuit	<ul style="list-style-type: none"> <li>Power off, then restart</li> <li>If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	E14	PVs2SwOverCurrFault		

Type of Fault	Code	Name	Description	Recommend Solution
DC Fault	E33	Boost1SelfCheckFault	PV boost circuit abnormal when self checking	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	E34	Boost2SelfCheckFault		
	E45	BusHwOverVoltFault	Bus voltage over	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	E46	BusHwOverHalfVoltFault		
	E47	BusSwOverVoltFault		
	E48	BusSwOverHalfVoltFault		
	E49	BusSwUnderVoltFault	Bus voltage under as running	
	E50	BusUnbalancedFault	DC Bus voltage unbalanced	
AC Fault	F01	HwOverFault	Hardware detected that current over / BUS voltage over	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	F02	InvHwOverCurrFault	Hardware detected that inverter current over	
	F03	InvROverCurrFault	R phase /Split phase L1 current over	
	F04	InvSOverCurrFault	S phase /Split phase L2 current over	
	F05	InvTOverCurrFault	T phase current over	
	F06	GridUnbalanCurrFault	3 phase current effective value has big difference	
	F07	DclnjOverCurrFault	DC injection current over	
	F08	AcOverLeakCurrFault	Ac side leakage current over	<ul style="list-style-type: none"> <li>• Check if PV panels has good ground insulation and ground wires are connected well ground is well, then repair it.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	F09	PLLFault	The phase-locked loop is operating abnormally, and it does not stably track the grid voltage phase.	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	F10	GridRelay1Fault	It is detected that the relay group 1 cannot be opened or closed normally.	

Type of Fault	Code	Name	Description	Recommend Solution	
System Fault	G01	PVs1ReverseFault	PV current sampling hardware abnormal	<ul style="list-style-type: none"><li>• Power off, then restart.</li><li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li></ul>	
	G02	PVs2CurAdChanFault			
	G16	RInvCurAdChanFault			
	G17	SInvCurAdChanFault			
	G18	TInvCurAdChanFault			
	G19	RInvDciAdChanFault			
	G20	SInvDciAdChanFault			
	G21	TInvDciAdChanFault			
	G22	LeakCurAdChanFault			
	G23	VoltRef(1.65V)AdChanFault			
	G30	UpsRDcvAdChanFault			
	G31	UpsSDcvAdChanFault			
	G32	UpsTDcvAdChanFault			
	G37	TempAdChanFault	All temperature sensors abnormal	<ul style="list-style-type: none"><li>• Power off, then restart.</li><li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li></ul>	
	G38	VoltAdConflictFault	The sample value of PV, battery and BUS voltage inconsistent with the actual value		
	G39	CPUAdConflictFault	The sample value between master CPU and slaver CPU inconsistent		
	G40	PowerCalcConflictFault	The sum of the PV power, battery and inverter output is too different from zero.		
	G41	EnvirOverTemp1Fault	Installation environment temperature over or low		<ul style="list-style-type: none"><li>• Improve or change the installation environment to adjust the inverter installation environment temperature to normal range.</li><li>• Power off, then restart.</li><li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li></ul>
	G42	EnvirLowTemp1Fault			
	G43	CoolingOverTemp2Fault	Cooling temperature over or low		
	G44	CoolingLowTemp2Fault			
	G45	OverTemp3Fault	Temperature3 over or low		
	G46	LowTemp3Fault			
	G46	DSPOverTempFault	CPU temperature over		

Type of Fault	Code	Name	Description	Recommend Solution
System Fault	G48	ModelConflictFault	Version conflict with inverter	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please contact local distributors for software upgrade, version setting details.</li> </ul>
Inner Warning	I01	InterFan1Warning	Fan abnormal	<ul style="list-style-type: none"> <li>• Check if there is objects which blocking the fan rotation and remove it.</li> <li>• If those faults occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	I02	ExterFanWarning		
	I03	Fan3Warning		
	I04	EnvirTemp1AdChanWarning	Some temperature sensors abnormal	<ul style="list-style-type: none"> <li>• The warning does not affect the normal operation of the inverter.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	I05	CoolingTemp2AdChanWarning		
	I06	Temp3AdChanWarning		
	I07	ExtFlashComWarning	Communication between the master CPU and the Flash is abnormal.	<ul style="list-style-type: none"> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	I08	EepromComWarning	Communication between the master CPU and the Eeprom is abnormal.	
	I09	SlaveComWarning	Communication between slaver CPU and master CPU is abnormal	
	I10	HmiComWarning	Communication between master CPU and HMI is abnormal	
	I11	FreqCalcConflictWarning	Frequency value abnormal	
	I12	UnsetModel	Running model is not initial	<ul style="list-style-type: none"> <li>• Contact with local distributor.</li> </ul>
Outside Warning	J01	MeterComWarning	Communication between inverter and meter is abnormal.	<ul style="list-style-type: none"> <li>• Check the meter model, and whether meter wiring and terminals are connected correctly, damaged or loose, if happens, make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	J02	MeterConnectWarning	Meter/CT wiring fault, or installation position fault.	<ul style="list-style-type: none"> <li>• Check whether the meter or CT wiring, installation position, and installation direction are wrong, and make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>

Type of Fault	Code	Name	Description	Recommend Solution
Outside Warning	J04	GndAbnormalWarning	Poor grounding or no grounding wire has been detected.	<ul style="list-style-type: none"> <li>• Check whether the ground wire of the inverter is properly connected and whether the ground impedance is over, and make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>
	J05	ParallelComWarning	Communication between master inverter and slaver ones abnormal in parallel mode.	<ul style="list-style-type: none"> <li>• Check whether the parallel communication line is damaged, the terminal is loose, the wiring hole position is correct, and make corrections.</li> <li>• Power off, then restart.</li> <li>• If fault still occurs continuously and frequently, please ask help for local distributors.</li> </ul>

## 9. Specifications

PV Input Data	UGI003OTP	UGI004OTP	UGI005OTP	UGI006OTP	UGI008OTP	UGI010OTP
Max. DC Power ( W )						
Max. DC Voltage ( V )	5100	6000	7500	1100	9000	12000
MPPT Voltage Range ( V )				150 - 1000		
MPPT Full Power Voltage Range ( V )		200 - 850		250 - 850	300 - 850	500 - 850
Rated Input Voltage ( V )				620		
Start-up Voltage ( V )				150		
Max. Input Current ( A )				15 x 2		
Max. Short Current ( A )				25 x 2		
No. of MPP Tracker / No. of PV String				2/2		
Input Connector Type				MC4		
AC Output Data	UGI003OTP	UGI004OTP	UGI005OTP	UGI006OTP	UGI008OTP	UGI010OTP
Max. Output Power ( W )	3300	4400	5500	6600	8800	11000
Nominal Output Power ( W )	3000	4000	5000	6000	8000	10000
Max. Output Current ( A )	5.3	7	8.5	10.5	13.5	17
Nominal Output Voltage ( V )				3P+N+PE /3P+PE 230/400		
Grid Voltage Range				260Vac-519Vac (according to local standard)		
Nominal Output Frequency ( Hz )				50/60		
Grid Frequency Range				45-55Hz/55-65Hz (according to local standard)		
Output Power Factor				1 default (adjustable from 0.8 leading to 0.8 lagging)		
Output Current THD				<3%		
Efficiency	UGI003OTP	UGI004OTP	UGI005OTP	UGI006OTP	UGI008OTP	UGI010OTP
Max. Efficiency			98.30%			98.70%
Euro Efficiency	97.61%	97.65%	98.00%	98.05%		98.23%
Protection	UGI003OTP	UGI004OTP	UGI005OTP	UGI006OTP	UGI008OTP	UGI010OTP
PV Reverse Polarity Protection			YES			
PV Insulation Resistance Detection			YES			
AC Short Circuit Protection			YES			
AC Over Current Protection			YES			
AC Over Voltage Protection			YES			
Anti-Islanding Protection			YES			
Residual Current Detection			YES			
Over Temperature Protection			YES			
Integrated DC switch			YES			
Surge Protection			Integrated (Type II)			
Smart IV Curve Scanning			YES			
Quick Arc Fault Circuit Interruption			Optional			
General Data	UGI003OTP	UGI004OTP	UGI005OTP	UGI006OTP	UGI008OTP	UGI010OTP
Dimensions (W x H x D, mm)		510 x 370 x 167			510 x 370 x 192	
Weight ( kg )		16			16	
Protection Degree			ip66			
Enclosure Material			Aluminum			
Ambient Temperature Range (°C)			-25 to 60			
Humidity Range			0 -100%			
Topology			Transformerless			
Communication Interface			RS485 / WiFi / Wire Ethernet / GPRS (optional)			
Cooling Concept			Convection			
Noise Emission ( db )			<30			
Night Power Consumption ( W )			<1			
Max. Operation Altitude ( m )			≤4000			
Certifications and Standards	UGI003OTP	UGI004OTP	UGI005OTP	UGI006OTP	UGI008OTP	UGI010OTP
EMC Standard			EN/IEC 61000-6-2, EN/IEC 61000-6-3, EN61000-3-2, EN61000-3-3, EN61000-3-11, EN61000-3-12			
Safety Standard			IEC 60068, UL1741, EN62109			
Grid-connection			IEEE1547, CSA C22, EN50549, VDE4105, VDE0126, RD1699, AUGI NBR16149 & 16150, AS4777.2, NB/T32004, G98/G99, IEC61727			



PV Input Data	UGI012OTP	UGI013OTP	UGI015OTP	UGI017OTP	UGI020OTP	UGI025OTP
Max. DC Power ( W )	18000	19500	22500	25500		
Max. DC Voltage ( V )				1100	30000	37500
MPPT Voltage Range ( V )				150 - 1000		
MPPT Full Power Voltage Range ( V )				500 - 850		
Rated Input Voltage ( V )				620		
Start-up Voltage ( V )				150		
Max. Input Current ( A )	15 x 2	20 + 32		32 x 2		
Max. Short Current ( A )	25 x 2	30 + 48		48 x 2		
No. of MPP Tracker / No. of PV String	2/2	2/3		2/4		
Input Connector Type	MC4					
AC Output Data	UGI012OTP	UGI013OTP	UGI015OTP	UGI017OTP	UGI020OTP	UGI025OTP
Max. Output Power ( W )	13200	14300	16500	18700	22000	27500
Nominal Output Power ( W )	12000	13000	15000	17000	20000	25000
Max. Output Current ( A )	21.5	22	27	30	32	40
Nominal Output Voltage ( V )	3P+N+PE /3P+PE 230/400					
Grid Voltage Range	260Vac-519Vac (according to local standard)					
Nominal Output Frequency ( Hz )	50/60					
Grid Frequency Range	45-55Hz/55-65Hz(according to local standard)					
Output Power Factor	1 default (adjustable from 0.8 leading to 0.8 lagging)					
Output Current THD	<3%					
Efficiency	UGI012OTP	UGI013OTP	UGI015OTP	UGI017OTP	UGI020OTP	UGI025OTP
Max. Efficiency	98.70%			98.75%		
Euro Efficiency	98.23%			98.35%		
Protection	UGI012OTP	UGI013OTP	UGI015OTP	UGI017OTP	UGI020OTP	UGI025OTP
PV Reverse Polarity Protection				YES		
PV Insulation Resistance Detection				YES		
AC Short Circuit Protection				YES		
AC Over Current Protection				YES		
AC Over Voltage Protection				YES		
Anti-Islanding Protection				YES		
Residual Current Detection				YES		
Over Temperature Protection				YES		
Integrated DC switch				YES		
Surge Protection				Integrated (Type II)		
Smart IV Curve Scanning				YES		
Quick Arc Fault Circuit Interruption				Optional		
General Data	UGI012OTP	UGI013OTP	UGI015OTP	UGI017OTP	UGI020OTP	UGI025OTP
Dimensions ( W x H x D, mm)	510 x 370 x 192			535 x 370 x 192		
Weight ( kg )	16	17		19		
Protection Degree				ip66		
Enclosure Material				Aluminum		
Ambient Temperature Range (°C)				-25 to 60		
Humidity Range				0 -100%		
Topology				Transformerless		
Communication Interface				RS485 / WiFi / Wire Ethernet / GPRS (optional)		
Cooling Concept				Intelligent fan cooling		
Noise Emission ( db )				<40		<51
Night Power Consumption ( W )				<1		
Max. Operation Altitude ( m )				≤4000		
Certifications and Standards	UGI012OTP	UGI013OTP	UGI015OTP	UGI017OTP	UGI020OTP	UGI025OTP
EMC Standard	EN/IEC 61000-6-2, EN/IEC 61000-6-3, EN61000-3-2, EN61000-3-3, EN61000-3-11, EN61000-3-12					
Safety Standard	IEC 60068, UL1741, EN62109					
Grid-connection	IEEE1547, CSA C22, EN50549, VDE4105, VDE0126, RD1699, AUGI NBR16149 & 16150, AS4777.2, NB/T32004, G98/G99, IEC61727					