



by Honeywell

Model IFP-2000ECS / ECS-RCU2000 Basic Operating Instructions

These instructions must be framed and displayed next to the IFP-2000 or ECS-RCU2000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

FS = Fire System ECS = Emergency Communication System

Operation	Task to Perform
Silence Alarms and Troubles (Fire Only)	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Fire Alarms OR Reset ECS Alarms	Press RESET then enter a code if prompted. <i>Note: To reset ECS at an LOC, the user must gain ECS Control (See Figure 1).</i>
Reset Alarms (ECS & Fire Active)	<ol style="list-style-type: none"> 1. Press RESET. 2. Press 1 to Reset Fire System. 3. Press 2 to Reset Emergency Communication. System. <i>Note: To reset ECS at an LOC, the user must gain ECS Control (See Figure 1).</i>
Conduct a Fire Drill	<p>Hold the DRILL button and then enter a code if prompted. OR</p> <ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 1 to select System Tests. 3. Enter code if prompted, then press 1 to select Fire Drill. 4. Press ENTER to start the fire drill, and Press ENTER to end the fire drill.
View Alarms, Troubles, and Supervisories	For each type of condition, press the or button associated with Alarm, Supervisory, or Trouble.
Set Time and Date	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 4 to select Set Time & Date. Enter a code if prompted. 3. Make changes to the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Enter code if prompted, then press 1 to select Disable / Enable Point. 4. Press 7 to select Disable/Enable Point. 5. Select the module the point is located on by using the or . Then press ENTER. 6. Enter the point number then press ENTER. 7. Press the to Disable/Enable Point.
To Gain / Request ECS Control	<ol style="list-style-type: none"> 1. Press the Button and follow the on-screen Instructions. <p><i>Note: When ECS Control LED is blinking, another LOC has ECS Control. ECS Control LED is on steady when the LOC has ECS Control.</i></p>
For Service call:	

Cut Along the Dotted Line