TESTING A BC THERMOCOUPLE ON YOUR ROASTER

IN THE EVENT YOU FEEL THERE MAY BE AN ISSUE WITH ONE OF YOUR THERMOCOUPLES ON A BC-2 THRU BC-35 YOU CAN REMOVE THE FRONT PANEL THAT HOUSES THE CONTROL PANEL AND SWITCH THE WIRING BETWEEN THE ET & BT THERMOCOUPLE.

SE THE PICTURE BELOW ON WHERE TO LOCATE THERMOCOUPLE WIRES (ALSO ALWAYS TAKE A PICTURE OF EVERY PART SETUP BEFORE YOU MAKE ANY CHANGES TO PARTS TO AVOID ISSUES WHEN MAKING REPAIR)

INSIDE VIEW OF A BC-3 or 5 WITH FRONT PANEL OPENED

