



Introduction

The NCS-H401-1 provides a means to install the NCS-C250 in a desk top configuration. It contains two (2) integrated speakers for Select & Unselect audio. Switches are provided for each speaker to mute the audio to the respective speaker. The unit comes with 2 sets of different height rubber feet.

Items Supplied

Items supplied with the NCS-H401-1 are:

1. Rubber Mounting Feet; 0.16" high [Qty 4]
2. Rubber Mounting Feet; 0.40" high [Qty 4]
3. This Instruction Sheet

Note that the Radio Interface Cable is supplied separately.

NCS-C250 Installation

1. The NCS-C250 may be installed in the Riser, with or without the rubber feet (provided as part of the C250 Accessory Kit) adhered to the bottom of the C250.



C250 installed without rubber feet



C250 installed with rubber feet

2. Secure the C250 to the Riser with the Knobs supplied with the C250, as part of the Accessory Kit.
3. Attach the Molex connector to the speaker output of the C250.
4. Attach one of the sets of rubber feet supplied with the Riser to the bottom four (4) corners of the Riser.

Install Knobs (2 plcs)



Install Molex connector

Install rubber feet (4 plcs)