

# **Interface Software Installation Instructions (USB)**

(Jan 2013)

The new J.BAUER Electronics EagleEye™ Data Logging software will work on any 32Bit or 64Bit OS listed below.

- Win 2000
- Win XP
- Vista
- Win 7

- 1) Make sure that your computer has at least NET Framework 2.0 Installed.  
(A copy is supplied on this CD)
- 2) You may also need Windows Installer 3.1 to install NET Framework 2.0.  
(A copy is supplied on the CD)
- 3) Install your EagleEye™ Data Logging Software. (a copy is supplied on the CD)  
Do not start your EagleEye™ Interface Software yet.
- 4) When using your computer's USB ports you must install the USB Driver.  
You can install both the PL-2303 and the HL-340 drivers if you are not sure which type of USB Cable you have.  
We may supply either type depending on supplier's stock.
- 5) Re-Boot your computer after the USB Drivers are installed.
- 6) Plug the Laserbee™ USB cable into your computer's USB port. Give your computer time to install all the drivers properly.
- 7) Go to your Windows Device Manager under Ports (LPT and Com) and see which Com Port your computer assigned to the RS232 to USB converter cable.  
This is the Com Port number the EagleEye™ software needs to be told to use to Communicate with your LaserBee™ LPM.
- 8) You are ready to use your EagleEye Data Logging feature..

## **NOTE:-**

If using Windows Vista or Windows 7 the display character size must be set to the Default. 96DPI for Vista and 100% for Win 7. Failure to do so will resize only part of the LaserBee Interface and Graphing Information will seem to be missing.