

TO INSTALL HANDLE

REMOVE NUT OFF HANDLE BOLT. SCREW HANDLE ON THE MACHINE. INSTALL NUT AND TIGHTEN.

TO ADJUST FOR NUT SIZE

WITH ALL WASHERS ON SHAFT, MOVE COLLAR TO TAKE UP SLACK (SO SHAFT CAN BE ROTATED WITHOUT ANY BIND). TIGHTEN COLLAR WITH ALLEN WRENCH OR SCREWDRIVER.

1. REMOVE LYNCH PIN.
2. PULL SHAFT FROM CRANK END UNTIL CLEAR OF BACK BEARING.
3. REMOVE WASHER AND PUSH SHAFT BACK THROUGH BEARING.
4. PUT WASHER (REMOVED IN STEP 3) BACK ON THE SHAFT BY LYNCH PIN.
5. REPLACE LYNCH PIN.
6. IF NUTS POP BACK OUT OF THE TOP OF HOPPER, THE SETTING IS TOO TIGHT. BE SURE NUTS ARE DRY.
7. OIL BEARING SPARINGLY TO AVOID OIL IN NUTMEATS. USE PAM SPRAY.

SUGGESTIONS

IT IS NEVER NECESSARY TO SORT NUTS ACCORDING TO SIZE. SET WASHERS FOR LARGEST SIZED NUTS, JUST SO THEY WILL NOT FALL THROUGH BETWEEN THE UPRIGHT DISCS.

RUN ALL SIZES TOGETHER. SMALLER NUTS WILL FALL THROUGH UNCRACKED. SORT THEM ASIDE AND RE-RUN AT NEW SETTING.

THE NATURAL OIL IN NUTMEATS WILL COLLECT DUST, ETC. CRACK ONLY AS MANY AS CAN BE SEPARATED QUICKLY.

TO GET MORE NUTMEATS IN HALVES, TURN THE HANDLE IN ROCKING MOTIONS. INSTEAD OF ALL THE WAY AROUND.