


Quick Start Guide – TLE / Classic

Mode Switch
Up for
TLE Mode
And Down for
Classic Mode

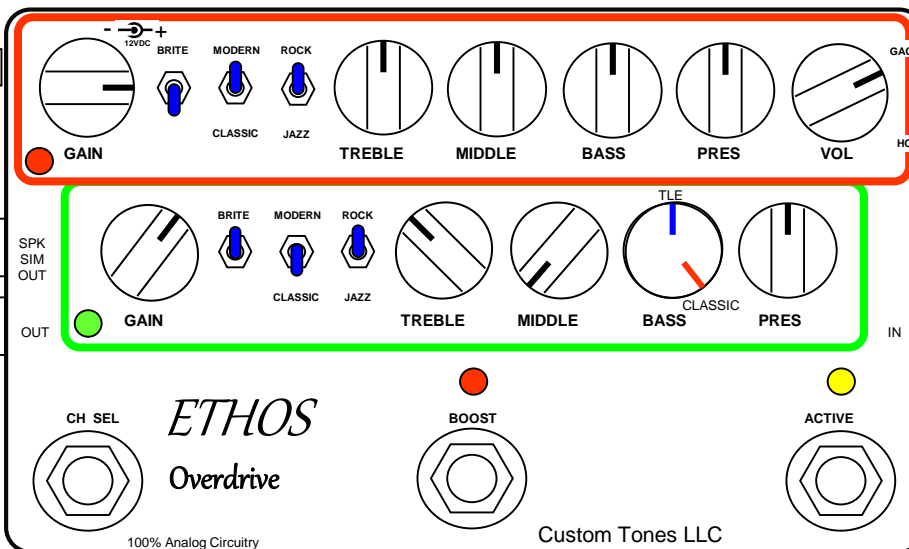

Set the GAC
Switch up for
Guitar Amps,
Otherwise set
it in the down
position

Set the HC
Knob To Fit
Your Amp's
Hi –End Tone

PC or PA
(Full BW Speaker)

Amp
(Guitar Speaker)

← Guitar

The above settings will get you started

- Be sure to hit the BOOST Foot-Switch to get some great Rock Tone!

Overdrive Channel

Clean Channel