

CHANGING OUT GAS GAUGE- ORO

When Changing from LPG to Natural Gas you may decide to change Gas Gauges primarily because this allows you to have more control over gas pressure. To do so follow these guides:

1. Always have a certified Gas tech work on your equipment
2. Remove 3 hex bolts
3. Gently remove or pull out gas gauge just enough to reach connections on back with a couple wrenches.
4. Using two wrenches disconnect gas line
5. Now using yellow gas tape or joint compound reconnect & test for leaks



**ALWAYS SEAL EVERY GAS
LINE WITH PROPER GAS
TAPE AND OR SEALANT!**

