

INDEX TO PASQUALI PARTS MANUAL

<u>Page No.</u>	<u>Description</u>	<u>Standard or Deluxe</u>	<u>Models</u>
1	Front Grill, Hood & Engine Group	Standard	986, 991
2	Front Grill, Hood & Engine Group	Standard	993, 997, 971
3	Front Grill, Hood & Engine Group	Standard	993, 997, 971 cont.
3a	Front Grill, Hood & Engine Group	Deluxe	988, 991, 993, 997, 986
4	Clutch, Throw-Out Bearing Group	All	986
5	Clutch, Throw-Out Bearing Group	All	991, 993, 997, 971, 988
6	Front Axle Group, Straight Drive	All	986
7	Front Axle Group with Reduction	All	991, 997, 993, 988
8	Front Axle Group, Power Steering	All	991, 993, 997, 988
9	Initial Transmission Drive Group	All	986
10	Initial Transmission Drive Group	All	991, 993, 997, 988
11	Final Transmission Drive & Gear Group	All	991, 993, 997, 986, 988
12	Gear & Range Shifting Group	All (Deluxe--see 13a)	986, 991, 993, 997, 988
13	Differential Lock & PTO Shifting Group	All	986, 991, 993 997, 988
13a	Shift Linkage & Levers	Deluxe	986, 991, 993, 997, 988
14	Articulation Group (Non-Power Steering)	All	986, 991, 993, 997, 988 (non-power only)
15	Articulation Group (Power Steering)	All	986, 991, 993 997, 988 (power steer. only)
16	Steering Group (Non-Power)	Standard	All

<u>Page No.</u>	<u>Description</u>	<u>Standard or Deluxe</u>	<u>Models</u>
17	Steering Group (Power)	All (see 29)	986, 991, 993, 997, 988
18	Rear Differential Drive Group	Standard	986
19	Rear Differential Drive Group	Standard	991, 993, 997, 988, 971
19a	Rear Differential Drive Group (see 23a)	Deluxe	991, 993, 997, 988, 971, 986
20	Rear Axle Drive & Brake Group	All	986
21	Rear Axle Drive & Brake Group	All	991, 993, 997, 971, 988
22	Foot & Hand Brake Group	Standard	991, 993, 997, 971, 988, 986
22a	Foot & Hand Brake Group	Deluxe	991, 993, 997, 971, 988, 986
23	Rear Support, Fender & Seat Group	Standard	991, 993, 997, 971, 988, 986
23a	Rear Support, Fender & Seat Group	Deluxe	991, 993, 997, 971, 988, 986
23a	Rear PTO	Deluxe	991, 993, 997, 971, 988, 986
24	Electrical Group	Standard	991, 993, 997, 971, 988, 986
24a	Electrical Group	Deluxe	991, 993, 997, 971, 988, 986
25	Hydraulic Group	Standard	986, 991
25	Hydraulic Lift	Standard	All
25a	Hydraulic Group	Deluxe	988
25a	Hydraulic Lift	Deluxe	All
26	Hydraulic Group	All	993, 997, 971
26	Hydraulic Lift	Standard	All
26a	Hydraulic Group	Standard	988
27	Final Assembly Misc. Group	All	986, 991

<u>Page No.</u>	<u>Description</u>	<u>Standard or Deluxe</u>	<u>Models</u>
28	Final Assembly Misc. Group	All	993, 997, 971 988
29	Power Steering Assembly	All	986, 991, 993, 997, 988
29a	Power Steering Index		
30	Guide for 956/4 - 958/4 Transporters		
31	Table 1		
32	Table 2		
33	Table 3		
34	Table 4		
35	Table 5		
36	Table 6		
37	Table 7		
38	Table 8		
39	Table 9		
40	Table 10		
40a-f	Part Number Index for Tables 1-10 of 956/4 - 958/4		
41	Front End Group		956, 947
42	Articulation Group		947
43	Steering, Seat Group		947
44	Front Axle, Drive Group		947
45	Gear, Range Selector		947
46	Final Assembly		947, 956
47	Clutch, Throw-Out Bearing		956
48	Initial Transmission Drive Group		956
49	Electrical System		956
50	Front End, Drive Group		917
50a	Index		

<u>Page No.</u>	<u>Description</u>	<u>Models</u>
51	Final Drive, Axles	917
51a	Index	
52	Handle Controls	917, 921
52a	Index	
53	Front End, Drive Group	921
53a	Index	
54	Final Drive, Axles	921
54a	Index	
54b	Index - Handle Controls (see 52)	921
55	Front End, Drive Group	922
55a	Index	
56	Final Drive, Axles	922
56a	Index	
57	Handle Controls	922
57a	Index	
58	Main Assembly 588.10 Tiller (For Walking Tractors)	
58a	Index	
59	Options 588.10 Tiller	
59a	Index	
60	Table 1 594.10 Tiller	
60a	Index	
61	Table 2 594.10 Tiller	
61a	Index	
62	Table 596 Tiller	
62a	Index	
63	Table 2 596 Tiller	
63a	Index	