

Dooya Keychain Remote Programming

DD115H Keychain Remote

Motor **MUST** be programmed and limits set with standard remote **BEFORE** programming the keychain remote!

Limits can **NOT** be set with keychain.



Programming From Remote	Existing remote: press top left P2 (unit jogs), press P2 again (unit jogs), Keychain remote: Hold ■ STOP (unit jogs)
Programming From Motor	Apply power to motor (unit jogs), Keychain remote: Hold ■ STOP (unit jogs)

Input voltage: 3V (CR2032 Battery) - To replace battery, remove 4 screws from rear of remote