HD Boomerang Blu-ray Specific Troubleshooting

- If you know that the TV's CEC is definitely turned on but the Blu-ray is still not automatically switching the TV, it might be that the Blu-ray's Fast Start or Power Savings function is enabled.
- Many Blu-ray players have a function that will allow them to quickly startup when they are powered on. Typically a Blu-ray player might take up to a minute to display the menu screen. If yours starts up in about 20 seconds or less, then you probably have this feature enabled.

Unfortunately, this function actually keeps the Blu-ray player in the powered on state. If the Blu-ray player is not allowed to power completely off, then the HD Boomerang does not know when to switch.

Use the Blu-ray's menu to find the setting for Fast Power On (might be called something different like Power Savings or something else similar) and make sure it is set so the player does not start up quickly.

• If the setting is correct, and it is still not working, you might need a newer HDMI cable. Most HDMI cables will work, but there are some older ones that could cause problems. You could try swapping the cable that is used from your TV to the cable or satellite box with the cable for your Blu-ray.