

Setting Up the Remote Control

Setup Remote to Control the Digital Adapter

RF Remote Pairing Process:

When multiple remotes work in a shared space, interference can result. To avoid this problem, the remote must be paired with the Digital Adapter.

Step 1

Turn on your TV using the buttons on the TV or the TV remote. Make sure power is connected to your Digital Adapter and it is plugged into the TV.



Note: Your TV must always be set to the proper channel (Ch 3 or Ch 4) or HDMI Input to match the output channel on the back of your Digital Adapter.

Step 2

 
Install the batteries (included in your kit) in your new remote control.

Step 3

Make certain no other Digital Adapter remote is in the area. Make sure power is connected to your Digital Adapter. Turn on your TV using the buttons on the TV or the TV remote (not a digital adapter remote in this instance).


Step 4

Press and hold both DTA POWER and SELECT keys at the same time. Once the red light on the remote turns on, then release both keys. Wait 10 seconds, a 3 digit validation code will display on the TV.

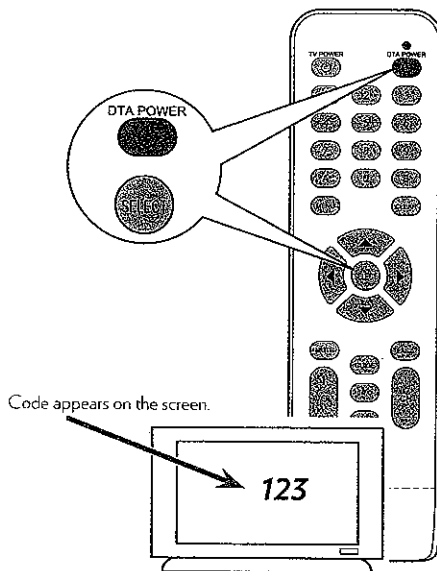

Step 5

 Enter the 3 digit code using the Digital Adapter remote. When remote is successfully paired with the Digital Adapter the remote's red light will blink twice.

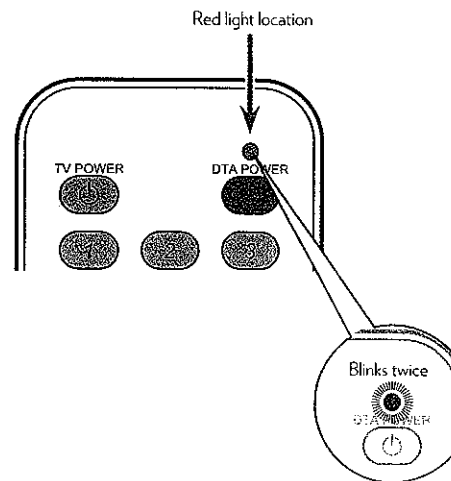

Proceed to back of this page to setup the Remote Control with your television.

 


Setup Remote to Control the Television

Step 6

Press and hold both Digit 1 and Digit 3 keys together until the red light turns on. Release both keys. Keep your eyes on the Remote so you can watch the red light.


Keep your eyes on the remote so you can watch the red light.

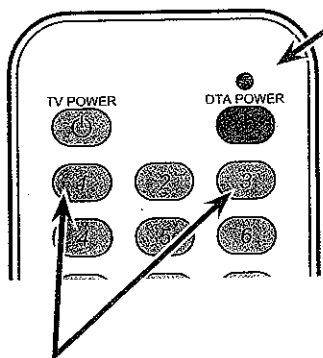

Press and hold both buttons at the same time

Step 7

 Point the new remote at the TV. Press and hold the TV POWER key. The remote will start searching for the right code while you are holding this key. When the TV turns off, release the key within 2 seconds to lock in the code.

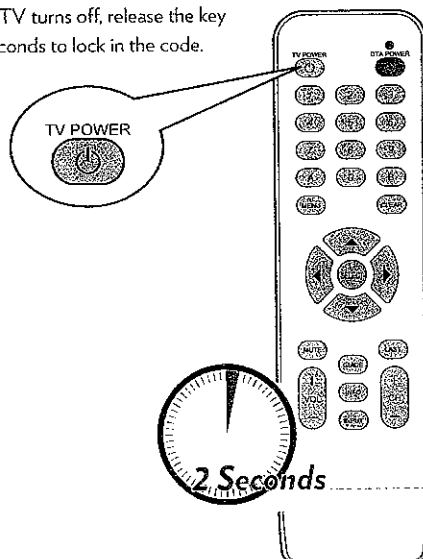

Step 8

Point the new remote at the TV. Press TV POWER on your Remote to turn on your TV. If your TV responds (turns on), then you have successfully programmed your Remote.

The setup of the Remote is now complete.

If you are not successful the first time try again.

Two Remotes

If you were unable to program your remote, you will need two remotes to operate your TV: the Digital Adapter Remote and the one that came with your TV.

Setting the Remote Volume

1. Use the remote control that came with your TV to set the volume to a comfortable level. This should be the time you'll use this remote for volume control.
2. Going forward use only your Digital Adapter Remote to adjust volume up or down.

Caution:

Don't use your TV remote to change channels. Your TV must always be set to the proper HDMI Input, Ch 3 or Ch 4 or you will see a snowy or blank screen.

Important Safety Instructions

- Read these instructions.
 - Keep these instructions.
 - Heed all warnings.
 - Follow all instructions.
 - Do not use this apparatus near water.
 - Clean only with dry cloth.
 - Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - Only use attachments/accessories specified by the manufacturer.
 - Unplug this apparatus during lightning storms or when unused for long periods of time.
 - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.
 - To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
 - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Warning: Use only the power supply that came with your unit. If the power supply needs to be replaced, contact your service operator or dealer to obtain an authorized replacement.
 - Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE**
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Ensuring optimum performance

- Disconnect the product from the power before you connect the product to (or disconnect it from) any other equipment. Avoid any contact with the power, which can be lethal or cause severe electric shock.
- Do not insert anything into any opening of the case.
- Leave the power socket accessible so that you can unplug the set quickly.
- Leave 2 to 3 inches around the product to ensure proper ventilation to it.
- To clean the product, use a dry clean soft cloth with no cleaning solvent or abrasive products. Clean the ventilation openings regularly.

Environmental information

- The batteries use some hazardous substances which pollute the environment. Do not dispose of them with other articles. Take care to dispose them at special collecting points.

Technical specifications

Model type	DCI401xxxx
Operating voltage	120V AC / 60 Hz / 0.5A
Typical Power consumption	5.0W (typical)/max 6.0W (max)
Weight	0.42 Lb
Dimensions (W x H x D)	4.33 x 0.96 x 3.19 Inches
Operating temperature range	59 to 104° F / 15 to 40°C
Storage temperature range	-4 to 158° F / -20 to 70°C
Manufactured under license from Dolby Laboratories.	

FCC Compliance Statement



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device is intended to be attached to a receiver that is not used to receive over-the-air broadcast signals. Connection of this device in any other fashion may cause harmful interference to radio communications and is in violation of the FCC Rules, part 15.

Meaning of symbols

This symbol is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product housing that may be of sufficient magnitude to constitute a risk of shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions accompanying the product.



36991030