

easy:mote™


Programming your remote is easy as:




 
1

Press and hold the  and  buttons at the same time for 5 seconds.

2

Press the  button repeatedly until your TV changes channels.

3

Press and hold the  button, while doing so press the  button.



Uses 2 AAA batteries
(not included)

dts
direct tech sales™

CALL NOW
877-789-7995



CommConnect