

1.OPEN UNIT



2.LOCATE FUSE HOLDER.OPEN INSPECT FUSE AND HOLDER. IF NEEDED REPLACE ONE OR BOTH

