

# NCS-E411

## Kenwood Desk Microphone



**colcomm inc**

**Collcomm, Inc.**

TEL/FAX: (888) 883-5788  
EMAIL: [support@ncsradio.com](mailto:support@ncsradio.com)  
Website: [www.ncsradio.com](http://www.ncsradio.com)


**Using the NCS-E411 Desk Mic with the NCS-C250 Mobile Multi-Switcher**

Before attaching the NCS-E411 mic to the NCS-C250 the microphone connector pin functions must be programmed in the NCS-C250. Remove the cover of the NCS-C250 and refer to the NCS-C250 Instruction Manual for the location of the microphone setup pins.


To program the functions of the pins on the microphone connector, use the shunts supplied in the NCS-C250 Accessory Kit to jumper the appropriate microphone pin numbers to the corresponding signals on the **MIC CONN PIN** jumper blocks in the NCS-C250.

**NOTE: If the NCS-E411 Desk Mic was purchased at the same time as the NCS-C250 the microphone shunts will be installed at the factory and the above steps are not necessary.**

The proper NCS-C250 shunt placement for using the NCS-E411 Desk Mic is shown below:

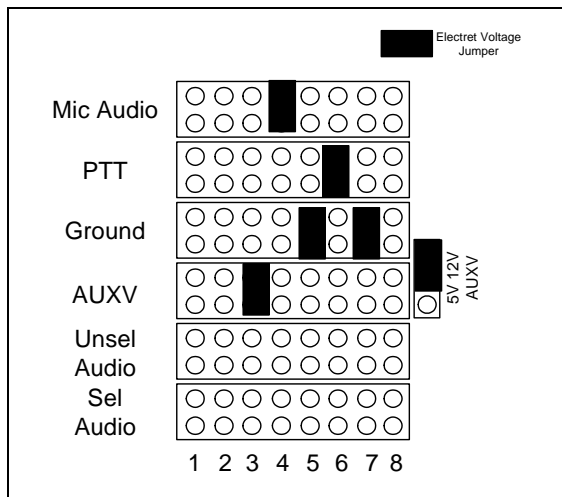

After all shunts are installed refer to the NCS-C250 Instruction Manual and set the mic audio level for proper audio output.

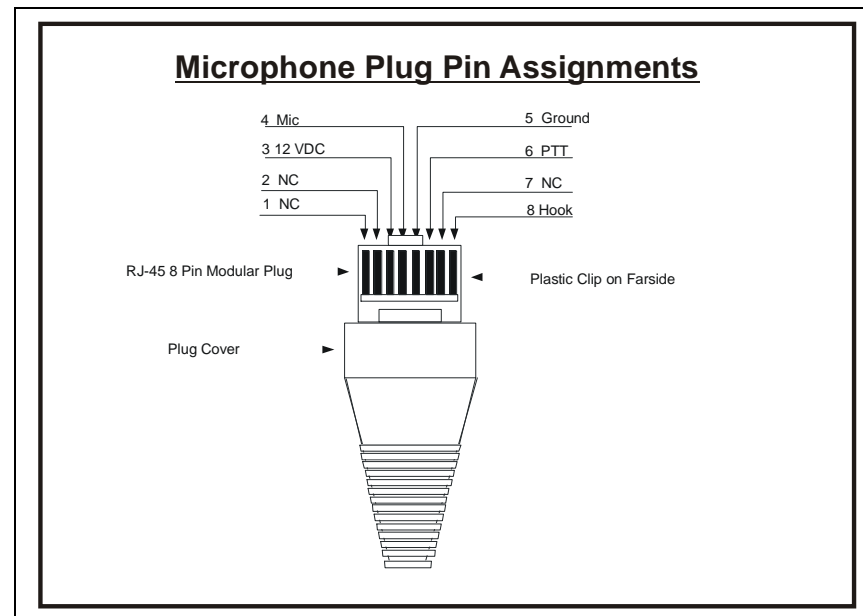

**Operation**

1. The **Monitor** switch is not functional when using the NCS-E411 Desk Mic with the NCS-C250.
2. The **Monitor** switch must be pressed before the **Transmit** switch can be engaged. Rather than continuously hold the **Monitor** switch you can slide the **Lock** switch forward to lock the **Monitor** switch ON.
3. Press the **Transmit** switch.
4. Speak into the microphone in your normal speaking voice.