

GREASE FRONT BEARINGS

AS OF THE 2019 MODELS ALMOST ALL THE FRONT BEARINGS ON EVERY ROASTER BRAND WE SELL USES OPEN BEARINGS THAT ARE REQUIRED TO BE GREASED EVERY 1.5-2 MONTHS OR EVERY 150 HOURS OF USE (WHICH EVER COMES FIRST).

THIS CAN BE DONE WHEN ALSO GREASING THE BACK BEARINGS ON VIRTUALLY ALL OUR ROASTERS EXCEPT A COUPLE OF THE VERY SMALL MODELS THAT HAVE SEALED BEARINGS ON BACK (BC-1 & BC-2 AS OF 2020 MODELS & EARLIER)

LISTED BELOW ARE PICTURES OF THE VARIOUS MODELS AND HOW TO REMOVE AND PACK FRONT BEARING WITH GREASE:

BC ROASTERS:

TOP VIEW: USING A HEX KEY TO REMOVE BC COVER



ONCE COVER IS REMOVED YOU MAY WANT TO CLEAN OLD GREASE



NEXT PACK BEARING WITH FRESH GREASE & REPLACE WITH COVER




SEDONA ELITE ROASTERS:

SEDONA: USING A HEX KEY TO REMOVE COVER



EXAMINE & CLEAN BEARING*IF NEEDED REMOVE AND CLEAN BEARING

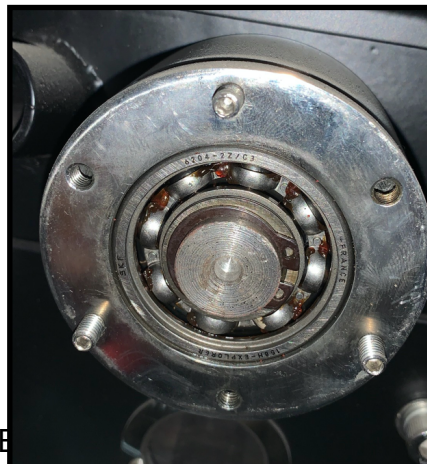

REPACK WITH FRESH HIGH TEMP FOOD GRADE GREASE & PUT COVER BACK ON



GREASE FRONT BEARINGS

PHOENIX FRONT BEARING:

PHOENIX (ORO): USING A
HEX KEY TO REMOVE COVER



IF NEEDED REMOVE & CLEAN
BEARING IN SOLVENT &
REINSTALL* (*TO REMOVE SEE PDF
ON REPLACING FRONT BEARING)



WHAT TYPE OF GREASE DO I NEED?

Grease Gun User Manual



ALL ROASTERS SHOULD USE HIGH TEMPERATURE
FOOD GRADE GREASE TO LUBE YOUR FRONT &
BACK STEEL BEARINGS
(Don't Lube Ceramic models)

BUY A 3 WAY LOADING GREASE GUN
CLICK ON PICTURE TO BUY!



Click on image to buy grease

PACK BEARING WITH
GREASE & PUT COVER
BACK ON.

**FOR ALL TYPE
ROASTERS USE HIGH
TEMPERATURE
BEARING GREASE
WE RECOMMEND SUPER
LUBE FOOD GRADE
HIGH TEMPERATURE
GREASE**

**ALSO BE SURE TO
BUY & USE A GOOD
GREASE GUN.
SEE OUR WEBPAGE
FOR AN EXAMPLE OF
TOOLS:**

**[HTTP://
WWW.BUCKEYECOFFEE.
COM/BEANS--BAGS---
TOOLS-.HTML](http://www.buckeyecoffee.com/beans--bags---tools-.html)**

BUCKEYE COFFEE TECH DEPARTMENT: TECH@BUCKEYECOFFEE.COM