



Operating Instructions for Popcorn Machine

- 1. Turn kettle heat and kettle motor switch “ON”**
 - 2. Make a test pop by putting 3corn kernels and 1oz of oil in kettle**
 - 3. When the test kernels have popped, load kettle with corn kernels (6 oz.) and oil (1.6 to 2 oz.)**
 - 4. When corn is fully popped, dump kettle**
 - 5. Repeat cycle starting with a full load (see #3)**
 - 6. For the best popcorn, always make 3-5 batches**
 - 7. Be sure to switch on the light and warmer to keep popcorn warm**
-
- All unused popcorn must be disposed of before pick-up**
 - All equipment is tested before delivery but should be rechecked at least 6 hours prior to use in case of malfunction**
 - Equipment must be kept dry and away from moisture**
 - When using multiple pieces of electrical equipment, do not overload the circuit, this may cause the equipment to fail**