 


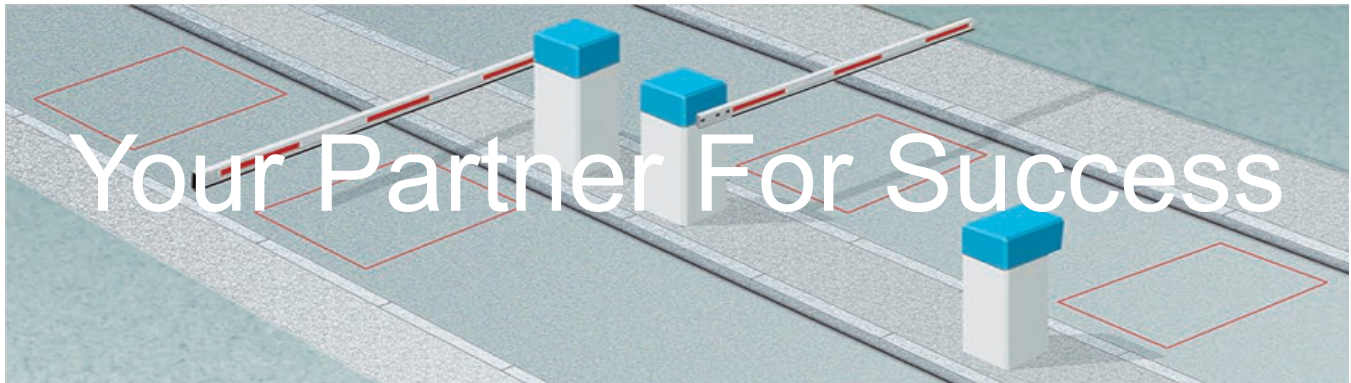

Q-SAQ, LLC. Quality & Service



 
Easy control

Features:


- Remote access to every gate
- TCP/IP or RS485 interface
- Settings download
- Settings upload
- PC Software application
- Every gate setting is adjustable via EasyControl application
- Easy setup of gates by using stored configuration
- Reads loop frequency
- Provides detailed setting reports
- Online help

Settings:

- Loop functions separately for all three loops
- Loop sensitivity
- Directional logic
- Relay functions (6 multifunctional relays)
- Signal light functions
- Gate mode settings
- Hold time settings
- Remote Receiver/Transmitter setup

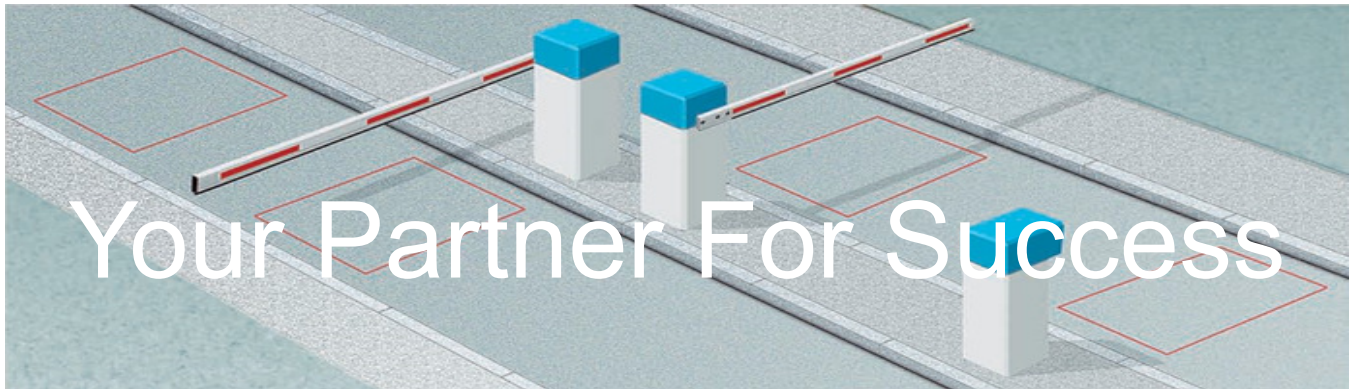

Loop Setup Setup

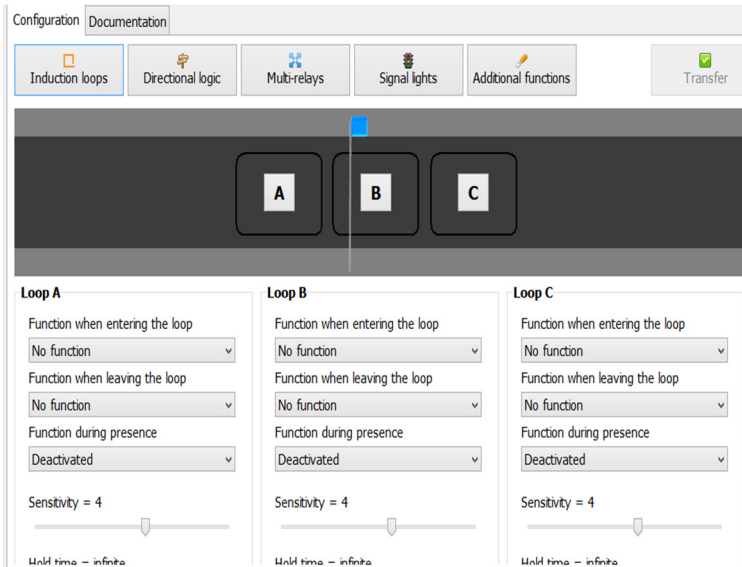

Configuration | Documentation

Induction loops | Directional logic | Multi-relays | Signal lights | Additional functions | Transfer

Loop A

- Function when entering the loop: No function
- Function when leaving the loop: No function
- Function during presence: Deactivated
- Sensitivity = 4
- Hold time = infinite


Loop B

- Function when entering the loop: No function
- Function when leaving the loop: No function
- Function during presence: Deactivated
- Sensitivity = 4
- Hold time = infinite

Loop C

- Function when entering the loop: No function
- Function when leaving the loop: No function
- Function during presence: Deactivated
- Sensitivity = 4
- Hold time = infinite

Directional Logic Setup

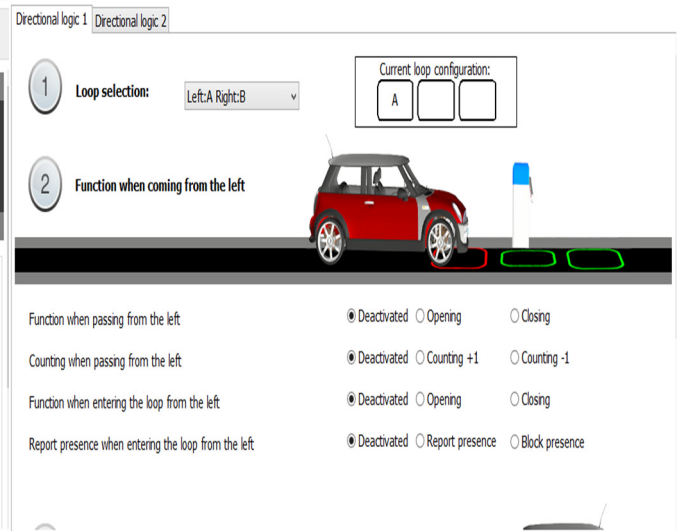

Directional logic 1 | Directional logic 2

1 Loop selection: Left:A Right:B

2 Function when coming from the left


Function when passing from the left: Deactivated Opening Closing

Counting when passing from the left: Deactivated Counting +1 Counting -1

Function when entering the loop from the left: Deactivated Opening Closing

Report presence when entering the loop from the left: Deactivated Report presence Block presence

Relay Setup Page

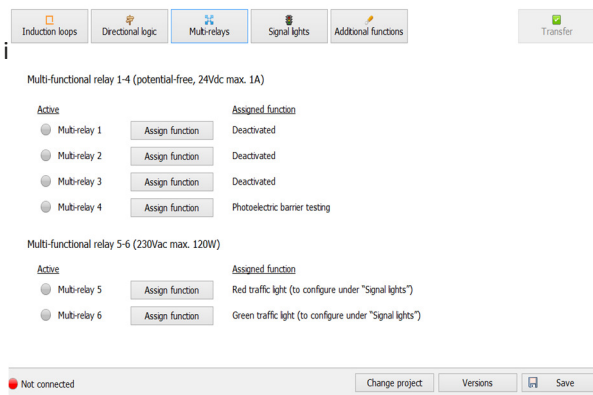

Induction loops | Directional logic | Multi-relays | Signal lights | Additional functions | Transfer

Multi-functional relay 1-4 (potential-free, 24Vdc max. 1A)


- Active: Multi-relay 1, Multi-relay 2, Multi-relay 3, Multi-relay 4
- Assigned function: Deactivated, Deactivated, Deactivated, Photoelectric barrier testing

Multi-functional relay 5-6 (230Vac max. 120W)

- Active: Multi-relay 5, Multi-relay 6
- Assigned function: Red traffic light (to configure under "Signal lights"), Green traffic light (to configure under "Signal lights")

Not connected | Change project | Versions | Save

Signal Lights Setting

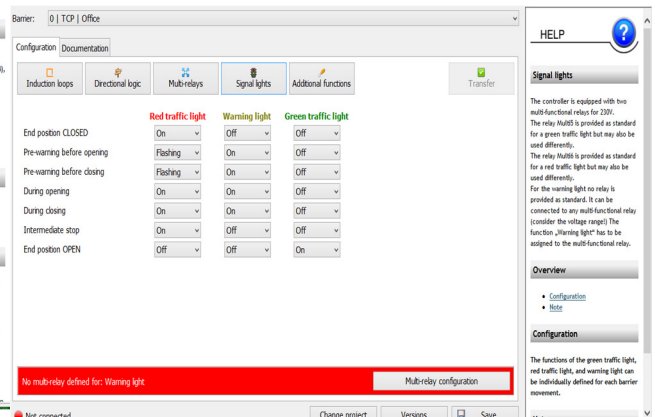

Barrier: 0 | TCP | Office

Configuration | Documentation

Induction loops | Directional logic | Multi-relays | Signal lights | Additional functions | Transfer

	Red traffic light	Warning light	Green traffic light
End position CLOSED	On	Off	Off
Pre-warning before opening	Flashing	On	Off
Pre-warning before closing	Flashing	On	Off
During opening	On	On	Off
During closing	On	On	Off
Intermediate stop	On	Off	Off
End position OPEN	Off	Off	On

Multi-relay defined for: Warning light | Multi-relay configuration

Not connected | Change project | Versions | Save

Signal lights

The controller is equipped with two multi-functional relays for 230V. The relay Multi5 is provided as standard for a green traffic light but may also be used differently. The relay Multi6 is provided as standard for a red traffic light but may also be used differently. For the warning light no relay is provided as standard. It can be connected to any multi-functional relay (consider the voltage range!) The function "Warning light" has to be assigned to the multi-functional relay.

Overview

- Configuration
- Note

Configuration

The functions of the green traffic light, red traffic light, and warning light can be individually defined for each barrier movement.

Note