



## Schedule 1 - Truck, Tractor & Trailer

	<b>Systems and Components</b>	<b>Minor Defect(s)</b>	<b>Major Defect(s)</b>
1	<b>Air Brake System</b>	Audible air leak Slow air pressure build-up rate	Pushrod stroke of any brake exceeds the adjustment limit. Air loss rate exceeds prescribed limit Inoperative towing vehicle (tractor) protection system. Low air warning system fails or system is activated. Inoperative service, parking or emergency brake.
2	<b>Cab</b>	Occupant compartment door fails to open.	Any cab or sleeper door fails to close securely.
3	<b>Cargo Securement</b>	Insecure or improper load covering (ie: wrong type or flapping in the wind)	Absence, failure, malfunction or deterioration of required cargo securement device or load covering. Insecure cargo.
4	<b>Coupling Devices</b>	Coupler or mounting has loose or missing fastener.	Coupler is insecure or movement exceeds prescribed limit. Coupling or locking mechanism is damaged or fails to lock. Defective, incorrect or missing safety chain/cable.
5	<b>Dangerous Goods</b>		Dangerous goods requirements not met.
6	<b>Driver Controls</b>	Accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly.	
7	<b>Driver Seat</b>	Seat is damaged or fails to remain in set position.	Seatbelt or tether belt is insecure, missing or malfunctions.
8	<b>Electric Brake System</b>	Loose or insecure wiring or electrical connection.	Inoperative breakaway device. Inoperative brake.
9	<b>Emergency Equipment &amp; Safety Devices</b>	Emergency equipment is missing, damaged or defective.	
10	<b>Exhaust System</b>	Exhaust leak.	Leak that causes exhaust gas to enter the occupant compartment.
11	<b>Frame and Cargo Body</b>	Damaged frame or cargo body.	Visibly shifted, cracked, collapsing or sagging frame member(s).
12	<b>Fuel System</b>	Missing fuel tank cap	Insecure fuel tank. Dripping fuel leak.
13	<b>General</b>		Serious damage or deterioration that is noticeable and may affect the vehicle's safe operation.
14	<b>Glass and Mirrors</b>	Required mirror or window glass fails to provide the required view to the driver as a result of being cracked, broken, damaged, missing or maladjusted. Required mirror or glass has broken or damaged attachments onto vehicle body.	
15	<b>Heater/Defroster</b>	Control or system failure.	Defroster fails to provide unobstructed view through the windshield.
16	<b>Horn</b>	Vehicle has no operative horn.	
17	<b>Hydraulic Brake System</b>	Brake fluid level is below indicated minimum level.	Parking brake is inoperative. Brake boost or power assist is inoperative. Brake fluid leak. Brake pedal fade or insufficient brake pedal reserve. Activated (other than ABS) warning device. Brake fluid reservoir is less than 1/4 full.
18	<b>Lamps and Reflectors</b>	Required lamp does not function as intended. Required reflector is missing or partially missing.	<i>When lamps are required:</i> Failure of both low-beam headlamps Failure of both rearmost tail lamps. <i>At all times:</i> Failure of a rearmost turn-indicator lamp. Failure of both rearmost brake lamps.
19	<b>Steering</b>	Steering wheel lash (free-play) is greater than normal.	Steering wheel is insecure, or does not respond normally. Steering wheel lash (free-play) exceeds required limit.
20	<b>Suspension System</b>	Air leak in the air suspension system.  Broken spring leaf.  Suspension fastener is loose, missing or broken.	Damaged* or deflated air bag. Cracked or broken main spring leaf or more than one broken spring leaf in any spring assembly. Part of spring leaf or suspension is missing, shifted out of place or in contact with another vehicle component. Loose U-bolt. *patched, cut, bruised, cracked to braid, mounted insecurely.
21	<b>Tires</b>	Damaged tread or sidewall of tire. Tire leaking (if leak can be felt or heard, tire is to be treated as a flat.	Flat tire. Tire is in contact with another tire or any vehicle component other than mud-flap. Tire tread depth is less than wear limit. Tire is marked "Not for highway use". Tire has exposed cords in the tread or outer side wall area.
22	<b>Wheels, Hubs and Fasteners</b>	Hub oil below minimum level. (When fitted with sight glass). Leaking wheel seal.	Damaged, cracked or broken wheel, rim or attaching part. Wheel has loose, missing or ineffective fastener. Evidence of imminent wheel, hub or bearing failure.
23	<b>Windshield Wiper/Washer</b>	Control or system malfunction. Wiper blade damaged, missing or fails to adequately clear driver's field of vision.	<i>When necessary for prevailing weather condition:</i> Wiper or washer fails to adequately clear driver's field of vision in an area swept by driver's side wiper.

DO NOT OPERATE OR PULL ANY EQUIPMENT THAT HAS A MAJOR DEFECT. CONTACT JASON IMMEDIATELY AT 780-674-7916