 


# XE99 Adjustable

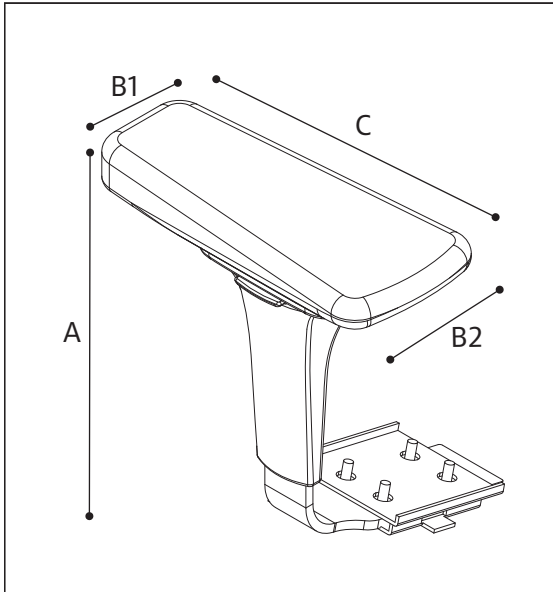 


## Description

Adjustable in width and in height, with black visco foam pads adjustable in width and depth.

## Overall dimensions

	A	B1	B2	C
Inches	10 <sup>1/2</sup>	3	4	10
Cm	26,7	7,6	10	25,4

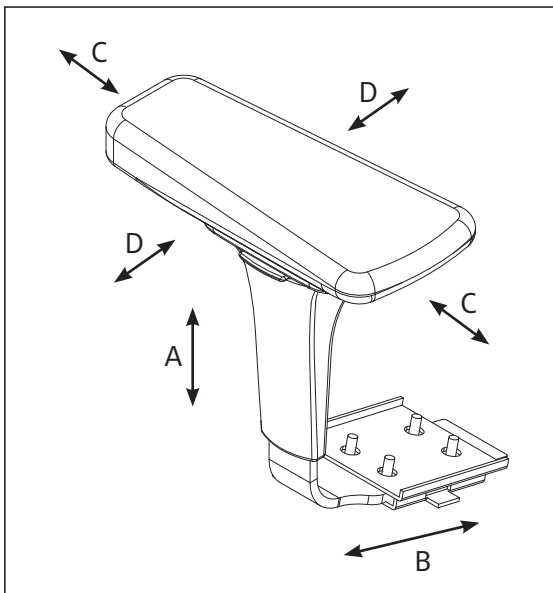

## Adjustments

	A Height adjustment	B Width adjustment	C Forward adjustment	D Lateral adjustment
Inches	2 <sup>1/2</sup>	2	2 <sup>1/4</sup>	1 <sup>1/4</sup>
Cm	6,4	5	5,7	3,1

### Armrest height adjustment

Hold the button on the vertical part of the armrest structure in the up position to increase or decrease the height, until the desired position is reached. Make sure both armrests are at the same height.

### Armrest width adjustment

Unlock the locking system by pivoting the lever on the armrest structure under the seat towards the inside of the chair. To increase or decrease the width, pull or push the armrest structure to the desired position. Lock the locking system by returning the lever to its initial position (towards the outside of the chair).

### Armrest pad positioning and angle adjustment

Push or pull the armrest pads in a forward-backward or left-right direction to the desired position.

## Compatibility

Arista	Fira	Fusion	Neos	Quatra	Sity
Vittoria	Zome	Kadera			

