


CLEANING THE AIR FILTERS ON FESTO AIR FILTERS & REGULATORS

The air intake module fitting to RTL series machines has 2 inline filters a pre filter of 40 micron and a secondary filter of 5 micron.

Diagram of parts:

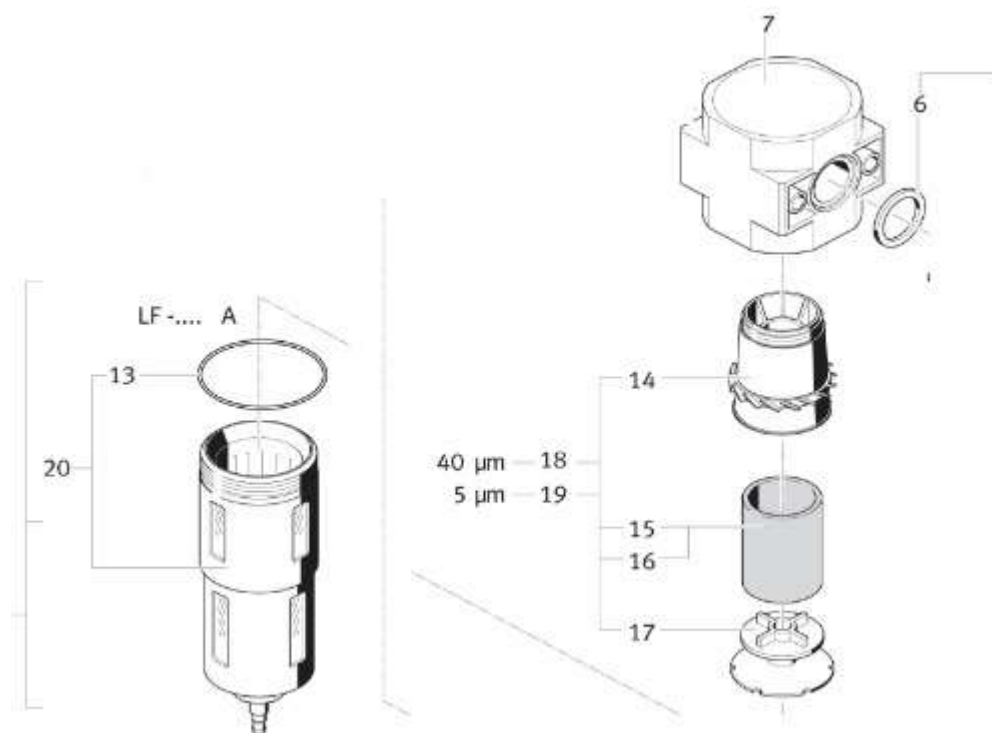

To clean these filters follow these steps.

1. Turn off the incoming air
2. Using a 7/8" hex wrench unscrew the air bowl (20)
3. Using your fingers unscrew retainer cap (17)
4. This will drop down exposing the filter element (15-16)
5. If possible clean the filter. (Avoid using harsh chemicals)
6. If the filter is too clogged, replace the filter (Part #739609 or 739610) 5m or 40m
7. Reassemble by placing new or cleaned filter and screwing in the retainer cap(17)
8. Carefully replace the filter bowl with the automatic drain, ensure the O ring is in place before tightening bowl cover.