


3. Features


1. Decode: When password been forgotten, you can get the decode number by providing the code on the lock body to the distributor or you can use USB-KEY to decode. The password will be changed back to the default
Management password: 4321
user password: 1234
2. Introduced with Anti-Theft Technology and Fake PIN password Function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits
3. Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60 seconds.
4. Automatic power shortage prompts (When lock show this signal ). The lock cannot be operated when the voltage is very low
5. Equipped with 2 AAA batteries, last password will not be lost after changing the battery.

4. Treatment of some common problems.

Problem	Primary cause	Way to solve the problem
When input the password, alarm twice di..di.. Mean while   twinkle one time	Too low voltage	Replace batteries
When input the password, alarm di..di.. meanwhile signal  is on, lock cannot be opened	Knob is not in the right position	Turn knob in the right position
Touch button without sound, lock can be opened	Buzzer broken	Change buzzer

Work Manual

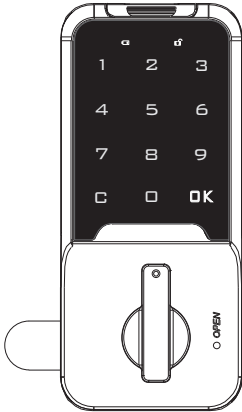

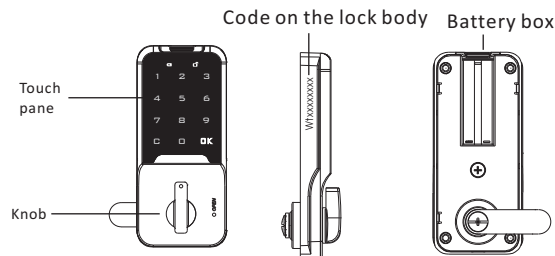

 Low voltage indicator light

 Unlocking Indicator light

How to operate

■ Lock & unlock

Unlock

1. Input factory default password “1234+OK”
Or input factory default management password “4321+OK”



2. Buzzer gives out a long di.... Sound
3. When the green indicator light  is on
4. Rotate the knob 90 degree within 3 seconds to open the lock

When password is wrong alarming sound di.. di.. Di.. 3 times.

When lock shows this signal  means low voltage
Note: when input management password to unlock, user password will be changed back to default 1234



Lock

Rotate back the knob 90 degree to lock position



■ Setting

1- Change password

1. Input current password “1234+OK” or management password “4321+OK”
buzzer gives out a long di sound
the unlocking indicator light  will twinkle quickly.
2. Input new password, press OK, when you heard a long di sound means password already been changed.



Password can be consisted of 4-15 digits, management password and user password can not be the same password

2- Turn on public mode, set temporary password

Turn on public mode

1. Input current management password + OK, buzzer gives out a long di.... Sound, Unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle
3. Input “4 4”, press OK, when you heard a long di.... sound means public mode already been set.



Set temporary password

1. Press OK. Unlocking indicator light  will twinkle
 2. Input the new password consisted of 4-15 digits
 3. Press OK, hear a long di, unlocking indicator light  is on
Temporary password already been set
- Note:  flash one time every 3 seconds means the lock has already been taken

Temporary password can be used for 1 time only

3- Turn off public mode

1. Input current management password + OK, buzzer gives out a long di sound, unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle
3. Input 4 3, press OK, when you heard a long di.... Sound, means public mode already been turned off.



4- Turn on/off Fake Pin code function

1. Input current management password + OK, buzzer gives out a long di sound, unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle
3. Input 4 2, press OK, when you heard a long di sound means Fake Pin code mode already been turned on.
Input 4 1, press OK, when you heard a long di sound means Fake Pin code mode already been turned off.



Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.