

Owner's Manual



WARNING

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer, and DEHP, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to

www.P65Warnings.ca.gov

SMALL DRAWER SAFE with Electronic Lock

44E10

V-2021-01

HERITAGE SECURITY PRODUCTS

HERITAGE SECURITY PRODUCTS

1212 S Naper Blvd Ste 119 #163 Naperville IL 60540-7349 PH: 888-577-9823

IMPORTANT NOTICES

- 1. Do not leave safe unattended while open.
- 2. Keep Children Away from safe.
- 3. Keep your safe locked and closed at all times when not in use.
- 4. Place your safe in a cool and dry location.
- 5. Remember to record the serial number of your safe from the tag on the back of your safe. You will need this serial number for all warranty or customer service inquiries.
- 6. Electronic media, photographic media and all audio-visual media should not be stored in the safe for fire protection.

PRODUCT DIAGRAM

Photo of inside of safe



Photo of outside of safe





- 1. Locking Bolts
- 2. Reset Button
- 3. Battery Compartment
- 4. Knob
- 5. Override Key Cover
- Yellow Indicator Light
 Red Indicator Light
 Green Indicator Light
 Override keys



Safe must be secured as detailed in these instructions. Failure to secure the safe can result in death or serious injury.



OPENING THE SAFE FOR THE FIRST TIME



- 1. Push " 🖑 " button to open the override key cover.
- 2. Insert the override key into the keyhole and turn counterclockwise. At the same time, turn the knob (master key) clockwise to open the door.

WARNING: Do not store your override keys inside the safe.

BATTERY INSTALLATION AND REPLACEMENT



- 1. Open the battery compartment cover, carefully insert 4 AA batteries into the battery compartment. Follow the positive (+) and negative (-) guides in the compartment.
- 2. Snap the battery cover back into place.

NOTE:

Green light flashing indicates the operation is correct and successful. During the use of safe, Red light flashing indicates low battery.

PROGRAMMING YOUR PASSCODE



- 1. Press the reset button and then release it. There will be 2 audible beeps and the yellow light will flash.
- Enter your passcode (must be 3-8 digits). And press the "*" or "#".
 There will be another 2 audible beeps and the indicator light turns off.
 This means your passcode has successfully been entered.
- 3. If you forget your code, you can use your override keys at any time to open your safe and reset the code.

UNLOCKING THE SAFE



- 1. Input your new passcode (3-8 digits).
- 2. Press "*" or "#" to confirm, the green light flashes and turn the knob clockwise. Lift the handle to open the safe.
- 3. If yellow indicator light flashes with audible 3 beeps, your passcode was not entered correctly, please input your passcode again.

NOTE:

If 3 invalid passcode attempts are made in succession, this will cause the keypad to beep for 20 seconds and lock the user out for 20 seconds. You can still use your override key at any time to open the safe.



LOCKING THE SAFE



To lock your safe, simply close the door and turn the knob counterclockwise.

SECURING THE SAFE

For optimal security, this safe must be mounted to the floor. Failure to do so will compromise the safety, security and warranty of the safe. Place your safe in a cool and dry location.

HARDWARE INCLUDED

(2) M6x15 mm (5/8"long) Screws(2) M6 Nylon Locked Nuts



TOOLS REQUIRED

Drill 3/8" Drill Bit 3/16" Drill Bit 10 mm Socket Wrench Flat Head Screwdriver

Installation may vary, please contact your local Hardware Professional for additional installation recommendations.

WARRANTY

LOCK AND PAINTED SURFACE WARRANTY

Locks and painted surfaces are warranted to be free from defects in workmanship and materials for a period of two years from the date of purchase.

Heritage Security Products takes seriously its obligation to stand behind its product with this warranty as long as the safe is properly installed and cared for as instructed in the Owner's Instruction Manual. The warranty does not apply to safes or parts that have been misused, neglected or subjected to unusual or extreme conditions and/or environments, or to unreasonable wear and tear. Changing or modifying the safe in ways that affect its intended use will void this warranty. The safe must be registered within 60 days of the purchase and must be on file at the time of the incident. **Please go to www.Fortresssafe.com to register your product.**

Limitation of Remedies: In no case shall Heritage Security Products be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of savings or revenue, loss of the contents of the safe or vault door, loss of use of the safe or vault door, or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, downtime, the claims of third parties including customers, and injury to property.

Heritage Security Products provides this warranty in place of all other warranties and assurances whether expressed or implied. Heritage Security Products accepts no liability for incidental or consequential damage or loss by anyone as a result of using this safe.

This warranty is only applicable to the Safe itself and does not extend to the contents of the Safe. For optimal security and protection, safes should be bolted down. Please refer to your Instruction Sheet for details on anchoring your safe.



For all Customer Service needs, please contact us at:

1-888-577-9823 Fax: 1-585-486-1198 Email: cs@heritagesafe.com

KEY REPLACEMENT SERVICE

Upon Verification of ownership, replacement keys are available for purchase through customer service.

Contact Customer Service for more information.

Remember to record the serial number of your safe from the tag on the back of your safe. You will need this serial number for all warranty or customer service inquiries.

NO	ΓES
----	-----