

# Dyson Cleanerhead Maintenance

Tools Needed:

Scissors

Small Flathead Screwdriver

Small Phillips head Screwdriver #1

T10 Torx Driver

T15 Torx Driver

Extend the life of your cleaner head by performing the following maintenance.

1. Flip vacuum over to access the red clip that holds the cleanerhead on the vacuum.




2. Use flat head screwdriver to gently pry red clip up and off completely.



3. Pull cleaner head toward front of vacuum to remove.



4. Turn plastic clips a quarter turn CCW to remove bottom roller brush cover.

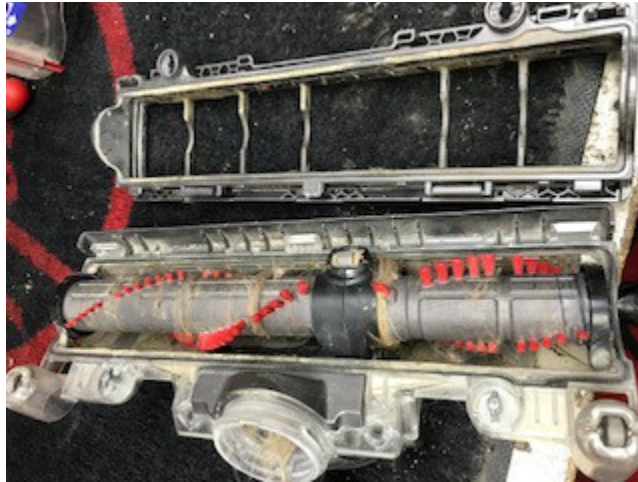

5. Use Phillips #1 to remove four screws holding roller brushes.



6. Pull one roller out of gear box.



7. Use scissors to cut and pull hair that may have accumulated around roller brush.
8. Use T10 Torx driver to remove screw holding plastic gear while holding the opposite roller brush with your hand.



9. Remove the hair and debris that may have accumulated there.



10. Reinstall plastic gear piece and tighten T10 screw while holding the opposite roller brush with your hand.

11. Use T15 Torx driver to remove screw from the end of roller brush.



12. Pull off end cap and remove the hair and debris that may have accumulated there.



13. Reinstall end of roller brush and put it back onto clean gear.

14. Use phillips head #1 screwdriver to tighten two screws to secure clean roller brush.

15. Go back to step 6 and repeat procedure for the other roller.

16. Put bottom cover back on cleaner head and turn two plastic clips a quarter turn CW.

17. Push cleaner head onto vacuum and secure with red clip.