

## How to Replace an IGNITOR in BC Roasters

BC-7, 14 & 24 Ignitor can be found by opening side panel:



Ignitor is attached to side in most roasters on bottom of smaller BC-1 thru 5



In most cases these are attached by two bolts or screws. Remove screws, disconnect brown ground wire. Disconnect the wire harness. Two wire go into burner room and attach to ignitor needle

Here is an igniter needle



## How to Replace an IGNITOR in BC Roasters

BROWN GROUND WIRE



Remove old wires from Needle



Remove old igniter and replace with new ignitor by reattaching all parts exactly as original model was setup

**SPECIAL TIP:** Take a picture or several pictures before starting project so in case you forget something you can refer to pictures to be able to reassemble exactly as before