

# CAUTION



Safety glasses required


## REVISION HISTORY

REV	DATE
B	9/26/2019



# Dethatcher Plate Installation Instructions

NOTE: A pair of safety glasses are included in the box

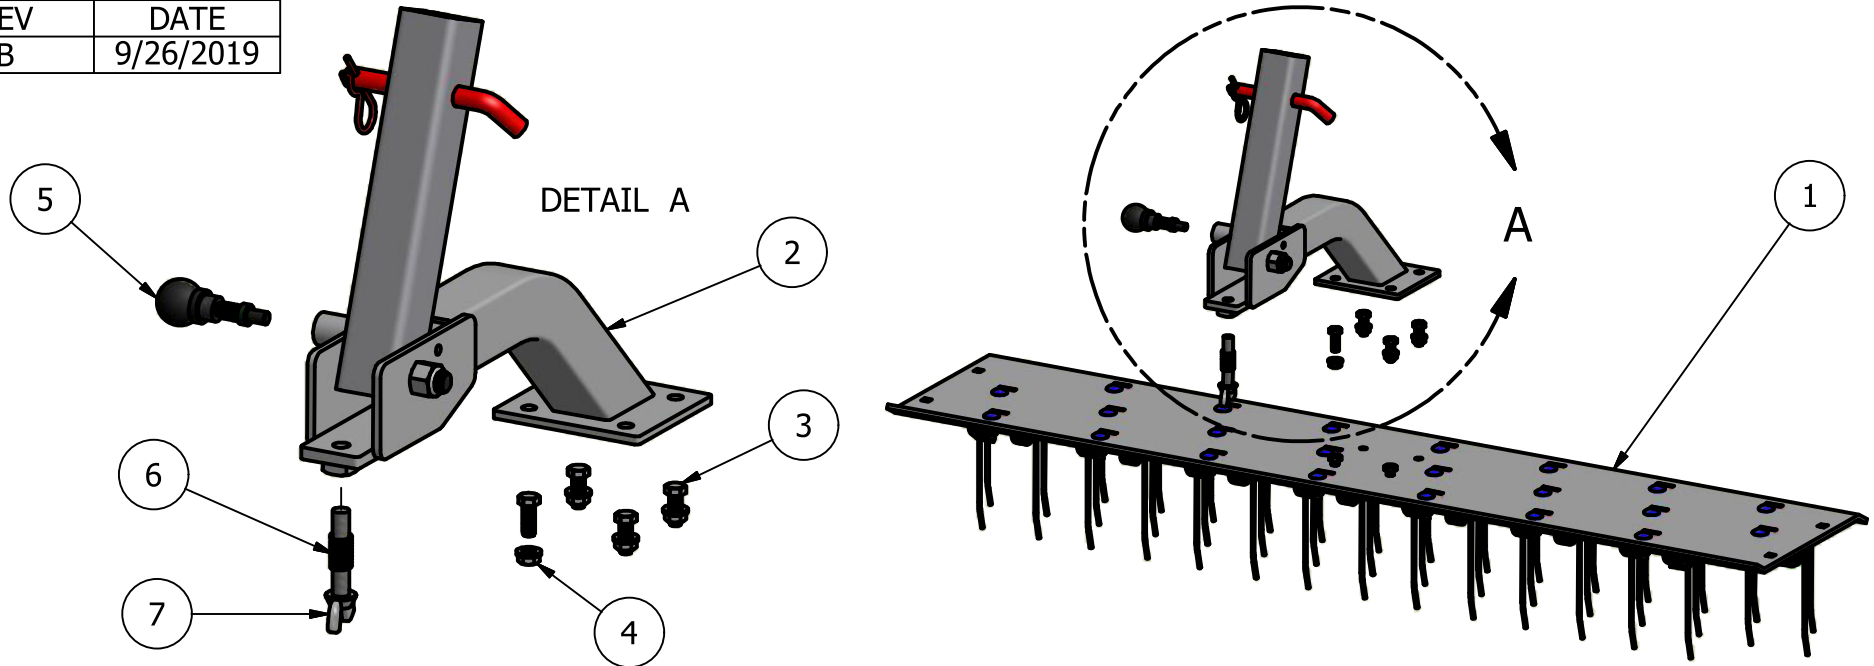

- 1 - Attach the Dethatcher Arm Assembly (Item 2) to the Dethatcher Plate (Item 1) using the bolts and nuts (Item 3 & 4) provided in the box.
- 2 - Screw in the PoP Pin W/ Lockout Position (Item 5) to the Dethatcher Arm Assembly (Item 2).
- 3 - Insert the Wing Bolt Spring (Item 6) on the Wing Bolt (Item 7).
- 4 - Screw in the Wing Bolt with the spring onto the Dethatcher Arm Assembly.
- 5 - Turn Wing Bolt to adjust rake to proper height, clockwise to raise and counter clockwise to lower (\*Note\* Spring Tines should engage and disengage when properly adjusted).

**\*DO NOT TIGHTEN THE HEX BOLT THAT IS ON THE BOTTOM OF THE D'TTACH HITCH WHEN USING THE DETHATCHER RAKE. RAKE NEEDS TO BE ABLE TO PIVOT FOR BEST PERFORMANCE.**

J.C.B

## Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	DTP134	34" Dethatcher Plate
1.2	1	DTP140	40" Dethatcher Plate
1.3	1	DTP146	46" Dethatcher Plate
1.4	1	DTP152	52" Dethatcher Plate
2	1	69860013	Dethatcher Arm Assembly
3	4	20210000	3/8-16 X 1" Bolt
4	4	69730014	3/8-16 Flange Nut
5	1	69860003	PoP Pin W/ Lockout Position
6	1	69860005	Wing Bolt Spring
7	1	69860006	Wing Bolt